


GENERAC®

POWER SYSTEMS, INC.

Operator's Manual

"E" Option Control Panels

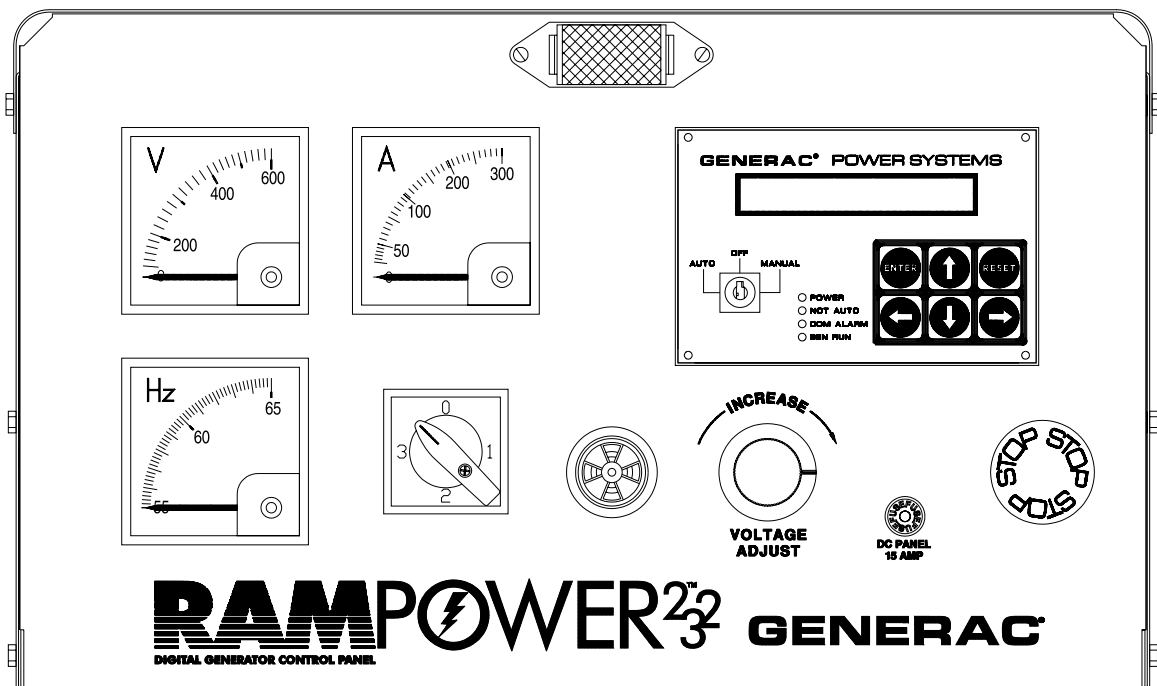



Important Safety Instructions

E Option Control Panels

⚠ SAVE THESE INSTRUCTIONS – The manufacturer suggests that these rules for safe operation be copied and posted in potential hazard areas. Safety should be stressed to all operators and potential operators of this equipment. ⚠

Study these SAFETY RULES carefully before installing, operating or servicing this equipment. Become familiar with this manual and all literature pertaining to your generator set and related equipment. This equipment can operate safely, efficiently and reliably only if it is properly installed, operated and maintained. Many accidents are caused by failing to follow simple and fundamental rules or precautions.

Generac cannot possibly anticipate every possible circumstance that might involve a hazard. The warnings in this manual, and on tags and decals affixed to your equipment are, therefore, not all-inclusive. If you use a procedure, work method or operating technique Generac does not specifically recommend, you must satisfy yourself that it is safe for you and others. You also must make sure the procedure, work method or operating technique that you choose does not render the equipment unsafe.

⚠ GENERAL HAZARDS ⚠

- For safety reasons, Generac recommends that this equipment be installed and serviced by a Generac Authorized Service Dealer or other competent, qualified electrician or installation technician who is familiar with applicable codes, standards and regulations. The operator also must comply with all such codes, standards and regulations.
- When working on this equipment, remain alert at all times. Never work on the equipment when you are physically or mentally fatigued.
- Inspect the equipment regularly, and promptly repair or replace all worn, damaged or defective parts using only factory-approved parts.
- Before performing any maintenance on the generator or any related equipment, disable the generator to prevent accidental start-up. Remove the control panel fuse and then disconnect the battery cables by removing the one indicated by a NEGATIVE, NEG or (–) first. To re-enable the generator, reconnect the battery cables connecting the one indicated by a NEGATIVE, NEG or (–) last, then re-install the control panel fuse.
- Do not handle any kind of electrical device while standing in water, while barefoot, or while hands or feet are wet. DANGEROUS ELECTRICAL SHOCK MAY RESULT.
- If people must stand on metal or concrete while installing, operating, servicing, adjusting or repairing this equipment, place insulative mats over a dry wooden platform. Work on the equipment only while standing on such insulative mats.
- Wire gauge sizes of electrical wiring, cables and cord sets must be adequate to handle the maximum electrical current (ampacity) to which they will be subjected.
- Before installing or servicing this equipment, make sure that all power voltage supplies are positively TURNED OFF at their source. Failure to do so will result in hazardous and possibly fatal electrical shock.
- When installed with an automatic transfer switch, the generator may crank and start anytime without warning. To prevent injuries caused by sudden start-up, disable the generator's automatic start circuit before working on or around the unit. Then, place a "Do Not Operate" tag on the generator control panel and on the transfer switch.
- In case of accident caused by electric shock, immediately shut down the source of electrical power. If this is not possible, attempt to free the victim from the live conductor. AVOID DIRECT CONTACT WITH THE VICTIM. Use a nonconducting implement, such as a rope or board, to free the victim from the live conductor. If the victim is unconscious, apply first aid and get immediate medical help.
- Never wear jewelry when working on this equipment. Jewelry can conduct electricity resulting in electric shock, or may get caught in moving components causing injury.

⚠ FIRE HAZARDS ⚠

- For fire safety, the generator and related equipment must be installed and maintained properly. Installation always must comply with applicable codes, standards, laws and regulations. Adhere strictly to local, state and national electrical and building codes. Comply with regulations the Occupational Safety and Health Administration (OSHA) has established. Also, ensure that the equipment is installed in accordance with the manufacturer's instructions and recommendations. Following proper installation, do nothing that might alter a safe installation and render the unit in noncompliance with the aforementioned codes, standards, laws and regulations.

⚠ ELECTRICAL HAZARDS ⚠

- Generators produce dangerous electrical voltages and can cause fatal electrical shock. Avoid contact with bare wires, terminals, connections, etc., while the generator and related equipment are running. Ensure all appropriate covers, guards and barriers are in place before operating the equipment. If you must work around an operating unit, stand on an insulated, dry surface to reduce shock hazard.

Safety Rules.....Inside Front Cover

Section 1 — General Information2

OVERVIEW2

ENGINE CONTROL2

E OPTION CONTROL MODULE2

 Overview2

 Keypad3

 Display3

 – Software Version Page3

 – Generator Command Page3

 – Generator Status Page3

 – Alarm Status Message Page3

 – Alarm Log Page4

 – Instrumentation Page4

 – Parameter Entry Page4

ALARMS4

ALARM PROCESSING5

 Input Alarm Functions5

 – Alarm Active5

 Alarm Type6

 – Status6

 – Warning – Non-Latched6

 – Alarm – Latched6

 – Shutdown6

 – Alarm Status6

 – Alarm Message6

 Other Alarms6

 – Overcrank6

 – Coolant Level6

PROGRAMMABLE PARAMETERS6

 Preheat Enabled6

 Preheat Time6

 Start Time6

 Pause Time7

 Start Attempts7

 Starter Disengage Speed7

 Hold Off Time7

 Cool-down Time7

 Load Accept Voltage and Frequency7

 Warm-up Time7

 Voltage Scaling Factor7

 Flywheel Teeth7

 User-defined Output Functions7

 Analog Input Scaling Factors7

 Analog Input Messages7

 Analog Input Alarm Messages8

 Analog Input Alarm Settings8

 Digital Input Alarm Settings8

 Oil Pressure Alarms8

 Oil Temperature Alarms8

 Coolant Temperature Alarms8

 Battery Voltage Alarms8

 Engine Speed Alarms8

 Generator Voltage Alarms8

 Generator Frequency Alarms8

 Fuel Level Alarms8

E PANEL MODEM SETUP PROCEDURE9

E PANEL RS 232 CABLES9

 Serial Communications9

 – Serial Communication Via Modem.....9

 – Remote Annunciator Panel.....9

 – Altering the Serial Communications Setup10

 User Password10

ADDITIONAL PANEL COMPONENTS10

 AC Voltmeter10

 AC Ammeter10

 Frequency Meter10

 Line-phase Selector Switch.....10

 Voltage Adjust Potentiometer11

 Alarm Horn11

 DC Panel Fuse.....11

 Emergency Stop Switch11

CHECKING/REPLACING THE E PANEL
CONTROL MODULE INTERNAL FUSE11

USER PROGRAMMABLE INPUTS11

WIRING EXAMPLES12

 User Programmable Input Number 112

 User Programmable Inputs Numbers 2 and 313

PROGRAMMING EXAMPLES13

 User Programmable Input Number 113

Section 2 — Glossary14

E CONTROL PANEL DEFINITIONS14

Section 3 — Operation15

OUTPUT FUNCTION TABLE15

E PANEL MASTER CONTROL BOX
CONFIGURATION SETTINGS.....16

 Standard Alarm Configuration Menu16

 Engine Configuration Menu16

 User Configuration Menu17

E PANEL DISPLAY MAP18

Section 4 — Electrical Data20

Section 5 — Troubleshooting37

Section 6 — Notes38


Section 7 — Exploded Views and Parts Lists ..40

AUTHORIZED SERVICE DEALER LOCATION

To locate the GENERAC AUTHORIZED SERVICE
DEALER nearest you, please call this number:

1-800-333-1322

 DEALER LOCATION INFORMATION
CAN BE OBTAINED AT THIS NUMBER.



OVERVIEW

The “E” option control panel is a programmable engine control and monitoring system. It allows the user to customize the generator starting and running sequence, monitor engine parameters and configure the alarms. This can be done either through its own control module, featuring liquid-crystal display (LCD) and keypad, or using a PC and RS232 serial communications. The module includes user programmable inputs and outputs that allow it to be tailored to a vast range of applications. All of the setup information is stored in nonvolatile (permanent) memory.

ENGINE CONTROL

The module has a three-position selector switch that selects between “Auto” mode, “Off” and “Manual” start mode. When the switch is in the OFF position, the generator will not start, and it will stop if it is running. When the switch is turned to MANUAL, the generator will start immediately and will continue to run until the switch is turned to the OFF position or a shutdown alarm is activated. With the switch in the AUTO position, the generator will wait for either the remote start contacts to close or for a start command to be sent from the serial link. The generator will run until the remote start contacts open, a stop command is sent down the serial link, a shutdown alarm is activated or the switch is turned to the OFF position. The remote start contacts always will have priority over the serial link commands so that the serial link cannot stop the generator if the remote start contacts are closed. When GenLink[®] software, which may be obtained from a Generac Authorized Service Dealer, is connected to the E panel via modem, the panel will monitor the connection to ensure that the line has not dropped. If the E panel detects that the line has been dropped, it will disconnect the modem so that it is ready for another incoming call. If the generator had been started via the modem connection, then it will be stopped immediately unless the remote start contacts are closed or the generator is in manual. However, if the GenLink[®] software disconnected cleanly (as a result of a user command) with the generator running, then the generator will continue to run for another three hours unless it receives a stop command.

When a start command is received, the engine preheat will be engaged, if it is selected. The user can program the preheat to engage for a programmable time before engaging the starter motor, to engage while the engine is attempting to start, or to do both. In order to protect the engine from trying to start while it is already running (if the rpm sensor is damaged), an alarm is generated if there is oil pressure when the start command is sent. An alarm also is generated if there is a voltage output from the generator but the rpm sensor detects zero engine speed.

The user can program the length of time that the starter motor is engaged during a start attempt. After the first attempt, the generator will pause for a programmable length of time before the next attempt. The number of attempts also is programmable, after which the failed to start alarm is activated.

The user can program a warm-up time that is active after the generator has started. This could be used in conjunction with a programmable relay output to inhibit the transfer switch from applying load until the generator is ready. The warm-up time can be set to zero if this function is not required. This timer is separate from the alarm hold off timer, which allows the generator to run for a time before certain alarms (such as low oil pressure) are active.

If the generator is in the AUTO mode and a stop command is received, a programmable cool-down timer can be used to keep the generator running with no load for a fixed time. This also can work in conjunction with a relay output to inhibit the transfer switch. If the timer is set to zero, this function is disabled. If the selector switch is turned to OFF, then the generator will stop immediately without waiting for the cool-down time.

Certain alarm functions are designated as shutdown alarms. These alarms will stop the generator and inhibit it from starting until the alarm condition has cleared and the alarm has been reset.

E OPTION CONTROL MODULE

◆ OVERVIEW

The LCD on the front of the module (Figure 1) features a 24-character by two-line display screen that will show one of seven pages. There is a keypad with six keys that are used for operating the display and selecting the various pages. A key-activated switch allows the user to select whether the generator is in the “Auto” mode, “Off” mode or “Manual” run mode. Four LEDs indicate the following conditions:

- “Power” – Battery power is OK.
- “Not Auto” – The generator is not in the automatic mode.
- “Com Alarm” – A common alarm condition has occurred.
- “Gen Run” – The generator is running.

NOTE:

The “Power” LED will go out immediately if the battery voltage dips below the alarm limit, but the alarm will not be triggered unless the voltage is low for more than five minutes.


 


Figure 1 – Control Module Layout

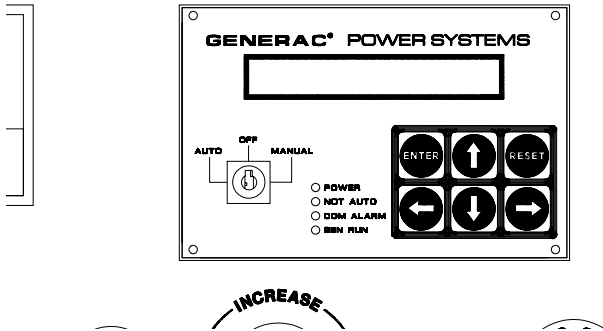

◆ KEYPAD

The keypad consists of six keys labeled as follows: ↑ (up), ↓ (down), ← (left), → (right), Enter, and Reset. The left and right arrow keys are used to select the different pages on the display. The up and down arrow keys are used to scroll between options within a page. They also are used for selecting characters when the user is entering messages or parameters for the alarms. The left and right arrow keys move the cursor when the user is entering data. The enter key takes the user into a page on the display to change data (when applicable) and also accepts data that has been entered. It also is used to accept an alarm. The reset key ignores data that has been entered and returns the original value. It also is used to return from the parameter entry mode once the user has finished changing the data, and to reset any latched alarms that have cleared.

◆ DISPLAY

The display is organized into a series of pages, each page displays information about the status of the generator. For example, the “Alarm Status Message Page” displays the highest priority current alarm or status condition. The user will be able to scroll between the pages using the left and right arrow keys. Certain actions also cause the display to change pages, e.g., when an alarm becomes active, the display automatically will go to the alarm status page and display the alarm message.

The back light for the display is normally off. If the user presses any key, the back light will come on automatically and remain on for five minutes after the last key was pressed. It also will come on if any status message is current, which means the display will switch to the alarm status page. The back light will flash when an alarm or shutdown message is active, and the audible alarm will sound.

When the display is showing certain pages, the user is able to scroll between relevant items within the page using the up and down arrow keys. For example, if the display is showing the “Alarm Log Page,” the user can use the up and down arrow keys to scroll between the entries on the alarm log. A description of each page is given below.

✧ Software Version Page

This page displays the software revision. Pressing the enter key in this page will perform a display and LED test.

✧ Generator Command Page

This page displays the command sent to the generator. The possible commands are as follows:

- Generator switched off
- Generator in manual mode
- Generator in auto mode – stop command
- Generator in auto mode – remote run command
- Generator in auto mode – serial link run command

✧ Generator Status Page

 
This page displays the current status of the generator. Options will be as follows:

- Stopped – ready to run
- Stopped – start inhibit active
- Pre-heating (with timer counting down)
- Attempting to start (with timer counting down and number of attempts)
- Pausing before start attempt (with timer counting down and number of attempts)
- Started – running up to speed
- Warming up
- Ready to accept load
- All alarms enabled
- Cooling down
- Stopping
- Stopped due to alarm

If the user has not pressed a key for some time, any change in status will cause this page to be displayed provided that there are no active alarms or status messages from other inputs. If an alarm condition occurs, the alarm status page will be displayed automatically.

✧ Alarm Status Message Page

This page displays alarm messages and programmable status messages. Messages are displayed according to priority, with the shutdown alarms having highest priority, and status messages having lowest priority.



If an alarm becomes active, the display will switch to this page and display the highest priority alarm message. The back light and alarm LED will flash, and the audible alarm will be activated. The user must press the enter key to accept the alarm, at which time the back light will be on continuously. If the alarm is non-latching, the alarm message will clear as soon as the condition is cleared. If the alarm is a latching alarm, then the user must press the reset key to clear the message. Once a message has cleared, the display will show the next priority alarm message.

After an alarm has been accepted, the user is able to scroll through other active alarm and message screens using the up and down arrow keys.

❖ Alarm Log Page

This page displays the last 50 alarm messages. When the user selects this page, it displays the latest alarm message. Pressing the up or down arrow keys will allow the user to scroll up and down the list of messages.

❖ Instrumentation Page

This page displays one of the analog signal values. Pressing the up or down arrow keys will scroll to other analog display screens.

❖ Parameter Entry Page

This page allows the user to modify the various set points and programmable options. See the “Programmable Parameters” section of this manual for more specific option information. The user must press the Enter key when this page is displayed and will then be prompted for a password. The password is a six-digit number and the default value is 000000. However, the user will be able to change the password. Digits will be selected using up and down arrow keys, and the cursor will be moved by the left and right arrow keys. When the user presses the Enter key, the password will be checked. If the password is correct, the display will show one of the data entry screens.

There are four parameter entry menus: “Engine Parameter,” “System Alarm,” “Digital I/O” and “Analog Input.” The user will be able to scroll through the various parameters in each menu using the up and down arrow keys. The left and right arrow keys are used to switch between the four menus. When a parameter that requires changing is displayed, the user presses the Enter key to enable data entry. A cursor will appear at the first character that can be altered. The user can then change the character using the up and down arrow keys. The user can move to the next character or previous character using the left and right arrow keys. Pressing the Enter key will accept the new setting. Pressing the Reset key will ignore the new setting.

If an alarm condition occurs when the user is entering data, the data will be ignored, and the display will show the alarm screen. If a status condition occurs when data is being entered, the display will not change.

Once the user has finished entering data by pressing the Enter key, pressing the Reset key will allow the user to select other pages using the left and right arrow keys.

ALARMS

All analog channels have alarms associated with them. There is also a coolant level alarm, an emergency stop alarm and eight user definable inputs that can be used to generate alarms. Alarms can be status messages, non-latching alarms, latching alarms or shutdown alarms. When a new alarm condition occurs, the alarm LED and the display back light will flash. Also, the alarm relay contacts will close (operating the audible alarm), and the display will show the alarm message. The user will be able to accept the alarm (turn off the audible alarm) from the keypad, and if the alarm condition has cleared, he or she also will be able to clear the alarm. Non-latching alarms will clear themselves if the alarm condition is no longer present. Latching alarms require the user to clear the alarm from the keypad even if the alarm condition is no longer present. Shutdown alarms are similar to latched alarms, but they also cause the generator to stop and will not allow it to start again until the key-switch has been turned to the OFF position to reset the alarm. Status messages are similar to non-latching alarms except that they do not activate the alarm relay or the alarm LED and are not recorded on the alarm log.

Alarms can be always active, immediately active when the generator is commanded to run, or active after the hold off timer has expired. This timer delays the operation of certain alarms until a programmable time after the engine has started. Some alarms allow the user to define the type of alarm and when it is active.

The following chart is a summary of the alarms and the programmable options:

Alarm Message	Alarm Active Options	Alarm Type Options
Pre-Low Oil Pressure Warning	Hold Off	Non-Latch
Low Oil Pressure Shutdown Alarm	Hold Off	Shutdown
Pre-High Coolant Temp. Warning	Hold Off	Non-Latch
High Coolant Temp. Shutdown Alarm	Hold Off	Shutdown
Low Coolant Temp. Warning	Always	Non-Latch
Pre-High Oil Temp. Warning	Immediate, Hold Off, Disabled	Non-Latch
High Oil Temp. Shutdown Alarm	Immediate, Hold Off, Disabled	Shutdown
Low Battery Voltage Warning*	Always	Non-Latch
Overspeed Alarm	Immediate	Shutdown
Underspeed	Hold Off	Non-Latch, Latch, or Shutdown Status
Overcrank Alarm	Immediate	Shutdown
Over Voltage	Hold Off	Non-Latch, Latch, or Shutdown Status
Under Voltage	Hold Off	Non-Latch, Latch, or Shutdown Status
Over Frequency	Hold Off	Non-Latch, Latch, or Shutdown Status
Under Frequency	Hold Off	Non-Latch, Latch, or Shutdown Status
High Fuel Warning	Always, Disabled	Non-Latch
Low Fuel Warning	Always, Disabled	Non-Latch
Low Fuel Shutdown Alarm	Always, Disabled	Shutdown
User Analog Alarms**	All Options Available	All Options Available
Low Coolant Level Alarm	Hold Off	Shutdown
Emergency Stop	Always	Shutdown
RPM Sensor Failure Alarm	Always	Shutdown
Start Inhibit – Oil Pressure	Immediate	Shutdown
Oil Pressure Sensor Failure	Always	Shutdown
Oil Temp. Sensor Failure	Always, Disabled	Shutdown
Coolant Temp. Sensor Failure	Always	Shutdown
User Digital Input Alarms***	All Options Available	All Options Available
High Battery Voltage Warning	Always	Non-Latch

* Battery voltage must be below alarm limit for 5 minutes to trigger alarm.

** Each user analog input channel has a high and low alarm.

*** Each user digital input can be programmed to trigger an alarm on high or low level.

ALARM PROCESSING

 
◆ INPUT ALARM FUNCTIONS

The E option panel will monitor the status of the analog and digital inputs, and generate alarm messages as required. Digital alarms and user-defined analog alarms are fully programmable. The user is able to select the type of alarm, the state of the input that will trigger the alarm, and the alarm message when it is active. The configurations are defined as follows:

✧ Alarm Active

The user is able to select when the alarm is active. The options will be as follows:

- **Disabled:** If this option is selected, the alarm is disabled and has no effect.
- **Always:** With this option selected, the alarm is active regardless of the state of the generator.
- **Immediate:** In this mode, the alarm is not active when the generator is stationary. It becomes active as soon as the generator starts to crank and remains active until the generator stops.
- **Hold Off:** This option waits until a preset time after the generator is running before becoming active. The hold off time can be set by the user. Note that the hold off time is common to all alarms.



◆ ALARM TYPE

◇ Status

This type of alarm will display a message on the screen. The message will not be logged. This is the lowest priority of alarm types.

◇ Warning – Non-Latched

This type of warning will activate the audible alarm, and flash the alarm LED and display back light. The associated message will be displayed on the screen. When the user accepts the warning (by pressing the Enter key), the back light will stop flashing, and the alarm LED will be on continuously. The message will be displayed on the alarm screen, but the user will be able to scroll through other screens. The LED and message will clear when the warning condition clears. This type of warning is logged.

◇ Alarm – Latched

This type of alarm will act similarly to the non-latched warning, except that the alarm does not clear when the alarm condition clears. When the alarm condition occurs, the audible alarm sounds, the LED and back light flash as before, and the user must accept the alarm to stop them. The alarm will continue to be displayed on the screen even after the alarm condition has cleared. The user must either press the Reset key or turn the key-switch to the OFF position to clear the alarm after the alarm condition has cleared. This type of alarm is logged.

◇ Shutdown

This type of alarm will act similar to the latched alarm, but it also will stop the engine when the alarm condition occurs. It can be reset only by turning the key-switch to the OFF position. All shutdown alarms are latching, and this type of alarm is logged.

◇ Alarm Status

This is the value at which the alarm is active. For analog alarms, it is a number corresponding to the alarm limit. Digital alarms are either “normally open” or “normally closed,” and an alarm is generated when the input is not in the normal state.

◇ Alarm Message

Each alarm will have a message associated with it. The analog alarm messages will be preset, and the digital alarm messages and user-defined analog messages will be entered via the keypad or the serial link.

◆ OTHER ALARMS

◇ Overcrank

This alarm is unlike other alarms as it is not associated with an analog or digital signal. The user is able to define the number of crank attempts, the length of each crank attempt and the rest time between cranks. After the last attempt has been made, an overcrank alarm will be generated. The user will then be unable to disable this alarm or alter the alarm message.

◇ Coolant Level

This alarm is generated by the coolant level detector. This device senses whether coolant is present or not. It has no user-definable level setting and is a shutdown alarm that is active after the hold off time. There are no user-definable parameters for this alarm.

PROGRAMMABLE PARAMETERS

The E option panel allows the user to configure various options to control the generator starting and stopping cycles, and the way that the alarms operate. Parameters are entered either from the control module or via the serial link. A description of the programmable parameters follows:

◆ PREHEAT ENABLED

This parameter determines how the preheat function works. The preheat can be fully disabled, enabled before starting only (for the duration of the preheat time), or before and during starting (for the duration of the preheat time and also while the starter is engaged). Note that if the user wishes to engage the preheat during starting but not to have a preheat before starting, it is possible to set the preheat time to zero.

◆ PREHEAT TIME

When a start command is received, some engines require preheating before the generator attempts to start. When the preheat function is enabled, this parameter allows the user to determine the time that the preheat contact closes before activating the starter solenoid.

◆ START TIME

Once a start command has been received and the preheat time has expired (if enabled), the starter solenoid will be engaged. This parameter allows the user to determine how long the starter solenoid is engaged before the start attempt is regarded as having failed. If the generator does not start within this time, the generator will wait for a preset time before attempting to start again. The user also can program the number of start attempts the generator tries.

◆ PAUSE TIME

If the generator does not start within the programmed start time, it will pause before trying to start again. This parameter determines the length of that pause.

◆ START ATTEMPTS

This parameter determines the number of times that the generator tries to start. If the generator has not started after this number of attempts, an alarm is generated.

◆ STARTER DISENGAGE SPEED

While the starter is engaged, the engine speed is monitored. Once it reaches this value, the starter motor is disengaged, and the engine is regarded as having started.

◆ HOLD OFF TIME

Once the engine has started, some alarm functions (such as low oil pressure and under speed) are not activated immediately since the engine must be given time to reach a stable condition. This parameter determines the time that elapses before the hold off alarms are activated.

◆ COOL-DOWN TIME

It is sometimes desirable to run the generator for a given time with no load before stopping to allow the engine to cool down. This parameter determines the length of time that the generator continues to run after a stop command is sent in AUTO mode. Note that if the key-switch is turned to the OFF position when the generator is running, it will stop immediately regardless of this setting. This value also should be set to zero if this function is controlled by the transfer switch.

◆ LOAD ACCEPT VOLTAGE AND FREQUENCY

Once the generator has started, the voltage and frequency will ramp up until they reach the values at which the generator can accept load. These parameters allow the user to set the values. The values should be set slightly lower than the nominal values to allow for a margin of error in the regulator and governor settings. Once the values have been reached, the warm-up timer is started.

◆ WARM-UP TIME

Some applications require that the generator is allowed to run for a given time before a load is applied. This parameter allows the user to set that time. Note that if this function is controlled elsewhere (e.g., within a transfer switch), this time should be set to zero. The generator is ready to accept load when this timer expires. This parameter can be assigned to an output relay.

◆ VOLTAGE SCALING FACTOR

The voltage scaling factor is used to scale the sensing voltage applied to CONN4-4 and CONN4-6.

On generators manufactured prior to the second quarter of 2000: Sensing voltage was measured from line-to-line, so the scaling factor was primarily set to 1.0. On generators manufactured starting the second quarter of 2000: Sensing voltage is measured from the frequency meter, in this case the scaling factor is used so the “E” panel displays line-to-line voltage. This scaling factor can also be used to “calibrate” the “E” panel display.

◆ FLYWHEEL TEETH

This parameter holds the number of flywheel teeth. This value is used to determine the engine speed from the magnetic pickup signal.

◆ USER-DEFINED OUTPUT FUNCTIONS

There are three user-defined outputs, and the preheat output also can be used as a user-defined output if the preheat function is disabled. Each output can be programmed to signal that an alarm is active, to indicate one specific alarm or input condition, to indicate the status of the key-switch, or to indicate the current status of the generator. These relay contacts can be used to switch up to 30 volts AC or DC at 1 amp.

NOTE:

 
See the “Output Function Table” on Page 13 for more detail.

◆ ANALOG INPUT SCALING FACTORS

The two user-defined analog inputs can be scaled so that the display uses meaningful values rather than the voltage level at the input. The user enters the value to be displayed when the input voltage is zero and when it is at the maximum value. (An analog input to the E panel is a voltage sourced input with a zero- to 10-volt range.) All alarm settings are based on this scaling, and the instrumentation display shows the input value based on this scaling too.

◆ ANALOG INPUT MESSAGES

This is a message up to 24 characters long that is displayed on the instrumentation display when the corresponding value is being shown.



◆ ANALOG INPUT ALARM MESSAGES

There is a user-definable message for each alarm condition on each analog input. This message is shown on the alarm display when the alarm condition is active and is stored in the alarm log.

◆ ANALOG INPUT ALARM SETTINGS

Each analog input has two alarms associated with it. One is activated when the input value is higher than the high set-point, and the other is active when the input is lower than the low set-point. The user also can define when the alarm is active (or disable it) and the severity of the alarm (from simply displaying a status message to shutting down the generator – see “Alarm Processing” on Page 5).

◆ DIGITAL INPUT ALARM SETTINGS

Each digital input also can generate an alarm. The user can program the alarm message, the input state that generates the alarm, when the alarm is active, and the alarm type. A digital input to the E panel is NOT a voltage sourced input, but a dry contact closure to ground. Voltage never should be sourced to a digital input. The signal options to a digital input are as follows:

- **Open:** This signal is an open circuit.
- **Closed:** This signal is a contact closure to ground.

***NOTE:**

For oil pressure, oil temperature and coolant temperature, the E panel will check to see if these inputs are either open circuit or short circuit which would indicate a faulty sender or faulty wiring to the sender.

If this type of fault condition exists the E panel will activate the alarm output and display one of the following message:

- **Oil Pressure Sense Fault**
- **Oil Temp Sense Fault**
- **Coolant Temp Sense Fault**

◆ OIL PRESSURE ALARMS (*SEE NOTE)

The oil pressure input has two associated alarm functions. The pre-low oil pressure warning is a non-latched, hold off alarm with a user-definable set-point. The low oil pressure shutdown is a shutdown, hold off alarm with a user-definable set-point. The shutdown alarm set-point should be the lowest of the two settings so that the user will have some warning of a low oil condition before the generator is shut down.

◆ OIL TEMPERATURE ALARMS (*SEE NOTE)

The oil temperature has a non-latched warning and a shutdown alarm associated with it. The set-points are programmable, and the alarms can be immediate, hold off or disabled.

◆ COOLANT TEMPERATURE ALARMS (*SEE NOTE)

The coolant temperature input has three associated alarms. The pre-high coolant temperature alarm is a non-latched, hold-off alarm. The high coolant temperature alarm is a shutdown, hold-off alarm. The low coolant temperature warning is a non-latched, always active alarm. Set-points for each alarm are programmable.

◆ BATTERY VOLTAGE ALARMS

The low battery voltage warning set-point is programmable. The warning will be activated if the battery voltage is below this value for more than five minutes. This is a non-latched, always active alarm. Note that the “Power” LED on the front panel is extinguished immediately if the battery voltage is less than this value. The high battery voltage alarm set-point is also programmable. The warning is active immediately when the battery voltage is higher than this value.

◆ ENGINE SPEED ALARMS

The user can program the overspeed and the underspeed alarm. The overspeed alarm is an immediate shutdown alarm. Underspeed is a hold off alarm that can either be non-latched, latched or shutdown.

◆ GENERATOR VOLTAGE ALARMS

 
An alarm can be generated for high voltage and low voltage. The set-points are user-definable, and the alarms can be either non-latching, latching or shutdown.

◆ GENERATOR FREQUENCY ALARMS

An alarm can be generated for high frequency and low frequency. The set-points are user-definable, and the alarms can be either non-latching, latching or shutdown.

◆ FUEL LEVEL ALARMS

Alarms can be generated by an optional fuel level sensor. The high fuel level warning is non-latching. There is also a low fuel level warning that is non-latching and a low fuel shutdown alarm. Each of these alarms has a set-point and can be always active or disabled.




E PANEL MODEM SETUP PROCEDURE

NOTE:

Generac only supports the US Robotics 56k V90 Sportster modem for connection of the “E” Panel to the phone line. Other modems may work in this application, but have not been tested by Generac.

1. Set modem Dip switches as shown in Figure 2. Power cycle the modem (turn modem off, then on).
2. Connect the cable between the “E” panel and the modem (see Figure 4).
3. Set the “E” panel for “modem connection and setup”. Power cycle the “E” panel (remove and relace front panel fuse).
4. In GenLink, select the proper setup string for the modem at the PC end (not the “E” panel).

Figure 2 — US Robotics 56k V90 Sportster Dip Switch Settings

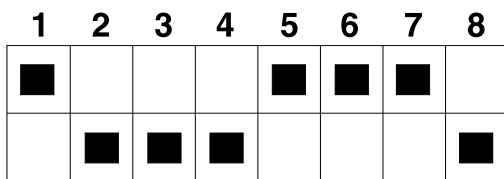


E PANEL RS232 CABLES

The “E” panel can communicate via its RS232 port to a remote PC. The connection is made either directly to the serial port on a PC, or via a modem and telephone line.

The “E” panel has a 9-pin male “D” type connector, and is configured as DTE (Data Terminal Equipment). The serial ports on most PCs also have a DTE configuration, and are usually 9-pin “D” type male connectors. Most modems have a DCE configuration (Data Communication Equipment) and a 25-pin female connector.


Connecting an “E” panel directly to a PC requires a “Null Modem” connection. This can be achieved with either a null modem cable, or a standard serial cable with a null modem adapter. Figure 3 shows the required pin connections between the two cables for a 9-pin serial connector on the PC.

Figure 3 — “E” Panel to PC Cable Configuration

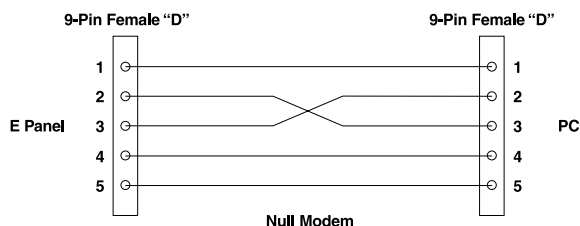

Connecting the “E” panel to a modem requires a standard modem cable. The cable supplied with the modem should work. If a longer cable is required, the connectors should be wired as shown in Figure 4.

Figure 4 — “E” Panel to Modem Cable Configuration

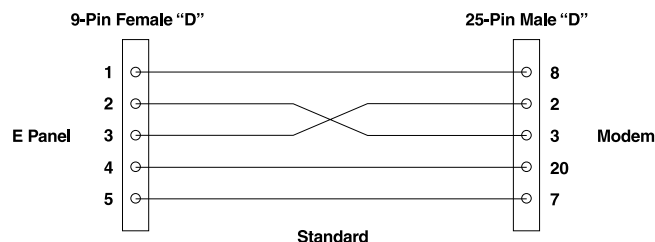

NOTE:

The modem is not intended to be mounted inside the control panel. It should be mounted inside the enclosure (no vibration) or inside a nearby building or shelter if the generator does not have an enclosure.

◆ SERIAL COMMUNICATIONS

✦ Serial Communication Via Modem

(Refer to Genlink Manual P/N 0D3704)

The control panel has the ability to communicate to a PC via an RS232 serial port. The PC software will be able to interrogate the module, and the user also will be able to program the parameters on the PC and download them to the module. The user will be able to start and stop the generator if it is in AUTO mode.

The module does not have a built-in modem. However, software will include the ability to interface with an external modem. The user can initialize the modem from the panel. Generac offers a remote annunciator (models #'s 004391-0 and 004392-0) which allows the E panel to communicate with both a modem and a remote annunciator. See the Remote Annunciator Panel manual (part number 0A7450) for a complete description of these panels.

✦ Remote Annunciator Panel

(Refer to manuals 0A7450 and 0A9825)

The serial connections can be configured to allow the control panel to connect to a remote annunciator/remote relay panel, which is configured as RS485, to meet NFPA 110. Only one communication port is available for either a modem or remote annunciator.

✧ Altering the Serial Communications Setup


The E option control panel is capable of being used with either a modem or a remote annunciator/remote relay panel, depending on the configuration of the serial connections. The unit comes set up for connection to a modem (RS232). In order to use the control panel with a remote annunciator/remote relay panel (RS485), adhere to Figure 5 and the instructions that follow.

1. Remove harness retaining screws, then unplug all five wire harnesses from the back of the E panel control module.
2. Remove the four phillips head screws retaining the rear cover of the control module.
3. Open the back of the control module.
4. Locate the DB-9 wire harness that runs from the DB-9 connector on the back panel to the black header on the lower circuit board inside the control module.
5. Carefully remove the black connector from the header by pressing the locking tab and lifting up.
6. Insert the black connector into the RS485 header (J11). Make sure that the connector is fully inserted and that the locking tab snaps into place.
7. Replace the back panel and the four screws.

Figure 5 – E Panel Serial Communications Setup Modification

NOTE:

The following diagram and instructions apply only to those units manufactured before January 2000. Units manufactured after January 2000 incorporate a selector switch on the back of the control module. This switch will allow selection of either RS232 or RS485 without opening the module.

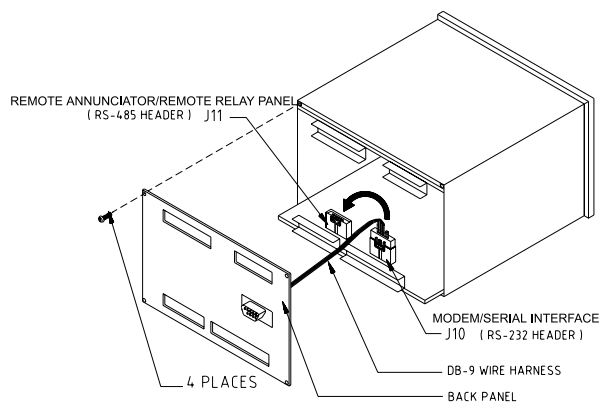

✧ USER PASSWORD

The user can set the password. This is a six-digit number and is initially set to 000000.

ADDITIONAL PANEL COMPONENTS

In addition to the control module, the E option panel contains the following components (see Figure 6):

◆ AC VOLTMETER

This meter indicates the generator AC output voltage. To determine the nominal rated AC voltage of the unit, refer to the unit's data plate.

NOTE:

Some generators are reconnectable to a variety of voltages. Some units may be equipped with a rotary "Voltage Selector Switch." Be sure to read the "Generator AC Lead Connections" section in the Owner's Manual.

◆ AC AMMETER

This meter indicates the current draw of connected electrical loads, in amps. Also see "Line-phase Selector Switch." For continuous operation, never exceed the rated maximum continuous current capacity of the generator.

◆ FREQUENCY METER


This meter indicates the generator's AC output frequency in "Hertz" (cycles per second).

◆ LINE-PHASE SELECTOR SWITCH

This four-position switch permits selection of either line-to-line or line-to-neutral readings on the panel voltmeter and ammeter. Switch positions are as follows:

Switch	Single-phase Units	Three-phase units
1	Line E1 to Neutral	Line E1 to E2
2	Line E3 to Neutral	Line E2 to E3
3	Line E1 to E3	Line E3 to E1
OFF	No Reading	No Reading

Figure 6 – E Option Panel Components

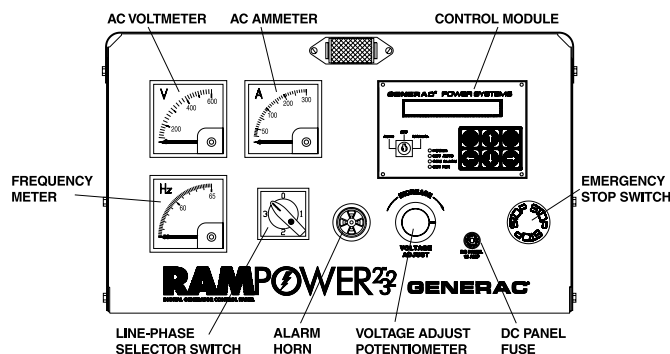

◆ VOLTAGE ADJUST POTENTIOMETER

This potentiometer permits the operator to “fine adjust” the generator’s AC output voltage on units rated below 400 kW. Adjustment range is plus or minus five percent. Turn the knob clockwise to increase voltage, counter-clockwise to decrease voltage.

◆ ALARM HORN

This horn sounds an audible warning when an alarm condition exists. See the “Alarms” section for further information.

◆ DC PANEL FUSE

This 15-amp fuse protects the panel components. This fuse is not to be confused with the control module internal fuse discussed in “Checking/Replacing the E Panel Control Module Internal Fuse.”

◆ EMERGENCY STOP SWITCH

When pressed, this switch will automatically shut down the entire generator set. The operator must pull the switch out to its original position to reset it and allow for generator operation.

CHECKING/REPLACING THE E PANEL CONTROL MODULE INTERNAL FUSE

Typically, the main indication of fuse failure is the absence of any illuminated front panel LEDs (even with the key in the OFF position, the “Power” LED will be illuminated) and no text visible on the module display. It should be noted however, that these conditions can exist if either:

- The generator start battery is dead (less than five-volts) or disconnected.
- The main panel fuse (15 amp) is blown.
- The battery supply wires (#13 and #0) to the panel control module are open circuit (disconnected).
- The “Power” connector (CON4) is disconnected from the rear of the control module.
- The generator start battery connections have been reversed. Reversal of the battery connections **WILL** blow the internal fuse and is the most likely reason for its failure.

Before removing or disconnecting the E panel control module, check that none of the above conditions (a-e) exist.

If you are satisfied that the problem lies with the control module:

- Disconnect the generator start battery.
- Unplug all four wire harnesses from the back of the control module.
- Loosen, then detach, the two retaining clips securing the control module and remove the module.

- Using a multimeter (e.g., Fluke 87) set to the diode range, measure between pins 1 (BAT+) and 2 (BAT-) of connector CON4 on the module.
 - With the **positive** meter lead connected to **pin 2** and the **negative** lead to **pin 1**, the meter should read between 0.4 and 0.6 volts, which indicates that the internal fuse is OK.
 - Reversing the meter leads would give a slowly increasing voltage reading on the meter, which also indicates a good fuse.
 - An open circuit fuse will give an open circuit meter reading (.OL on Fluke 87).

If the meter reads open circuit:

- Remove the four phillips head screws retaining the rear cover of the control module.
- Open the back of the control module.
- Locate the internal printed-circuit board mounted fuse, which is behind and to the left of CON4.
- Remove the white plastic cover from the fuse holder and remove the fuse.
- If the fuse has blown, replace the fuse (part #0A5705), reassemble the control module, and reinstall the control module and its connections.
- Reconnect the generator start battery and check if the control module now functions.

If the fuse blows again, or was not blown when the module was opened, or the module still does not function, the E panel control module must be replaced.

USER PROGRAMMABLE INPUTS

The E panel has eight (8) user programmable inputs. These inputs can be used for annunciation, pre-alarm, or shutdown alarms. Four of the inputs, Battery Charge Fail, Gen Power, Line Power, and Programmable Input 4 are set up to annunciate on the control panel display and at the optional 20 Light Remote Annunciator (Programmable Input 4 will light the unlabeled “spare” LED). These four inputs can be used for other connections if a remote annunciator is not used. The other four inputs, if utilized, will annunciate at the control panel only.

The user programmable input connection points are located inside the E option control panel on a 12-position strip labeled TB3 (refer to Figures 7 and 8 on page 12.). The first four terminals are labeled “prog input gnd”. These are the common ground connection points for the user supplied switch devices to be used for the programmable annunciation.

NOTE:

These ground terminals are for user programmable input use only. The are not to be used for grounding any other circuits.

Figure 7 — TB3 Units Up to 400 kW


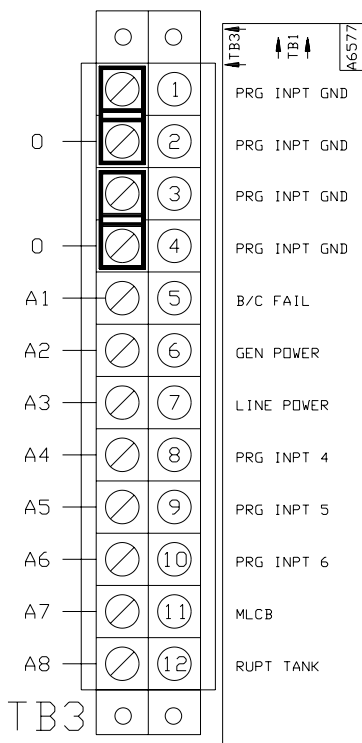


Figure 8 — TB3 Units Over 400 kW

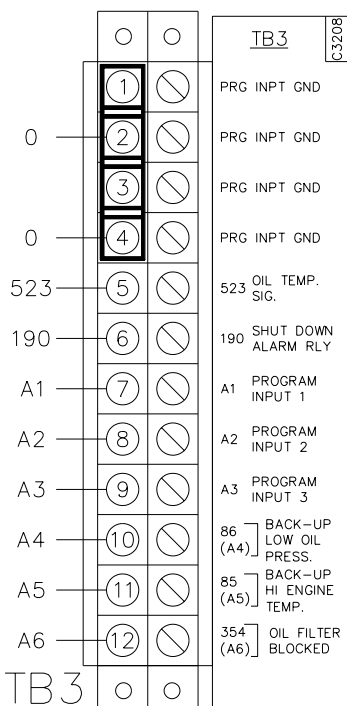

The remaining eight terminals on TB3 are for the “positive” side of each user programmable input switch circuit. These eight terminals have a five VDC potential available in an open-circuit condition (whether the control panel key switch is in the off, manual, or auto position). The inputs can be programmed to annunciate upon either an open circuit condition (five VDC potential at the terminal) or a grounded condition (zero VDC potential at the terminal). This voltage state is determined by the user supplied switch either opening or closing to cause an annunciation.

Program set-up for the user programmable inputs is carried out in the Digital I/O Menu of the E module (please refer to the Display Map on pages 18-19). Each of the eight inputs has four parameters in which specific options must be selected to make the annunciation function properly. These four parameters are labeled Input Channel Message, Input Channel Setting, Input Channel Alarm Enable, and Input Channel Alarm Type. Following is a brief description of each:


- Input Channel Message — for selecting letters and numbers to spell out what the display will read upon activation of that specific input.
- Input Channel Setting — for selecting whether annunciation should activate upon that specific circuit opening or closing to ground.
- Input Channel Alarm Enable — for enabling or disabling annunciation function of that specific input. Also, if enabled, for selecting when annunciation will be active. The choices are: Disabled, Always, Immediate and Hold-off. See E Control Panel Definitions on page 14.
- Input Channel Alarm Type — for selecting the type of alarm annunciation and the effect it has on the generators control system. The four choices are: Status, Non-latched, Latched and Shutdown. See E Control Panel Definitions on page 14.


WIRING EXAMPLES

◆ USER PROGRAMMABLE INPUT NUMBER 1

On units rated below 400 kW, input number 1 is programmed for “Battery Charge Fail” annunciation at the control panel display, and the LED on the 20 Light Remote Annunciator (if used). A user supplied AC relay is wired in to be powered up by AC voltage that supplies the unit Battery Charger (see Figure 9).

 Figure 9 — Battery Charge Fail Wiring

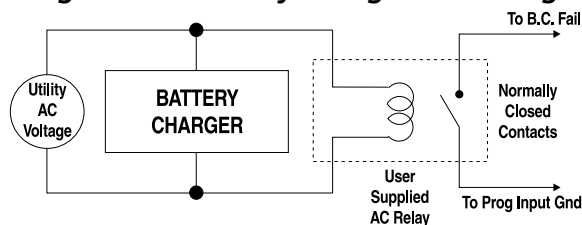



Upon loss of this AC supply voltage, the relay will de-energize. The normally closed contacts on the relay are to be connected to TB3 in the control panel. One wire connects to any of the four “Prog Input Gnd” terminals, the other wire connects to terminal number 5 (B/C Fail). With the relay de-energized, terminal 5 will be grounded, signaling the E module to activate on Programmable Input 1.

◆ USER PROGRAMMABLE INPUTS NUMBERS 2 AND 3

On units rated below 400 kW, input numbers 2 and 3 are programmed for “Gen Power” and “Line Power” respectively, indicating the transfer switch position (Standby or Utility). Annunciation will occur at the control panel display and at the Remote Annunciator (if used). These signals will come from a set of spare auxiliary contacts located on the main contactor assembly in the transfer switch. The auxiliary contact switch is a set of dry contacts with three terminals: Common, Normally Open, and Normally Closed. Wires must be connected to these three terminals and routed to the generator control panel. These three wires must not be run in the same conduit as the generator’s main output conductors. The wire connected to the Common terminal on the auxiliary contacts will connect to any of the Prog Input Gnd terminals on TB3. The wire connected to the Normally Open terminal on the auxiliary contacts will connect to terminal 6 (Gen Power) on TB3. The wire connected to the Normally Closed terminal on the auxiliary contacts will connect to terminal 7 (Line Power) on TB3.

◆ ALL USER PROGRAMMABLE INPUTS

On units rated below 400 kW, input numbers 4 through 8, and units rated over 400 kW, input numbers 1 through 8 can be used for virtually any kind of annunciation the user wishes to set up, within the parameters previously described, via an opened or closed switch device. Proper wiring consists of two wires from the user supplied switch: one wire connects to one of the “Prg Inpt Gnd” terminals (1 through 4 on TB3), the other wire connects to a Programmable Input terminal on TB3.

PROGRAMMING EXAMPLES

◆ USER PROGRAMMABLE INPUT NUMBER 1

To be used for Battery Charge Fail annunciation. After properly wiring the circuit as described in Wiring Examples, program as follows:

1. Power up the E panel by connecting unit battery (ies) and inserting control panel fuse. The module will run through a self-test mode. Once it has completed its self-test, it will display the generator status (Stopped, ready to run).

2. Use the LEFT or RIGHT arrow keys to scroll over to the PARAMETER ENTRY column.
3. Once at the PARAMETER ENTRY column, press ENTER. Enter the password (if different from the factory set password 000000) and press ENTER. From the ENGINE PARAMETER MENU, press the RIGHT arrow to get to the DIGITAL I/O MENU.
4. Using the UP or DOWN arrows (the column is a continuous loop), scroll to INPUT CHANNEL 1 MESSAGE and press ENTER. Up to 24 letters, numbers and other characters can be entered to spell out what will be displayed upon this input becoming active. In this case, enter Battery Charge Fail. After entering the message, press ENTER.
5. Press the UP arrow to display INPUT CHANNEL 1 SETTING. Press ENTER, the display will read Input Function, OPEN=ALARM. The Battery Charge Fail annunciation should occur upon the user supplied relay de-energizing and its normally-closed contact closing, therefore, select CLOSED=ALARM by pressing the UP or DOWN arrow. Press ENTER, the display will read Input Channel 1 Setting, CLOSED=ALARM.
6. Press the UP arrow, the display will read Input 1 Alarm Enable, DISABLED, press ENTER. The choices are DISABLED, ALWAYS, IMMEDIATE, and HOLD OFF. This alarm should always be active, therefore, scroll up or down and select ALWAYS, and press ENTER.
7. Press the UP arrow, the display will read Input Channel 1 Alarm Type, STATUS MESSAGE, press ENTER. The choices are STATUS MESSAGE, NON LATCHING ALARM, LATCHING ALARM and SHUT-DOWN ALARM. This annunciation for Battery Charge Fail should be a STATUS message, therefore, scroll up or down and select STATUS MESSAGE by pressing ENTER.

Programming for User Input Channel 1, Battery Charge Fail is now complete. The E module has been programmed for a STATUS alarm message that is ALWAYS active. Upon loss of AC supply voltage to the generators battery charger, the user supplied relay will de-energize, its normally closed contacts will close, grounding TB3 terminal 5 to Prg Input Gnd. The E module will display BATTERY CHARGE FAIL. Because it was programmed as a STATUS alarm and not a LATCHING or SHUT-DOWN alarm, the status message will clear when AC power is restored to the battery charger.

NOTE:


The Battery Charger Fail LED on the 20 Light Remote Annunciator (if connected) will also turn on when Input Channel 1 is activated.



E CONTROL PANEL DEFINITIONS


Please refer to the following list for an explanation of terms used in various charts throughout the manual:

- **ALWAYS:** With this option selected, the alarm is active regardless of the state of the generator.
- **ANALOG INPUT:** An analog input to the E control panel is a voltage sourced input with a zero volt to 10-volt range.
- **DIGITAL INPUT:** A digital input to the E control panel is NOT a voltage sourced input, but a dry contact closure to ground. Voltage should never be sourced to a digital input.
- **DISABLED:** If this option is selected, the alarm is disabled and has no effect.
- **HIGH:** A high signal to a digital input is open circuit.
- **HOLD OFF:** This option waits until a preset time after the generator is running before becoming active. The hold off time can be set by the user. Note that the hold off time is common to all alarms.
- **IMMEDIATE:** In this mode, the alarm is not active when the generator is stationary. It becomes active as soon as the generator starts to crank and remains active until the generator stops.
- **LATCHED:** When the alarm condition occurs, the audible alarm sounds, the LED and back light flash as before, and the user must accept the alarm to stop them. The alarm will continue to be displayed on the screen even after the alarm condition has cleared. The user must either press the Reset key or turn the key-switch to the OFF position to clear the alarm after the alarm condition has cleared. This type of alarm is logged.
- **LOW:** A low signal to a digital input is a contact closure to ground.
- **NON-LATCHED:** This type of warning will activate the audible alarm, and flash the alarm LED and display back light. The associated message will be displayed on the screen. When the user accepts the warning (by pressing the Enter key), the back light will stop flashing, and the alarm LED will be on continuously. The message will be displayed on the alarm screen, but the user will be able to scroll through other screens. The LED and message will clear when the warning condition clears. This type of warning is logged.
- **SHUTDOWN:** This type of alarm will act similar to the latched alarm, but it also will stop the engine when the alarm condition occurs. It can be reset only by turning the key-switch to the OFF position. All shutdown alarms are latching, and this type of alarm is logged.
- **STATUS:** This type of alarm will display a message on the screen. The message will not be logged. This is the lowest priority of alarm types.
- **USER INPUT:** Any of the eight digital or two analog inputs reserved for customer options.

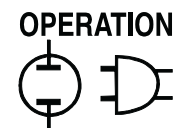

OUTPUT FUNCTION TABLE

Output Function ID	Function Name	Description
00	Output not used	
01	Common Alarm	Active for all latched, non-latched and shutdown alarms
02	Pre-Low Oil Pressure	Active after hold off time
03	Low Oil Pressure	Active after hold off time
04	Pre-High Water Temperature	Active after hold off time
05	High Water Temperature	Active after hold off time
06	Low Water Temperature	
07	Pre-High Oil Temperature	
08	High Oil Temperature	
09	Low Battery Volts	Must be below set value for five minutes
10	High Battery Volts	
11	Overspeed	
12	Underspeed	Active after hold off time
13	AC Voltage High	Active after hold off time
14	AC Voltage Low	Active after hold off time
15	High Frequency	Active after hold off time
16	Low Frequency	Active after hold off time
17	High Fuel	
18	Low Fuel	Below the warning set-point
19	Critical Low Fuel	Below the shutdown set-point
20	Failed to Start	Overcrank
21	Coolant Level	
22	RPM Sensor Loss	
23	Oil Pressure Start Inhibit	Oil pressure was present at start request
24	Emergency Stop	
25	Oil Pressure Sensor Failure	Sensor is either open or short circuit
26	Oil Temperature Sensor Failure	Sensor is either open or short circuit
27	Coolant Temperature Sensor Failure	Sensor is either open or short circuit
28	User Analog Channel 1 High	Input at user analog channel 1 is above programmed high set-point
29	User Analog Channel 1 Low	Input at user analog channel 1 is below programmed low set-point
30	User Analog Channel 2 High	Input at user analog channel 2 is above programmed high set-point
31	User Analog Channel 2 Low	Input at user analog channel 2 is below programmed low set-point
32	User Digital Alarm 1	User programmable digital input 1 is active
33	User Digital Alarm 2	User programmable digital input 2 is active
34	User Digital Alarm 3	User programmable digital input 3 is active
35	User Digital Alarm 4	User programmable digital input 4 is active
36	User Digital Alarm 5	User programmable digital input 5 is active
37	User Digital Alarm 6	User programmable digital input 6 is active
38	User Digital Alarm 7	User programmable digital input 7 is active
39	User Digital Alarm 8	User programmable digital input 8 is active
40	Generator in Auto	
41	Generator in Manual	
42	Generator Off	
43	Generator Stopped	
44	Generator Alarm Shutdown	
45	Generator Ready to Start	
46	Generator Running	
47	Generator Ready to Accept Load	Generator has reached load accept voltage and frequency set-points, and the warm-up timer has expired
48	Generator Running, Alarm Active	

 

E PANEL MASTER CONTROL BOX CONFIGURATION SETTINGS

STANDARD ALARM CONFIGURATION MENU

Parameter	Value	Units	Active	Type
Pre-Low Oil Pressure Warning	0 to 100	PSI	Hold Off	Non-latch
Critical Low Oil Pressure Alarm	0 to 100	PSI	Hold Off	Shutdown
Low Coolant Temp Warning	0 to 245	Deg. F	Always	Non-latch
Pre-High Coolant Temp Warning	0 to 245	Deg. F	Hold Off	Non-latch
High Coolant Temp Alarm	0 to 245	Deg. F	Hold Off	Shutdown
Pre-High Oil Temp Warning	0 to 245	Deg. F	(A1)	Non-latch
High oil Temp Alarm	0 to 245	Deg. F	(A1)	Shutdown
Low Battery Level Warning	4 to 30	V	Always	Non-latch
High Battery Level Warning	4 to 30	V	Always	Non-latch
Engine Over Speed Alarm	0 to 4500	RPM	Immediate	Shutdown
Engine Under Speed	0 to 4500	RPM	Hold Off	(T1)
Generator Over Voltage	0 to 800	V	Hold Off	(T1)
Generator Under Voltage	0 to 800	V	Hold Off	(T1)
Generator Over Frequency	0 to 100	Hz	Hold Off	(T1)
Generator Under Frequency	0 to 100	Hz	Hold Off	(T1)
High Fuel Level Warning	0 to 100	%	(A2)	Non-latch
Low Fuel Level Warning	0 to 100	%	(A2)	Non-latch
Critical Low Fuel Level Alarm	0 to 100	%	(A2)	Shutdown

Available Options:

- A1 = Disable, Holdoff, Immediate
- A2 = Disable, Always
- T1 = Shutdown, Latched, Non-latched, Status

ENGINE CONFIGURATION MENU

Parameter	Value	Unit	
Flywheel Teeth	50 to 200	Number	Preheat Option (P1)
Load Accept Frequency	0 to 90	Hz	Preheat Alternative (F1)
Load Accept Voltage	0 to 800	V	Output 1 (F1)
Starter Disengage Speed	0 to 4000	RPM	Output 2 (F1)
Number of Start Attempts	0 to 10	Number	Output 3 (F1)
Generator Cool Down Time	0 to 600	min	
Generator Warm Up Time	0 to 600	sec	
Alarm Hold Off Time	0 to 15	sec	
Start Attemp Pause Time	5 to 600	sec	
Start Timer	0 to 15	sec	
Preheat Timer	0 to 30	sec	

Available Options:

- P1 = No preheat, Preheat Before Start, Preheat Before and durring
- F1 = See output function table for available options

USER CONFIGURATION MENU

	Analog Channel1	Analog Channel2
Channel Title		
Upper Scaling Factor		
Lower Scaling Factor		

Message	Setpoint	Active	Type
Analog1 High		(A1)	(T1)
Analog1 Low		(A1)	(T1)
Analog2 High		(A1)	(T1)
Analog2 Low		(A1)	(T1)
User input 1	*1 Battery Charge Fail (S1)	(A1)	(T1)
User input 2	*1 Generator Power (S1)	(A1)	(T1)
User input 3	*1 Line Power (S1)	(A1)	(T1)
User input 4	*2 Back-up low oil pressure (S1)	(A1)	(T1)
User input 5	*2 Back-up high engine temp (S1)	(A1)	(T1)
User input 6	*2 Oil filter blocked (S1)	(A1)	(T1)
User input 7	*2 MLCB (S1)	(A1)	(T1)
User input 8	*2 Ruptured Tank (S1)	(A1)	(T1)



Messages can be a maximum of 24 characters including spaces.


Available Options:
 S1 = Low, High
 A1 = Disabled, Hold Off, Immediate, Always
 T1 = Shutdown, Latched, Non-Latch, Status

- *1 Assigned if used with 20 light Remote Annunciator or Remote Relay Panel. Otherwise available for any customer options.
- *2 Factory wired if unit is equipped with these options. Otherwise these inputs are available for any customer requirements.

Section 3 – Operation E Option Control Panels

 OPERATION

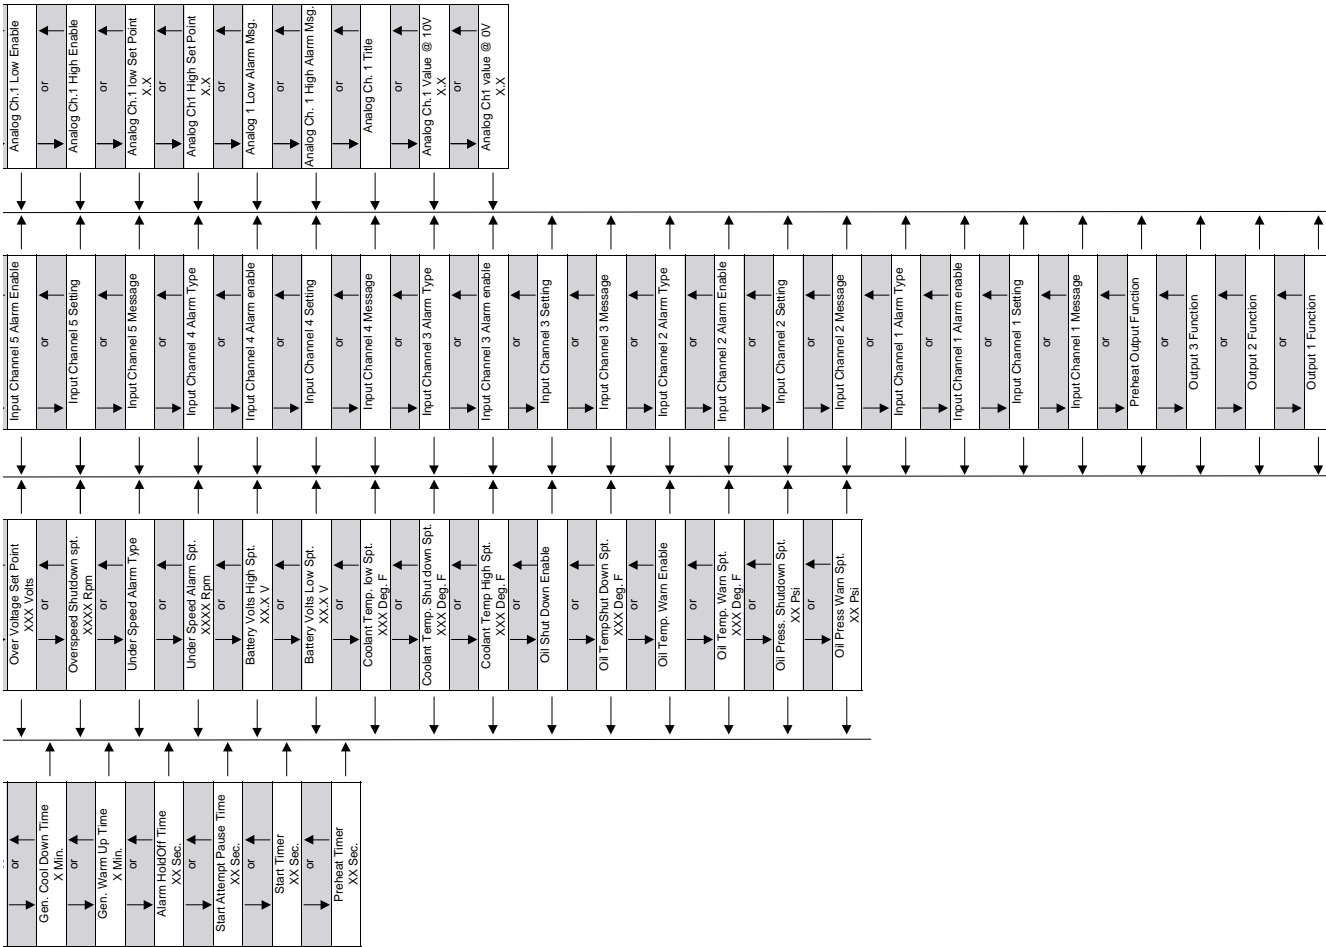

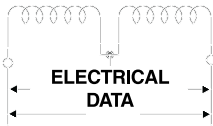

Section 4 – Electrical Data



E Option Control Panels

E PANEL DRAWING APPLICATION MATRIX

The following table will assist in determining which of the drawings in this manual apply to the particular generator set. Find the specific generator set configuration on the top row and follow that column down to find which drawings are applicable.



Generac Drawing Number	Manufactured prior to the 2nd quarter of 2000 with a Generac Alternator (up to 400 kW)	Manufactured starting the 2nd 2nd quarter of 2000 with a Generac Alternator (up to 400 kW)	Manufactured prior to the 2nd quarter of 2000 with a Marathon Alternator (400 kW or above)	Manufactured starting the 2nd quarter of 2000 with a Marathon Alternator (400 kW or above)	Manufactured with watertight connectors and a Marathon Alternator (400kW or above)
0A5502-D (Wiring Dia., pg. 24) 0A5501 (Scematic, pg. 25) 0A6325-L (Exp. View, pgs. 34-35)	XXX				
0C8319-B (Wiring Dia., pg. 26) 0C8318 (Schematic, pg.27) 0C8459-C (Exp. View, pgs. 38-39)		XXX			
0C1376-C (Wiring Dia., pg.28) 0C1375-C (Schematic, pg. 29) 0C3879-A (Exp. View, pgs 36-37)			XXX		
0C8327-A (Wiring Dia., pg. 30) 0C8326-A (Schematic, pg. 31) 0C8460 (Exp. View, pgs. 40-41)				XXX	
0D4267 (Wiring Dia., pg 22) 0D4267-A (Wiring Dia., pg 21) 0D4267-C (Schematic, pg 23) 0D4267-B (Exp. View, pg 32-33)					XXX


Section 4 – Electrical Data
E Option Control Panels
Wiring Diagram (For use with Marathon Alternator) – Drawing No. D4267A
For units manufactured with a watertight connector.

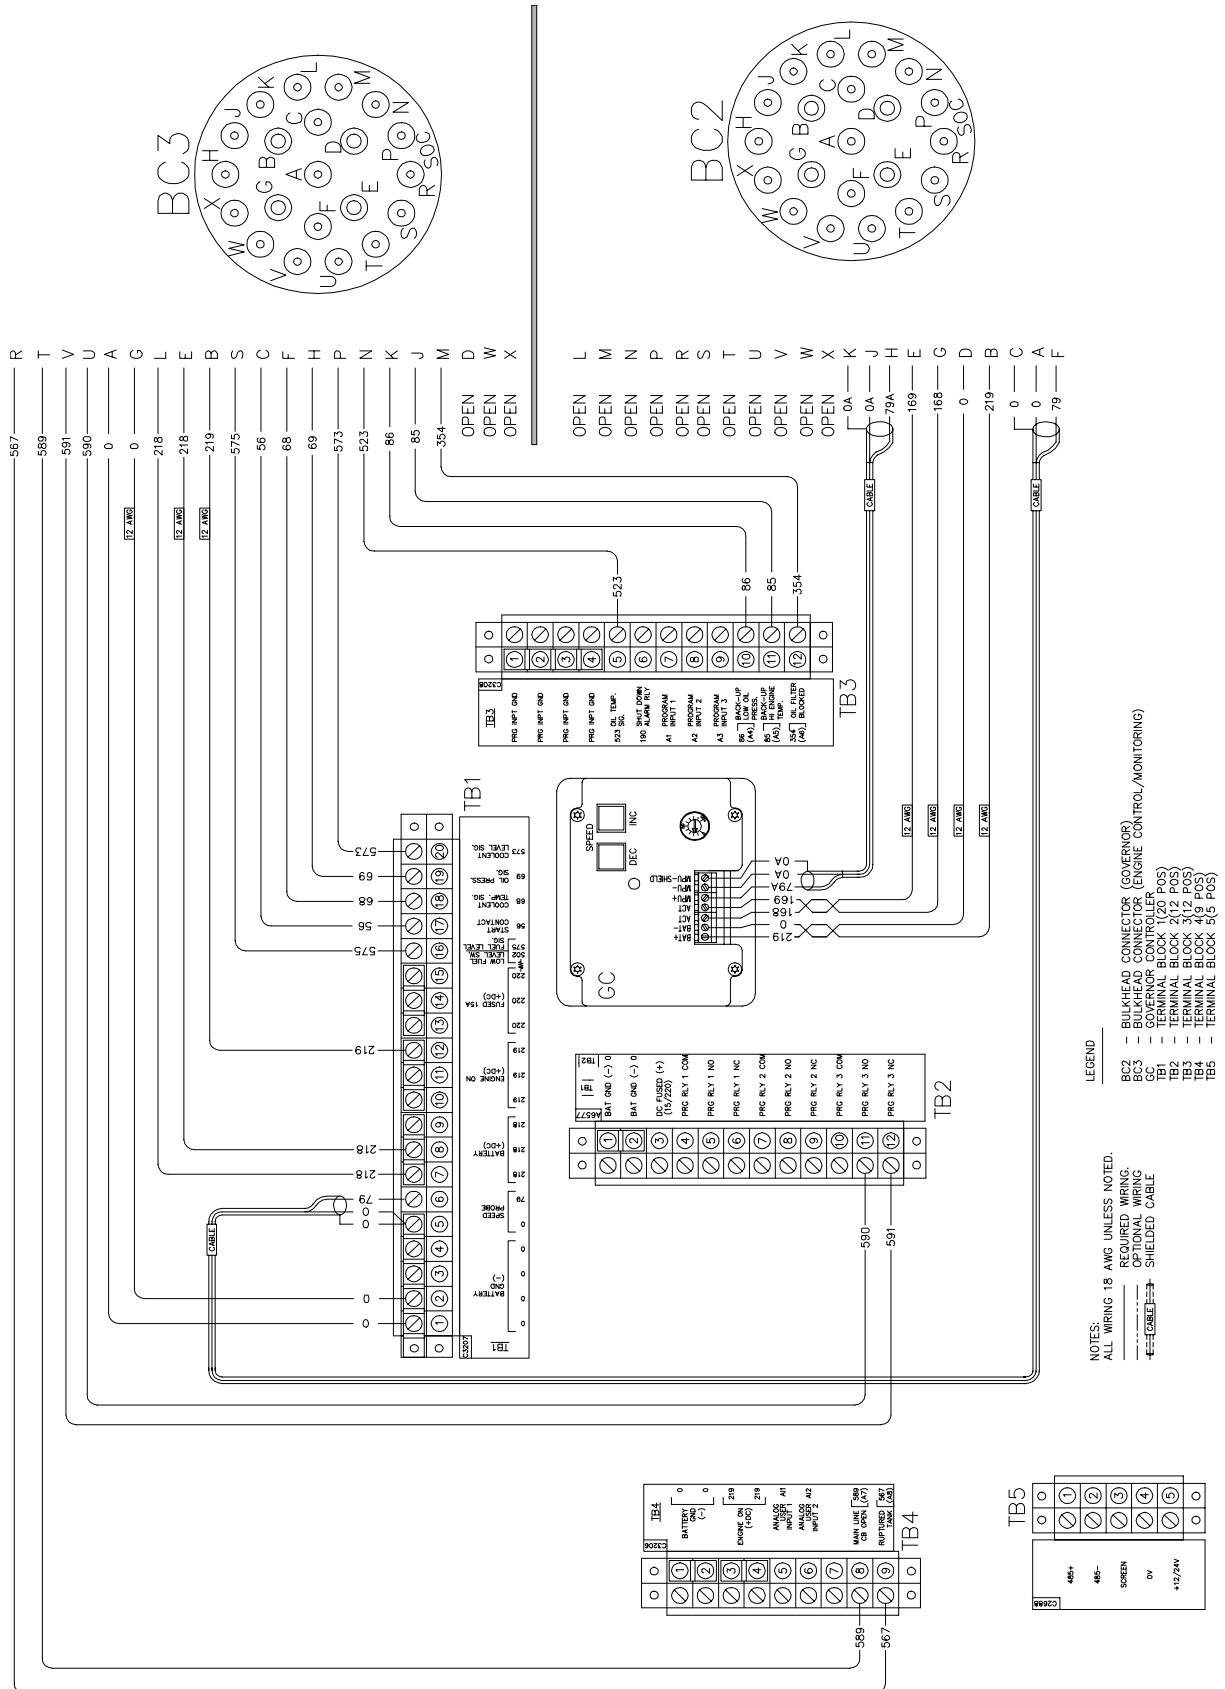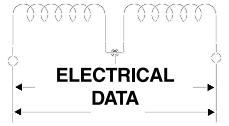

- LEGEND**
- BULKHEAD CONNECTOR (GOVERNOR)
 - BULKHEAD CONNECTOR (ENGINE CONTROL/MONITORING)
 - BC2 — GOVERNOR CONTROLLER
 - GC — TERMINAL BLOCK 1 (20 POS)
 - TB1 — TERMINAL BLOCK 2 (12 POS)
 - TB2 — TERMINAL BLOCK 3 (12 POS)
 - TB3 — TERMINAL BLOCK 4 (9 POS)
 - TB4 — TERMINAL BLOCK 5 (5 POS)
 - TB5 — TERMINAL BLOCK 6 (5 POS)

NOTES:
 ALL WIRING 18 AWG UNLESS NOTED.
 REQUIRED WIRING
 OPTIONAL WIRING
 SHIELDED CABLE

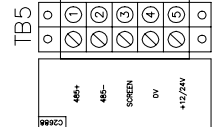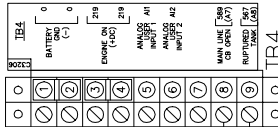


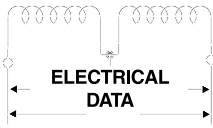

Section 4 – Electrical Data

E Option Control Panels

Wiring Diagram (For use with Marathon Alternator) – Drawing No. D4267C For units manufactured with a watertight connector.

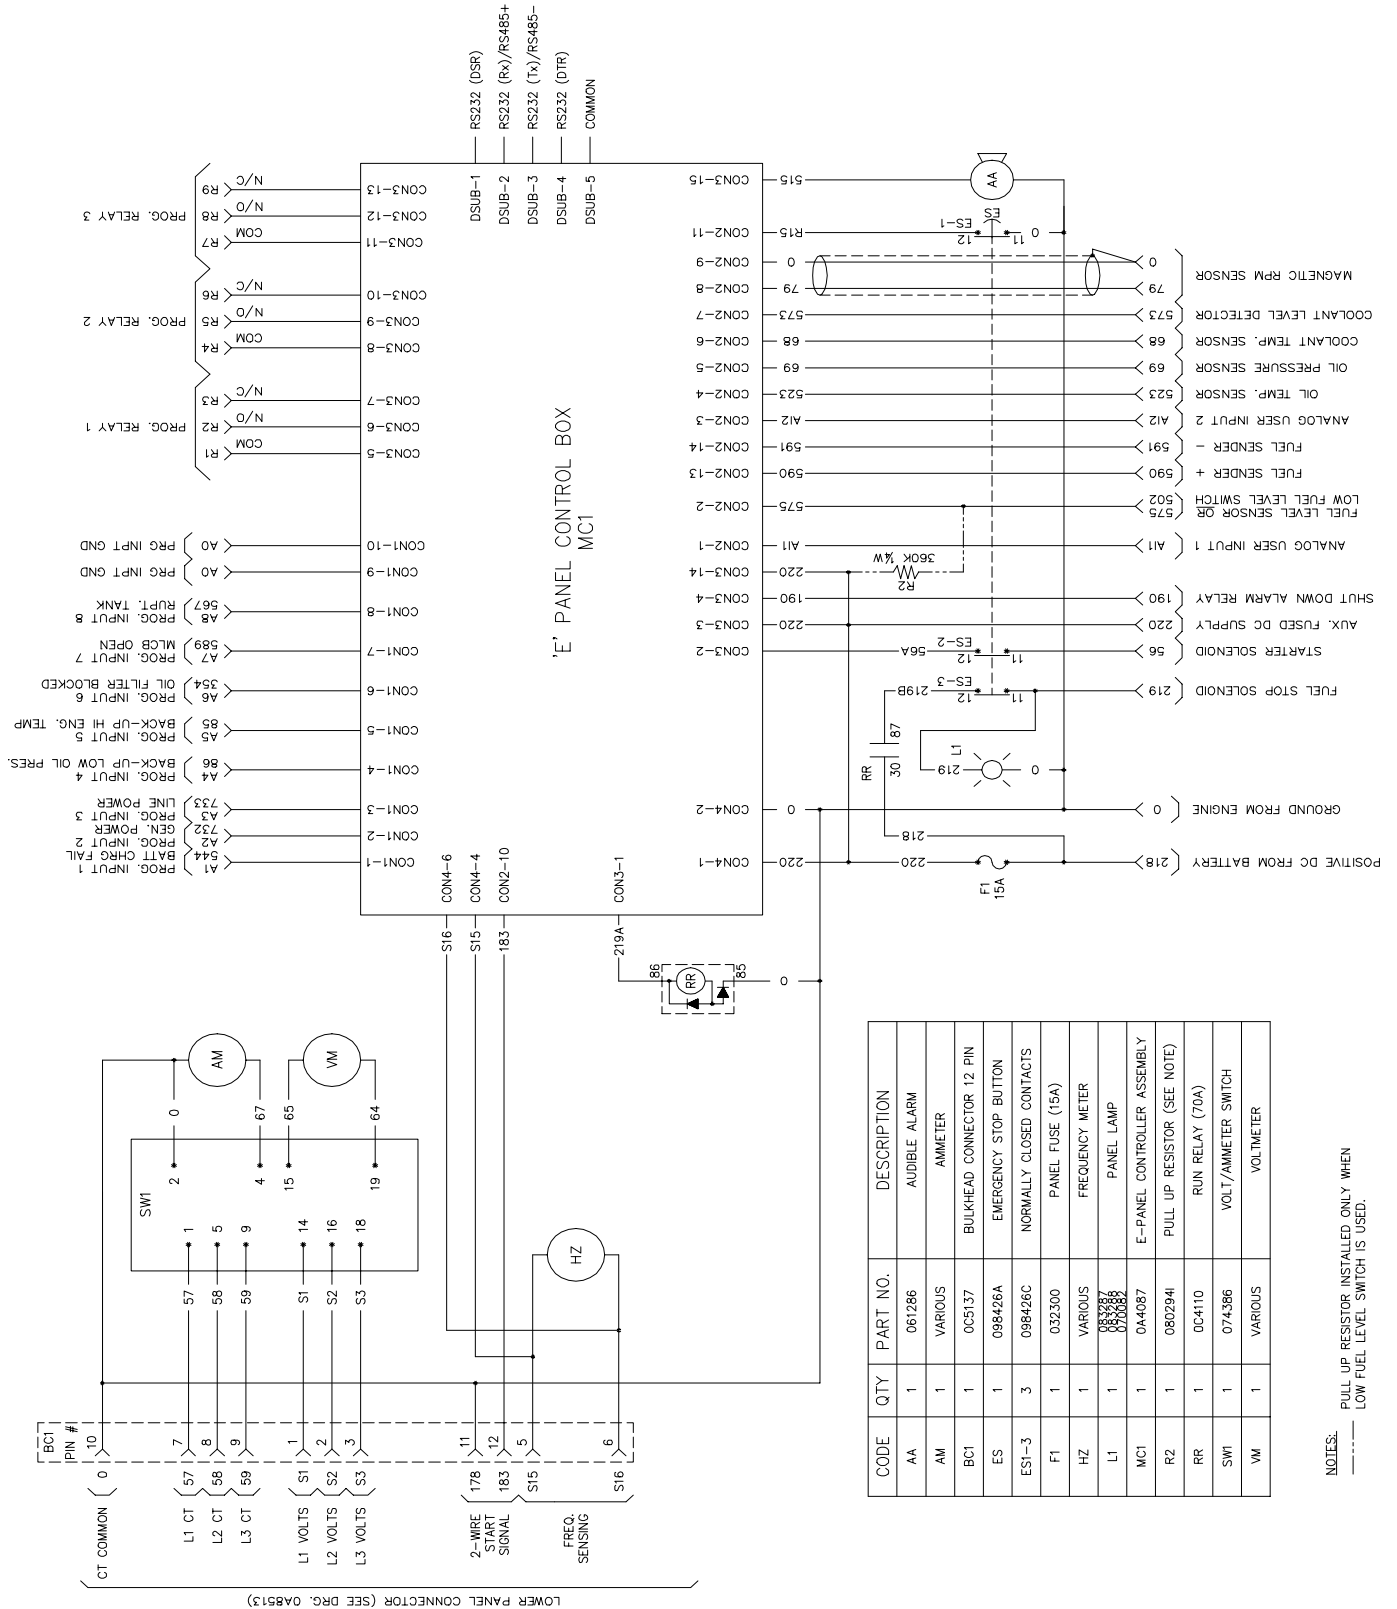



CODE	QTY	PART NO.	DESCRIPTION
AA	1	061286	AUDIBLE ALARM
AM	1	VARIOUS	AMMETER
BC1	1	0C5137	BULKHEAD CONNECTOR 12 PIN
ES	1	098426A	EMERGENCY STOP BUTTON
EST-3	3	098426C	NORMALLY CLOSED CONTACTS
F1	1	032300	PANEL FUSE (15A)
HZ	1	VARIOUS	FREQUENCY METER
L1	1	065287 065288 070082	PANEL LAMP
MC1	1	0A4087	'E'-PANEL CONTROLLER ASSEMBLY
R2	1	080294I	PULL UP RESISTOR (SEE NOTE)
RR	1	0C4110	RUN RELAY (70A)
SW1	1	074386	VOLT/AMMETER SWITCH
VM	1	VARIOUS	VOLTMETER

NOTES:
 PULL UP RESISTOR INSTALLED ONLY WHEN
 LOW FUEL LEVEL SWITCH IS USED.

Section 4 – Electrical Data


E Option Control Panels

Schematic Diagram (For Use With Generac Alternator) – Drawing No. A5501 For units manufactured prior to the 2nd quarter of 2000.

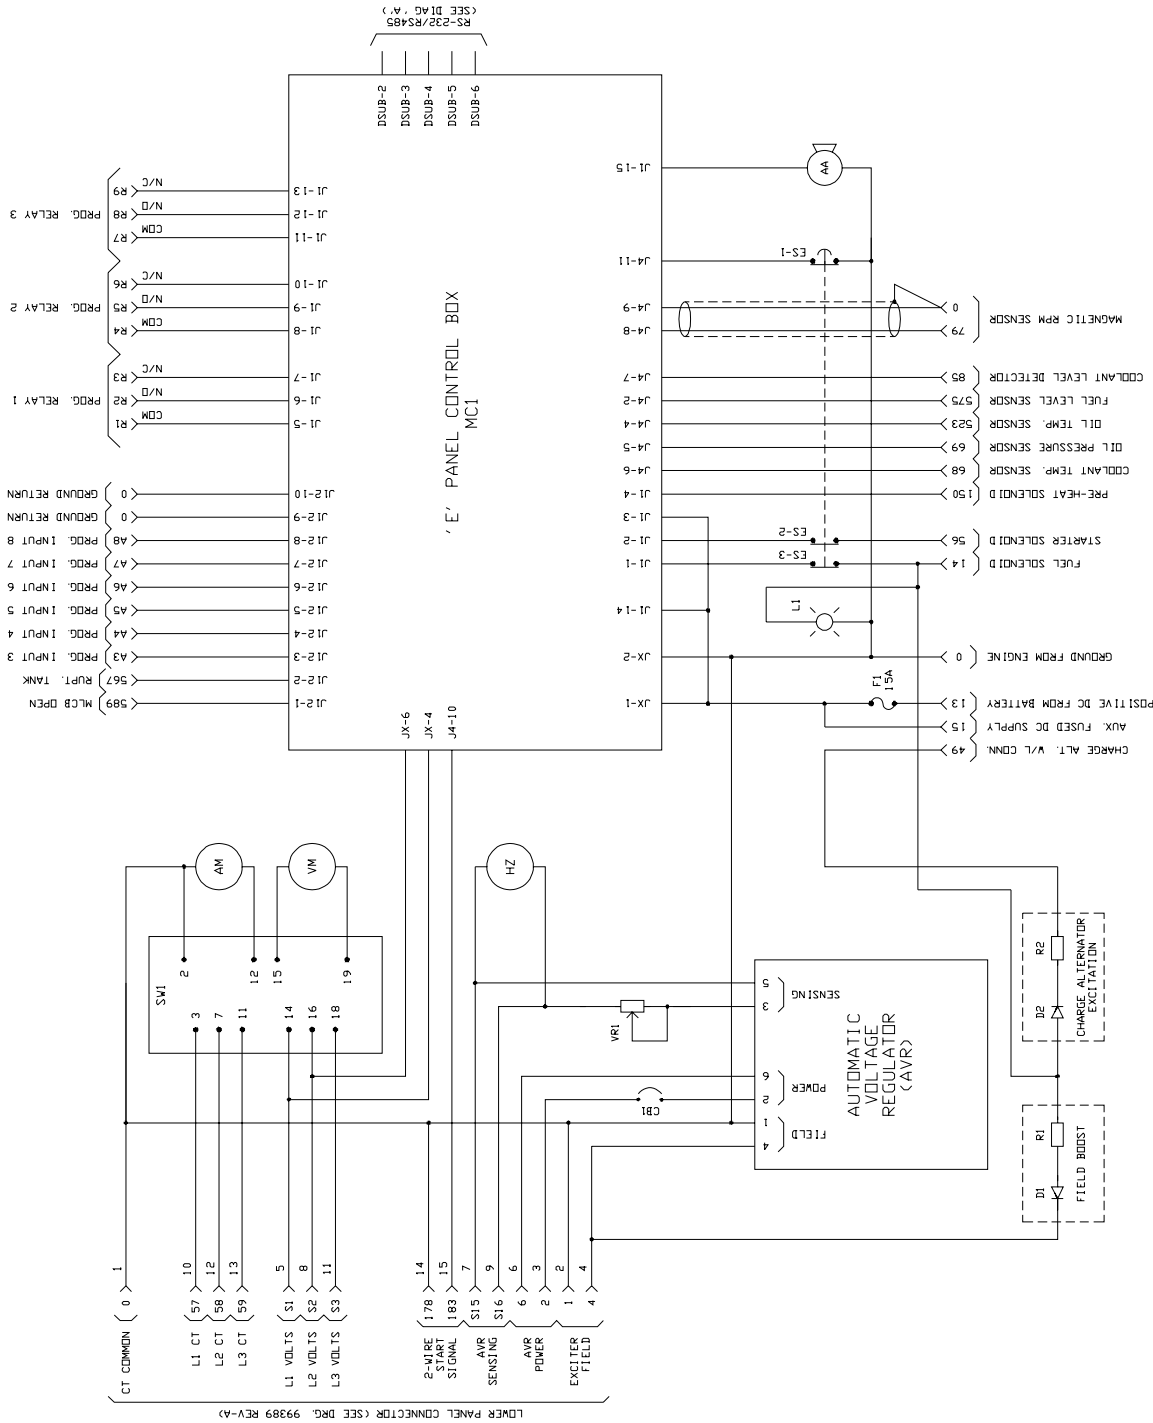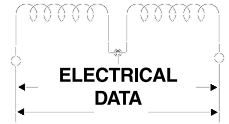

CODE	QTY	PART NO.	DESCRIPTION
AA	1	61286	AUDIBLE ALARM
AM	1	VARIOUS	AMMETER
AVR	1	67680	AUTOMATIC VOLTAGE REGULATOR
CBI	1	VARIOUS	AVR CIRCUIT BREAKER
D1	1	49939	FIELD BOOST DIODE
D2	1	25192	CHARGE ALT. EXCITER DIODE
ES	1	98426A	EMERGENCY STOP BUTTON


CODE	QTY	PART NO.	DESCRIPTION
ES1-3	3	98426C	NORMALLY CLOSED CONTACTS
HZ	1	70202	FREQUENCY METER
L1	1	70202	PANEL LAMP
MC1	1	A4087	E-PANEL CONTROLLER ASSEMBLY
R1	1	VARIOUS	FIELD BOOST RESISTOR
R2	1	44213	CHARGE ALT. EXCITER RESISTOR
SW1	1	61945	VOLT/AMMETER SWITCH
VM	1	VARIOUS	VOLTMETER
VRI	1	71361	VOLTS TRIM POTENTIOMETER

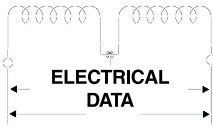

Section 4 – Electrical Data



E Option Control Panels

Wiring Diagram (For Use With Generac Alternator) – Drawing No. A5502-D
For units manufactured prior to the 2nd quarter of 2000.

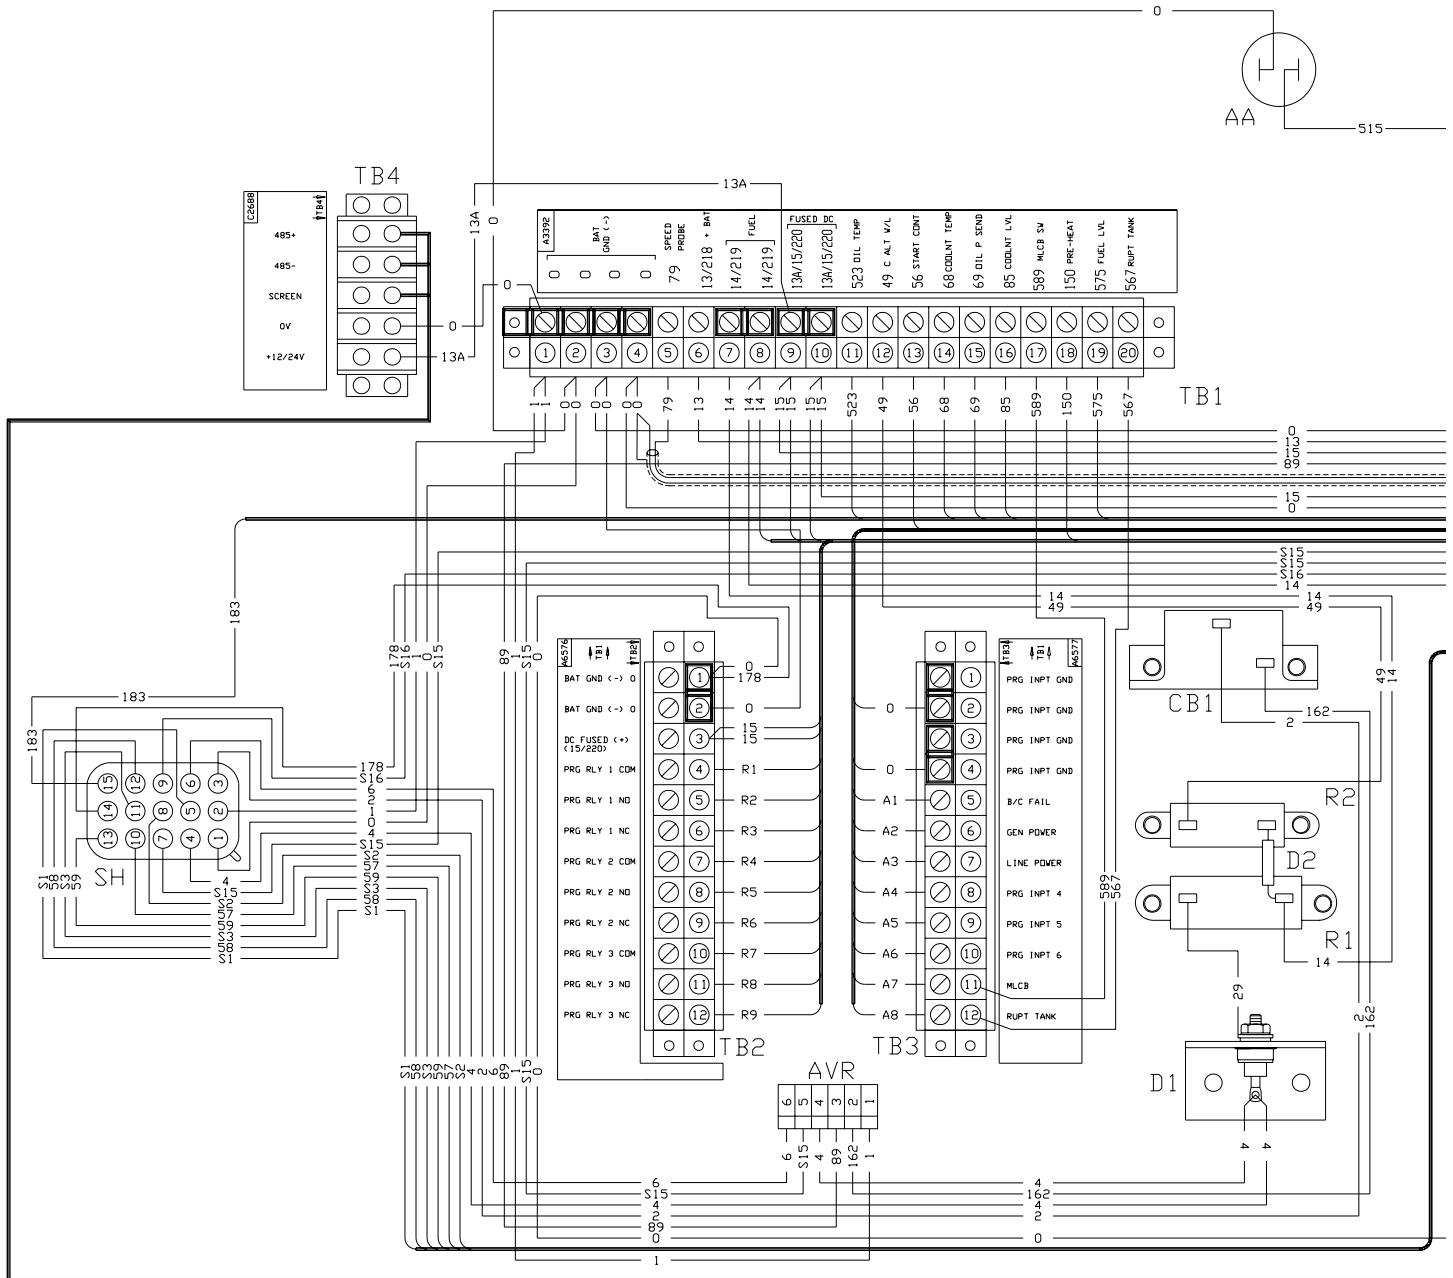


Section 4 – Electrical Data

E Option Control Panels
 Wiring Diagram (For Use With Generac Alternator) – Drawing No. A5502-D
 For units manufactured prior to the 2nd quarter of 2000.

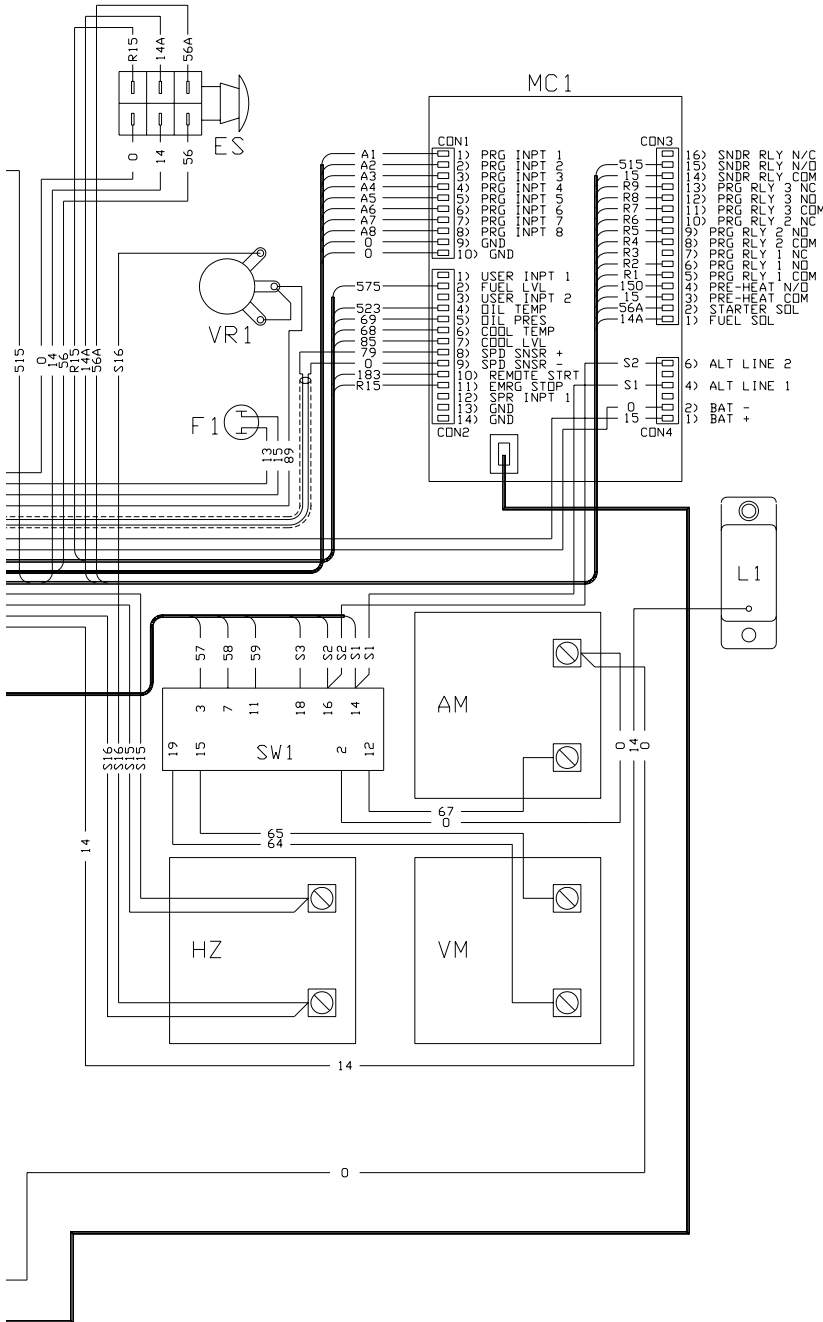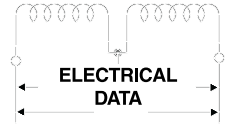


- LEGEND**
- AA - AUDIBLE ALARM
 - AVR - AUTOMATIC VOLTAGE REGULATOR
 - AM - AMMETER
 - CB1 - AVR CIRCUIT BREAKER
 - CON1- PLUG 3.5 10 PDS
 - CON2- PLUG 3.5 14 PDS
 - CON3- PLUG 3.5 16 PDS
 - CON4- PLUG 3.5 6 PDS
 - D1 - FIELD BOOST DIODE
 - D2 - C/A EXCITER DIODE
 - ES - EMERGENCY STOP SWITCH
 - F1 - 15 AMP FUSE
 - HZ - FREQUENCY METER
 - L1 - PANEL LAMP
 - MC1 - E-PANEL CONTROLLER ASSEMBLY
 - R1 - FIELD BOOST RESISTOR
 - R2 - C/A EXCITER RESISTOR
 - SH - SOCKET HOUSING(MALE/15 CKT)
 - SW1 - VOLT/AMMETER SWITCH
 - TB1 - TERMINAL BLOCK 1(20 PDS)
 - TB2 - TERMINAL BLOCK 2(12 PDS)
 - TB3 - TERMINAL BLOCK 3(12 PDS)
 - TB4 - TERMINAL BLOCK 4(5 PDS)
 - VM - VOLTMETER
 - VR1 - VOLTS TRIM POTENTIOMETER

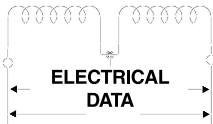

Section 4 – Electrical Data



E Option Control Panels

Wiring Diagram (For Use With Generac Alternator) – Drawing No. C8319-B
For units manufactured starting the 2nd quarter of 2000.

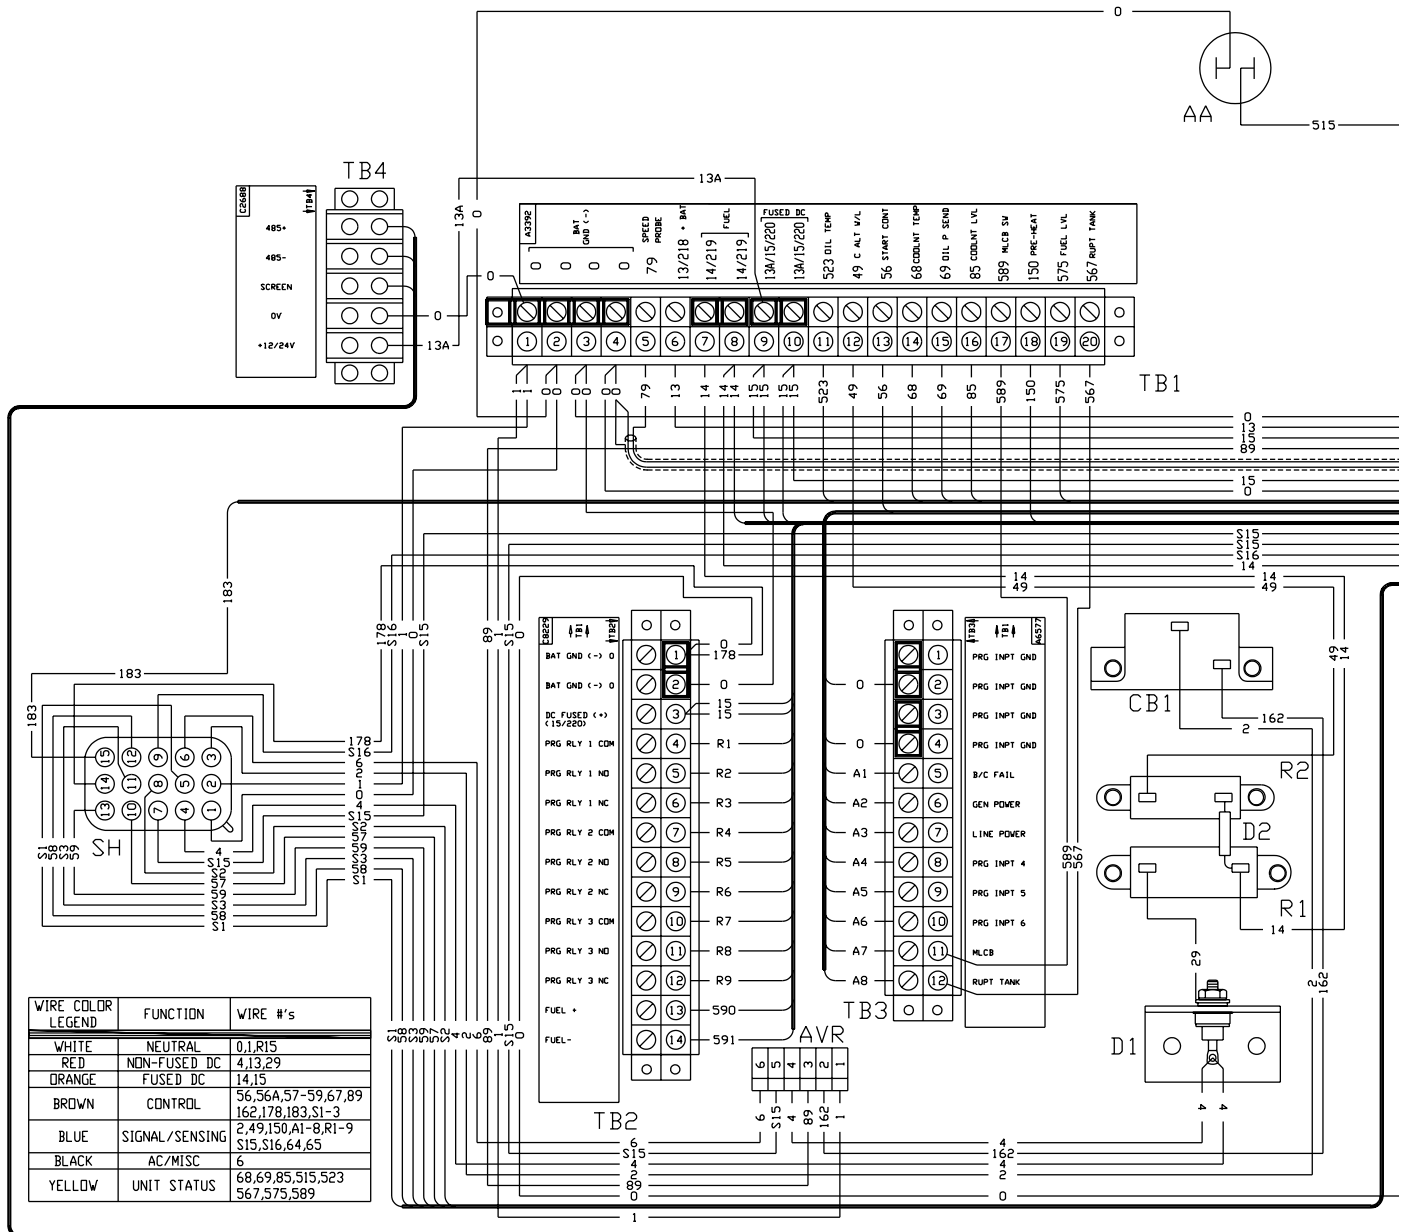


Section 4 – Electrical Data

E Option Control Panels
 Wiring Diagram (For Use With Generac Alternator) – Drawing No. C8319-B
 For units manufactured starting the 2nd quarter of 2000.

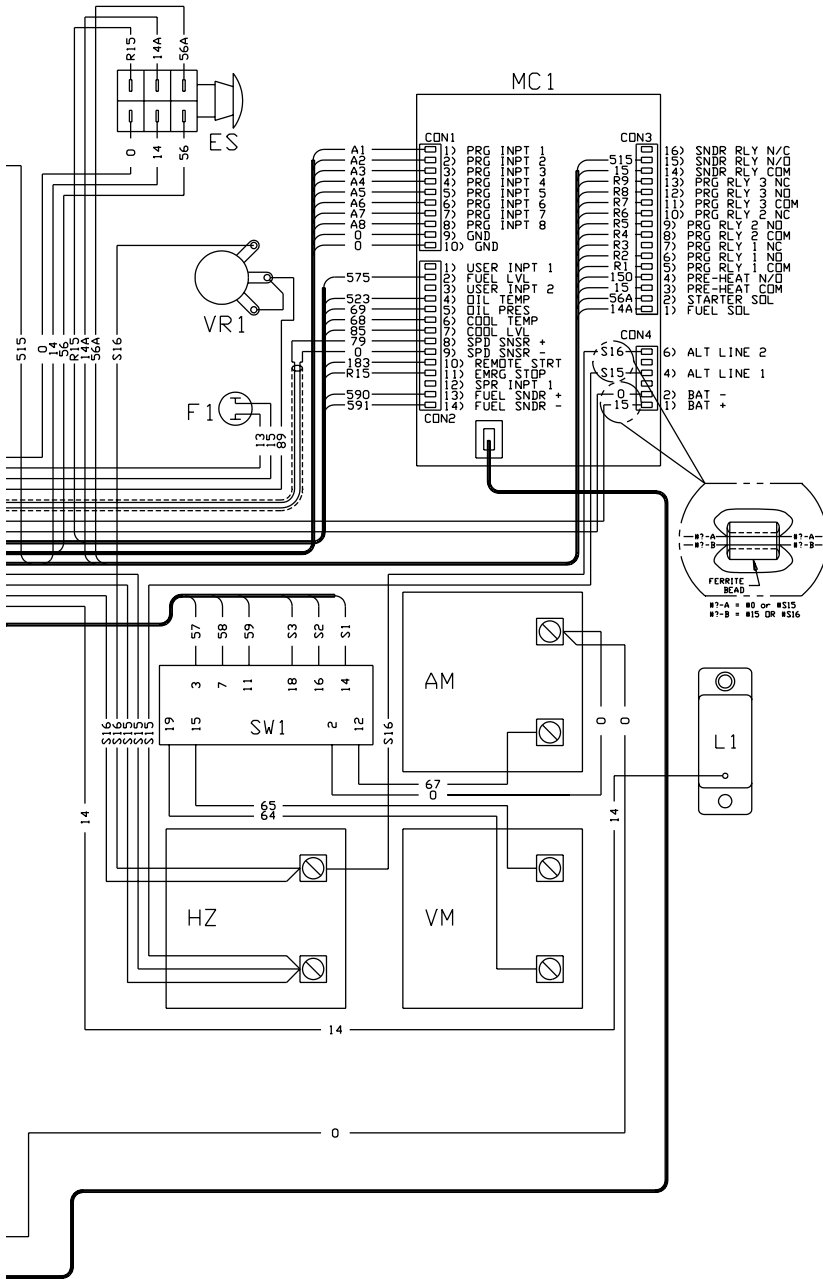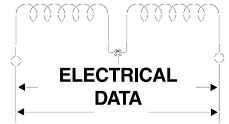


- LEGEND**
- AA - AUDIBLE ALARM
 - AVR - AUTOMATIC VOLTAGE REGULATOR
 - AM - AMMETER
 - CB1 - AVR CIRCUIT BREAKER
 - CON1- PLUG 3.5 10 POS
 - CON2- PLUG 3.5 14 POS
 - CON3- PLUG 3.5 16 POS
 - CON4- PLUG 3.5 6 POS
 - D1 - FIELD BOOST DIODE
 - D2 - C/A EXCITER DIODE
 - ES - EMERGENCY STOP SWITCH
 - F1 - 15 AMP FUSE
 - HZ - FREQUENCY METER
 - L1 - PANEL LAMP
 - MC1 - E-PANEL CONTROLLER ASSEMBLY
 - R1 - FIELD BOOST RESISTOR
 - R2 - C/A EXCITER RESISTOR
 - SH - SOCKET HOUSING(MALE/15 CKT)
 - SW1 - VOLT/AMMETER SWITCH
 - TB1 - TERMINAL BLOCK 1 (20 POS)
 - TB2 - TERMINAL BLOCK 2 (14 POS)
 - TB3 - TERMINAL BLOCK 3 (12 POS)
 - TB4 - TERMINAL BLOCK 4 (5 POS)
 - VM - VOLTMETER
 - VR1 - VOLTS TRIM POTENTIOMETER

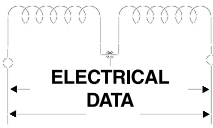

Section 4 – Electrical Data


E Option Control Panels Schematic Diagram (For Use With Generac Alternator) – Drawing No. C8318 For units manufactured starting the 2nd quarter of 2000.

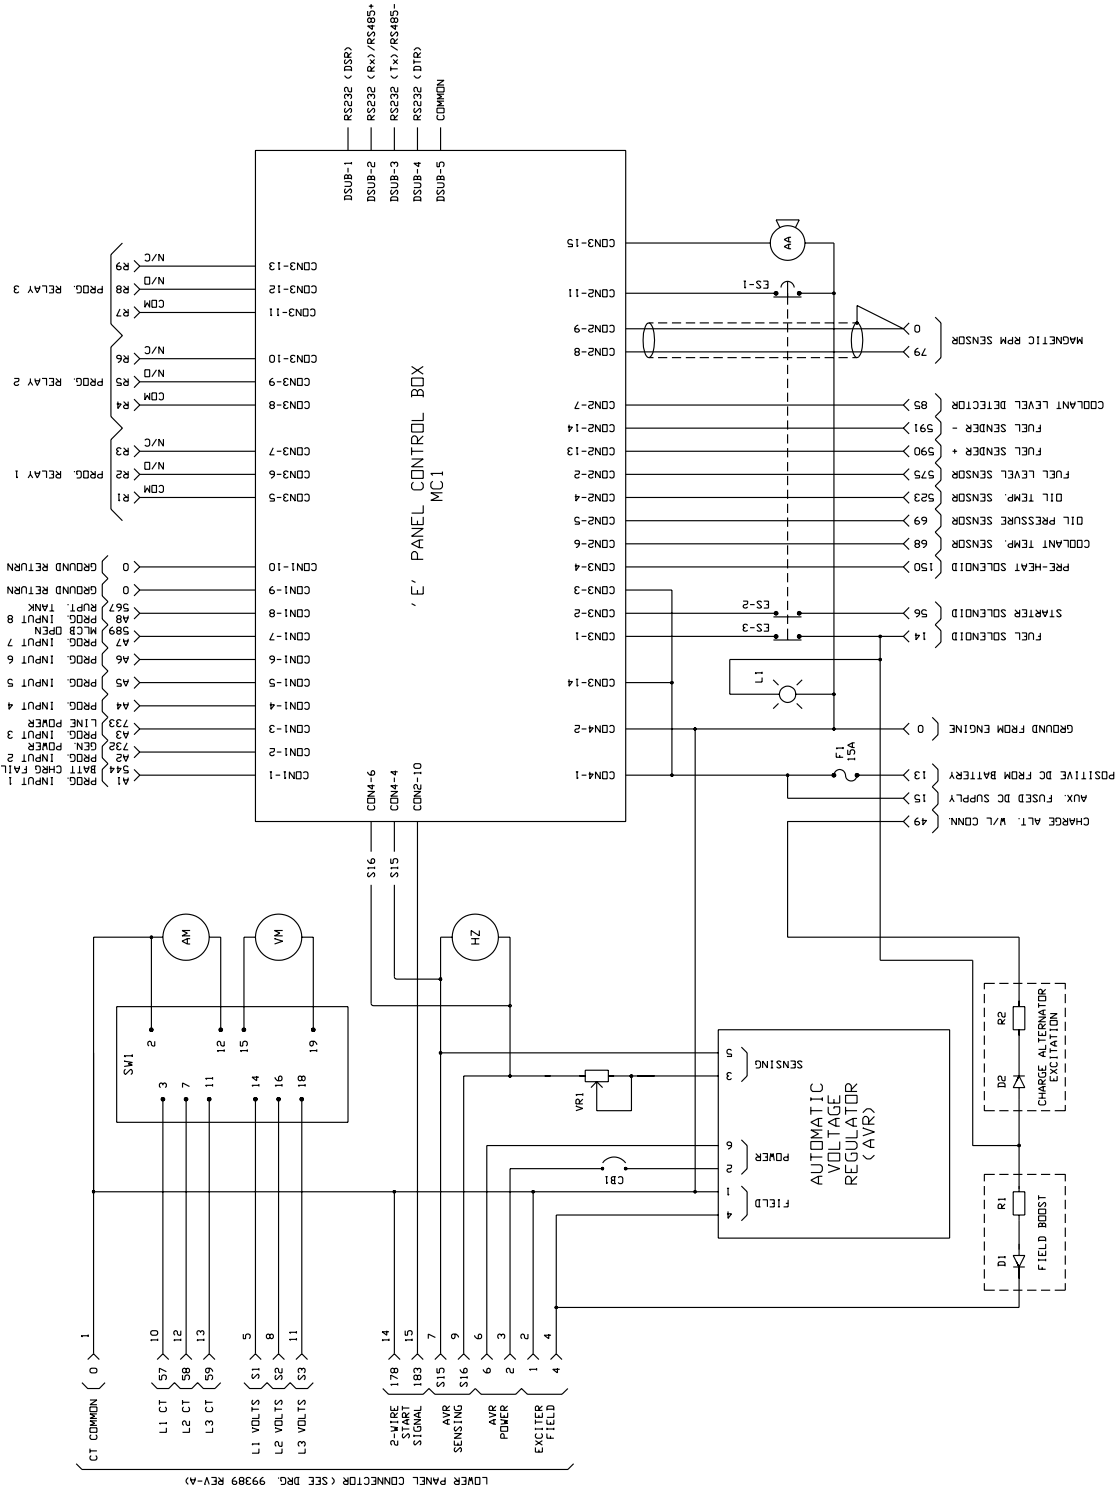

HZ	1	PART NO.	FREQUENCY METER
L1	1	70202	PANEL LAMP
MC1	1	A4087	E-PANEL CONTROLLER ASSEMBLY
R1	1	VARIOUS	FIELD BOOST RESISTOR
R2	1	44213	CHARGE ALT EXCITER RESISTOR
SW1	1	61945	VOLT/AMMETER SWITCH
VM	1	VARIOUS	VOLTMETER
VR1	1	71361	VOLTS TRIM POTENTIOMETER

CODE	QTY	PART NO.	DESCRIPTION
AA	1	61286	AUDIBLE ALARM
AM	1	VARIOUS	AMMETER
AVR	1	67680	AUTOMATIC VOLTAGE REGULATOR
CB1	1	VARIOUS	AVR CIRCUIT BREAKER
D1	1	49939	FIELD BOOST DIODE
D2	1	25192	CHARGE ALT EXCITER DIODE
ES	1	98426A	EMERGENCY STOP BUTTON
ES1-3	3	98426C	NORMALLY CLOSED CONTACTS

WIRE COLOR LEGEND	FUNCTION	WIRE #'S
WHITE	NEUTRAL	0,1,15
RED	NON-FUSED DC	4,13,29
ORANGE	FUSED DC	14,15
BROWN	CONTROL	56,56A,57-59,67,89
		162,178,183,S1-3
BLUE	SIGNAL/SENSING	2,49,150,A1-8,R1-9
BLACK	AC/MISC	S15,S16,64,65
		6
YELLOW	UNIT STATUS	68,69,85,515,523
		567,575,589

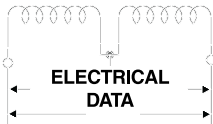


Section 4 – Electrical Data

E Option Control Panels Wiring Diagram (For Use With Marathon Alternator) – Drawing No. C1376-C For units manufactured prior to the 2nd quarter of 2000.



NOTES:
ALL WIRING 18 AWG UNLESS NOTED.

- REQUIRED WIRING.
- - - - - OPTIONAL WIRING
- [CABLE] — SHIELDED CABLE

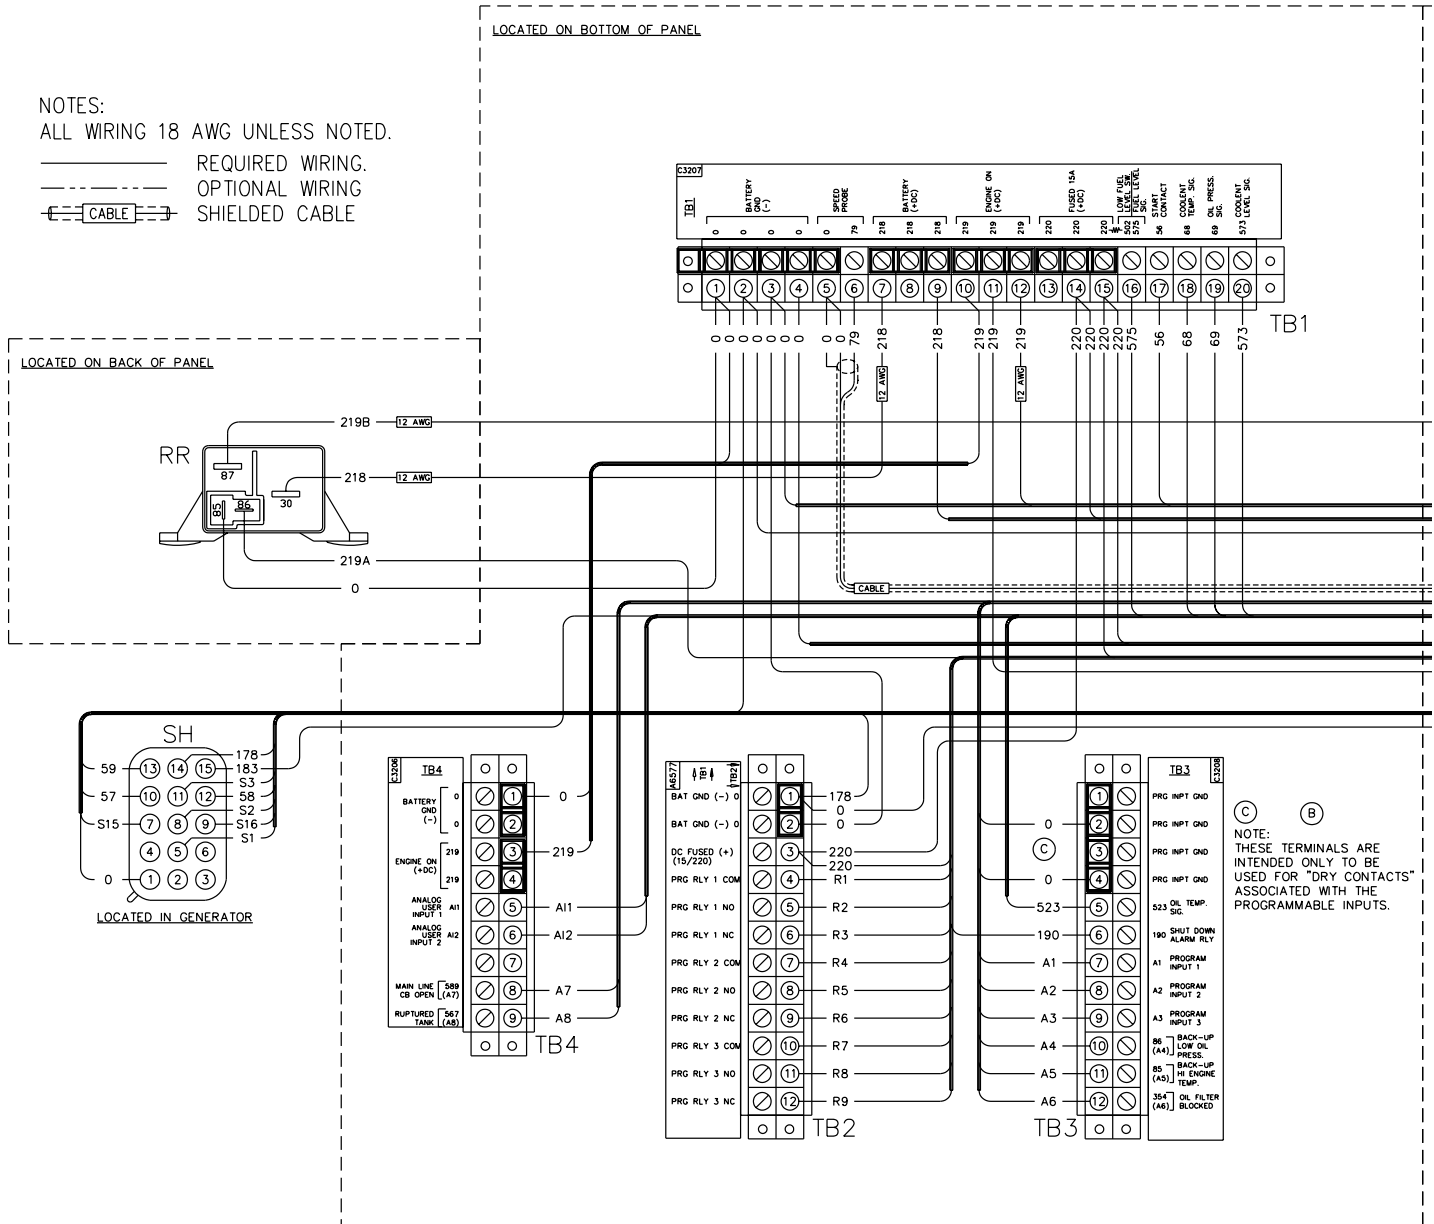


Section 4 – Electrical Data

**E Option Control Panels
Wiring Diagram (For Use With Marathon Alternator) – Drawing No. C1376-C
For units manufactured prior to the 2nd quarter of 2000.**

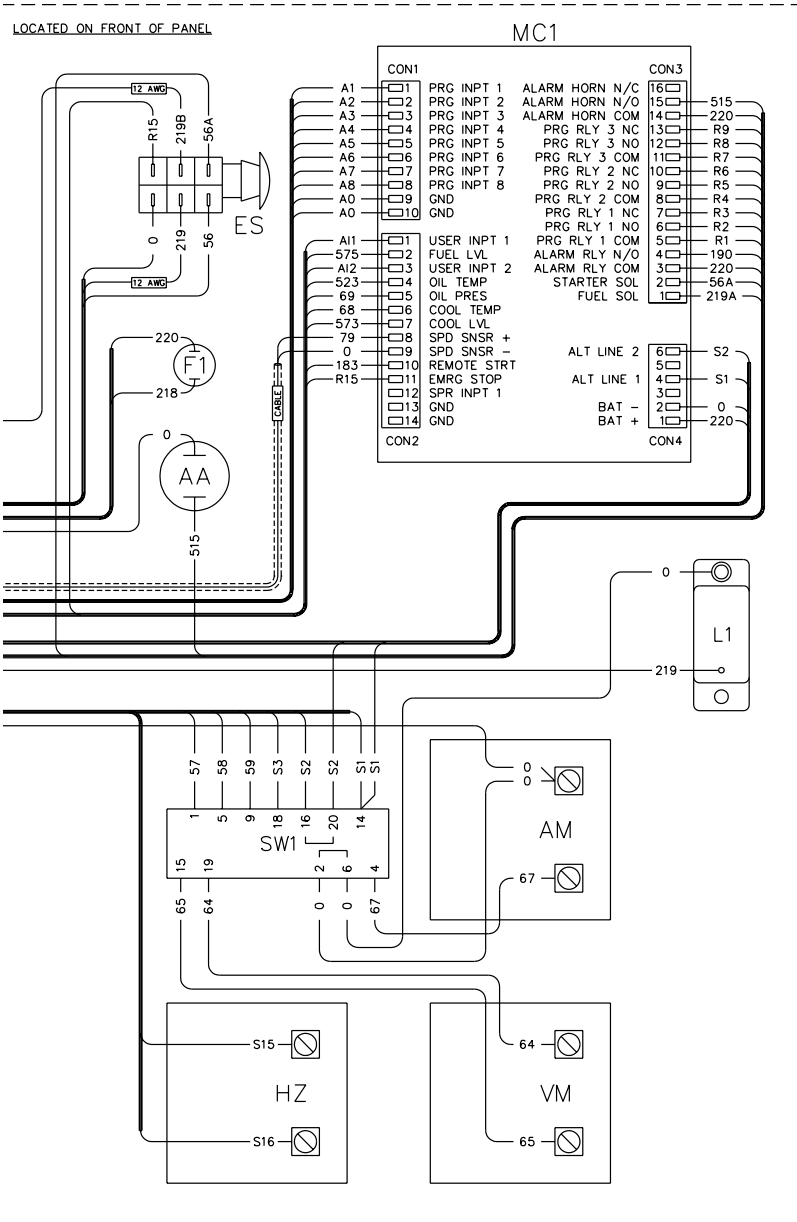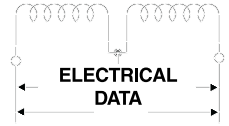

LEGEND

- AA - AUDIBLE ALARM
- AM - AMMETER
- CON1 - PLUG 3.5 10 POS
- CON2 - PLUG 3.5 14 POS
- CON3 - PLUG 3.5 16 POS
- CON4 - PLUG 3.5 6 POS
- ES - EMERGENCY STOP SWITCH
- F1 - 15 AMP FUSE
- HZ - FREQUENCY METER
- L1 - PANEL LAMP
- MC1 - E-PANEL CONTROLLER ASSEMBLY
- RR - RUN RELAY
- SH - SOCKET HOUSING(MALE/15 CKT)
- SW1 - VOLT/AMMETER SWITCH
- TB1 - TERMINAL BLOCK 1(20 POS)
- TB2 - TERMINAL BLOCK 2(12 POS)
- TB3 - TERMINAL BLOCK 3(12 POS)
- TB4 - TERMINAL BLOCK 4(9 POS)
- VM - VOLTMETER

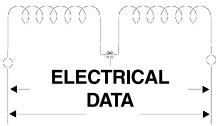

Section 4 – Electrical Data

E Option Control Panels


Wiring Diagram (For Use With Marathon Alternator) – Drawing No. C8327-B
For units manufactured starting the 2nd quarter of 2000.

NOTES:

ALL WIRING 18 AWG UNLESS NOTED



- REQUIRED WIRING
- - - - - OPTIONAL WIRING
- =====CABLE==== SHIELDED CABLE

(A)

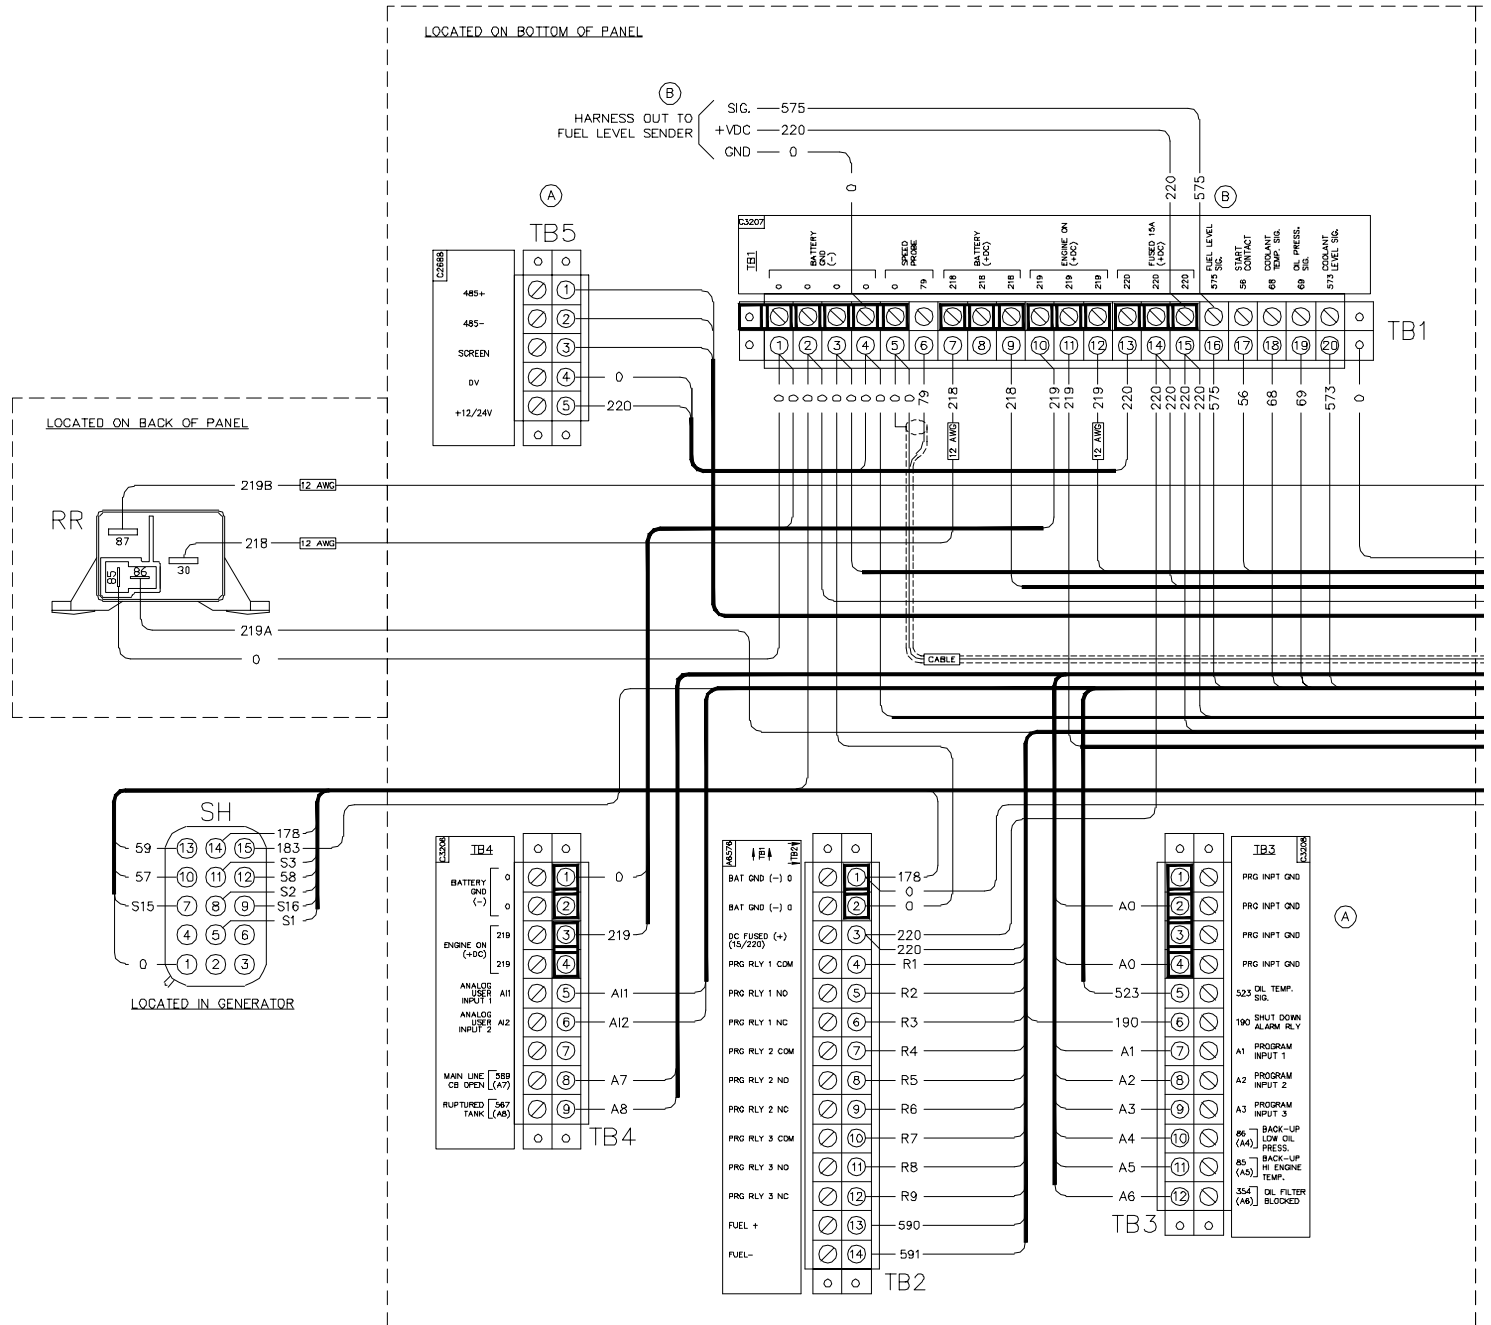


Section 4 – Electrical Data

E Option Control Panels
 Wiring Diagram (For Use With Marathon Alternator) – Drawing No. C8327-B
 For units manufactured starting the 2nd quarter of 2000.

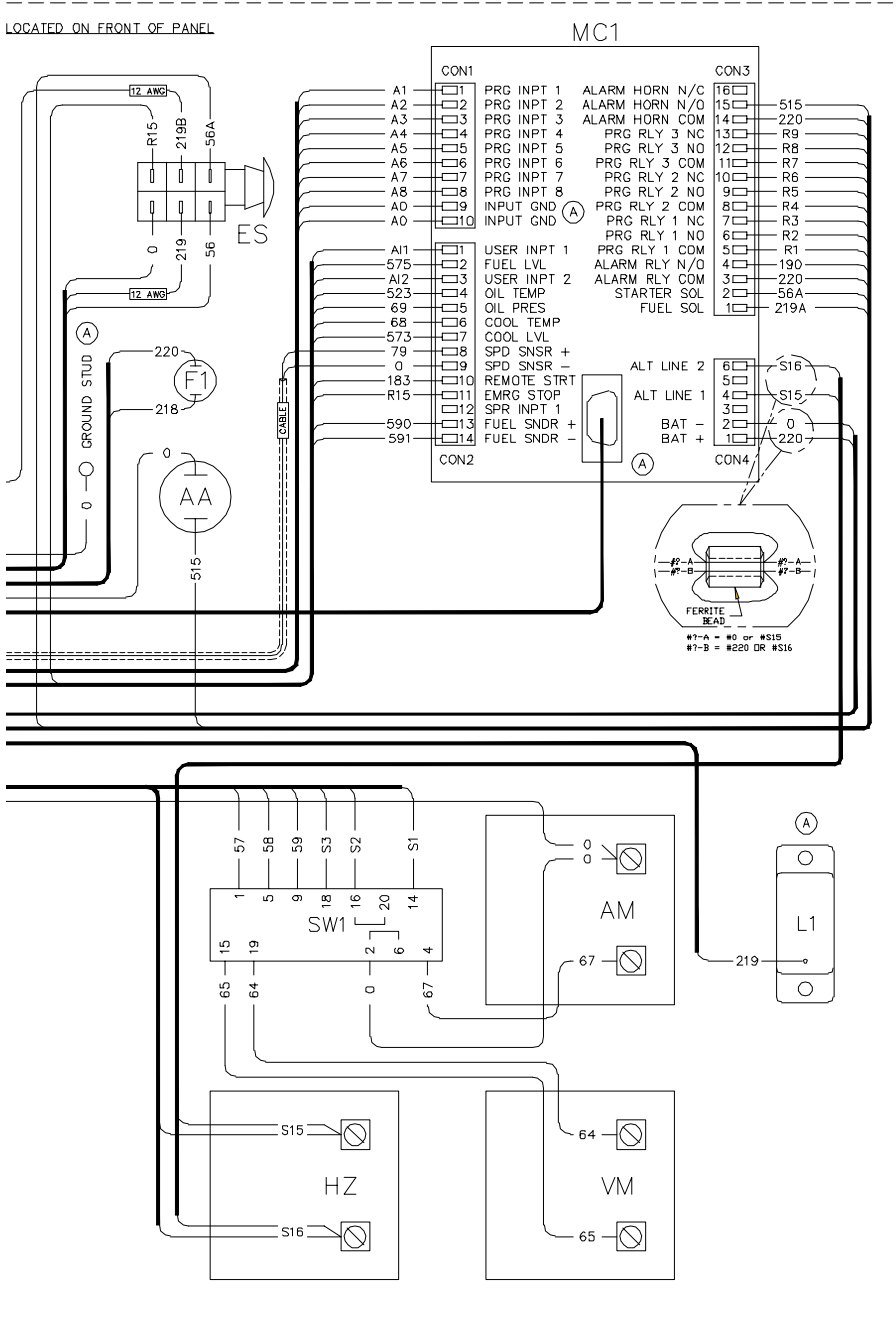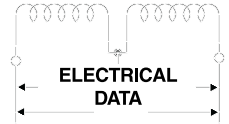


LEGEND

- AA – AUDIBLE ALARM
- AM – AMMETER
- CON1 – PLUG 3.5 10 POS
- CON2 – PLUG 3.5 14 POS
- CON3 – PLUG 3.5 16 POS
- CON4 – PLUG 3.5 6 POS
- ES – EMERGENCY STOP SWITCH
- F1 – 15 AMP FUSE
- HZ – FREQUENCY METER
- L1 – PANEL LAMP
- MC1 – E-PANEL CONTROLLER ASSEMBLY
- RR – RUN RELAY
- SH – SOCKET HOUSING(MALE/15 CKT)
- SW1 – VOLT/AMMETER SWITCH
- TB1 – TERMINAL BLOCK 1(20 POS)
- TB2 – TERMINAL BLOCK 2(12 POS)
- TB3 – TERMINAL BLOCK 3(12 POS)
- TB4 – TERMINAL BLOCK 4(9 POS)
- TB5 – TERMINAL BLOCK 5(5 POS)
- VM – VOLTMETER

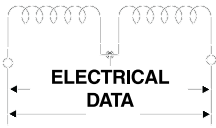

Section 4 – Electrical Data

E Option Control Panels Schematic Diagram (For Use With Marathon Alternator) – Drawing No. C8326-B For units manufactured starting the 2nd quarter of 2000.

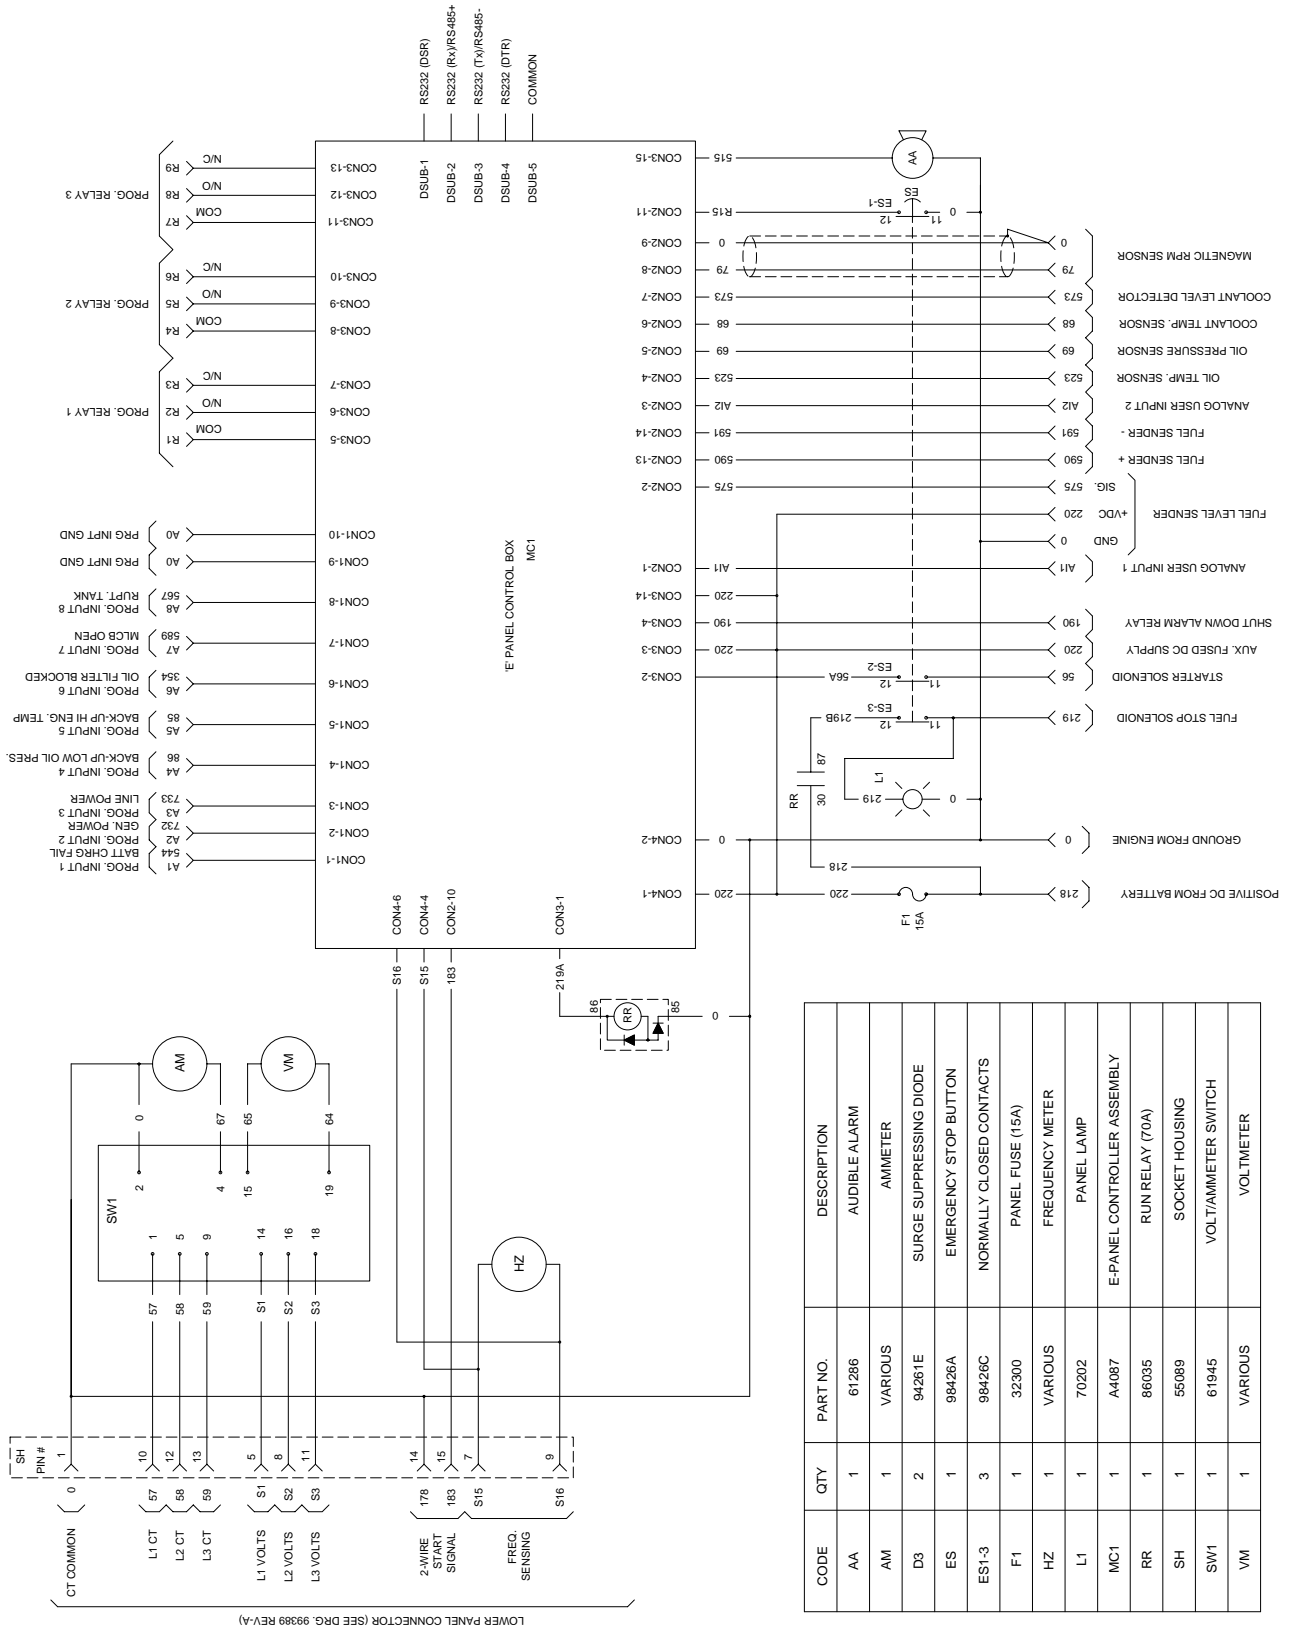

LOWER PANEL CONNECTOR (SEE DRG. 99389 REV-A)



GenLink® Communications Troubleshooting Flowchart

TABLE A

Dip Switch	Setting
1	Up
2	Down
3	Down
4	Down
5	Up
6	Up
7	Up
8	Down

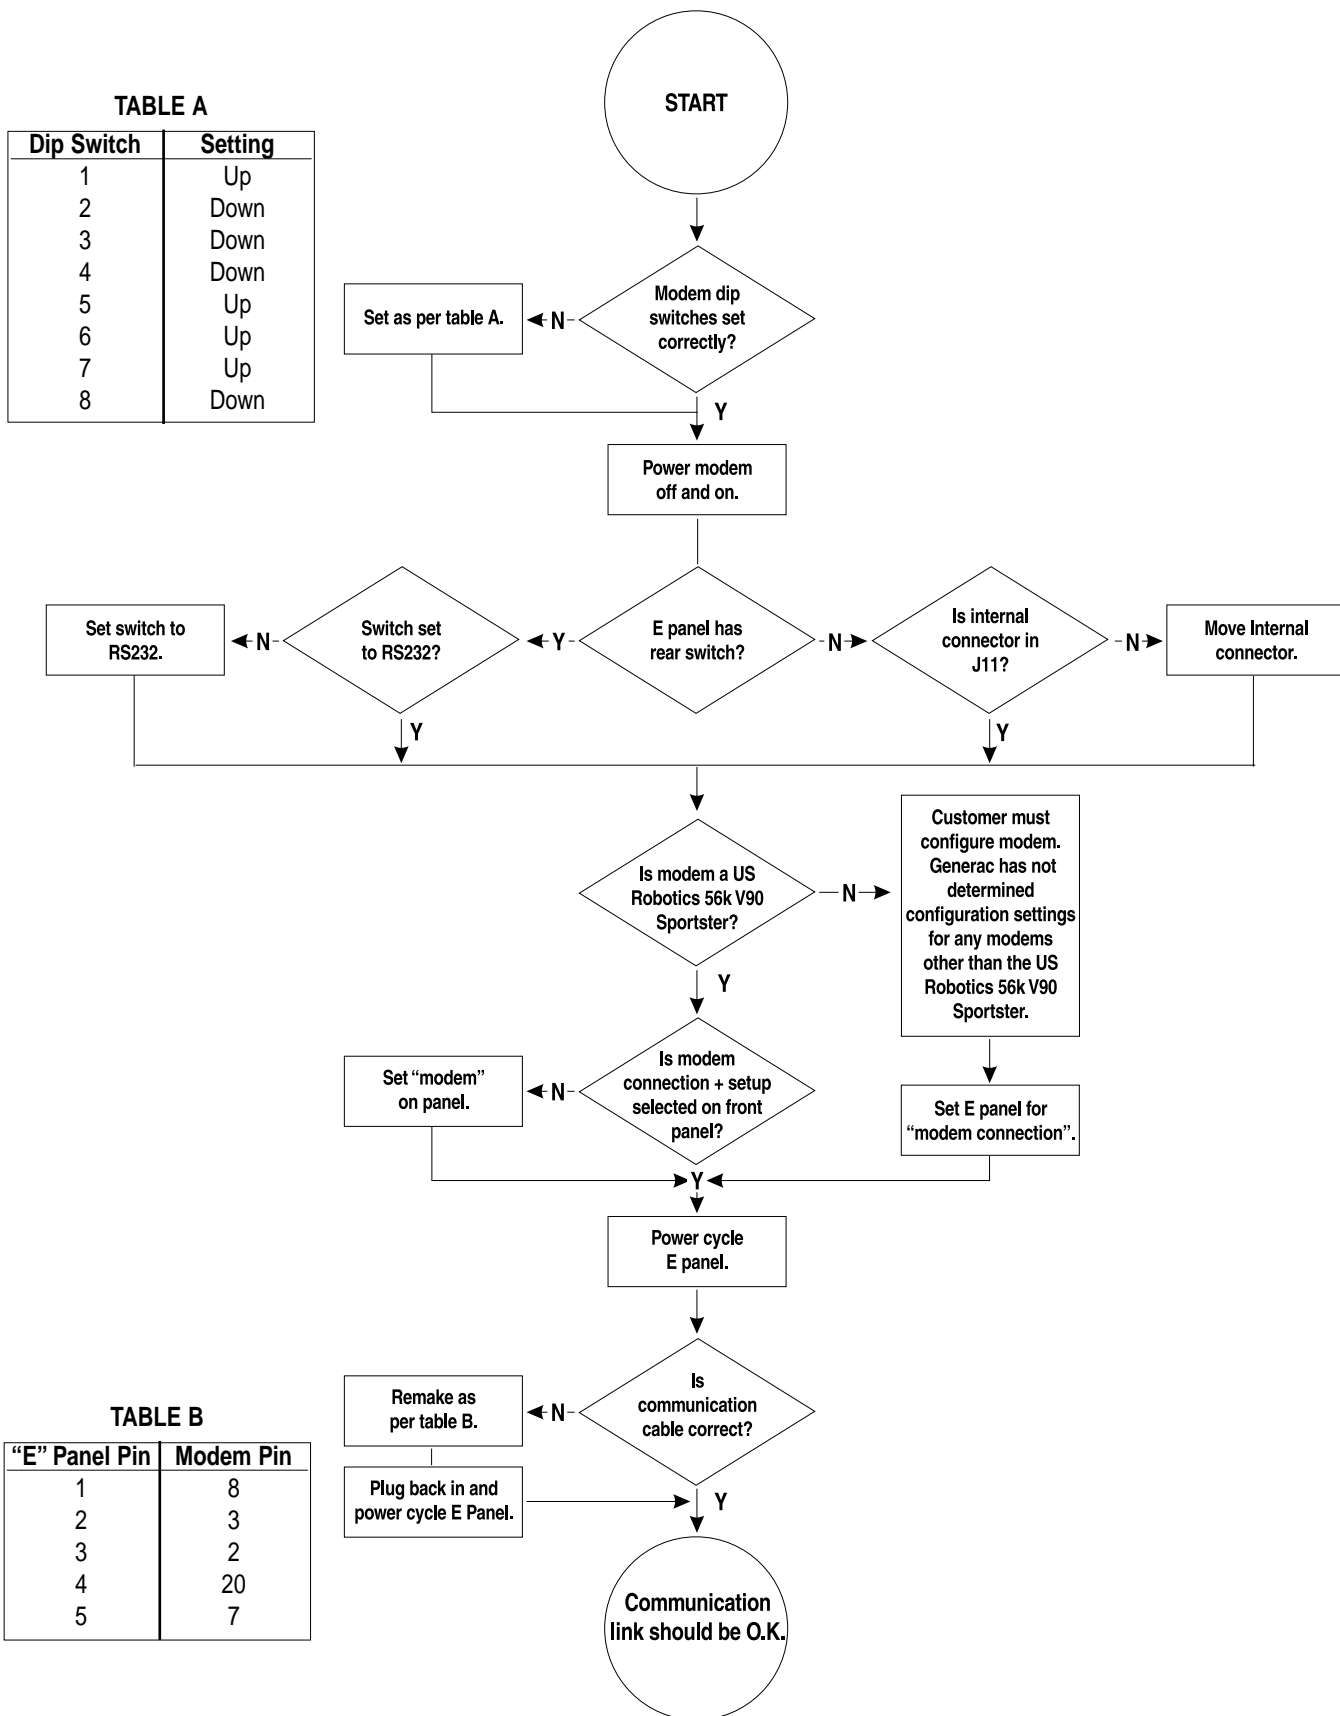


TABLE B





"E" Panel Pin	Modem Pin
1	8
2	3
3	2
4	20
5	7




Section 7 – Exploded Views and Parts Lists

E Option Control Panels

Control Panel (For Use With Marathon Alternator) – Drawing No. D4267B-A For units manufactured with a watertight connector

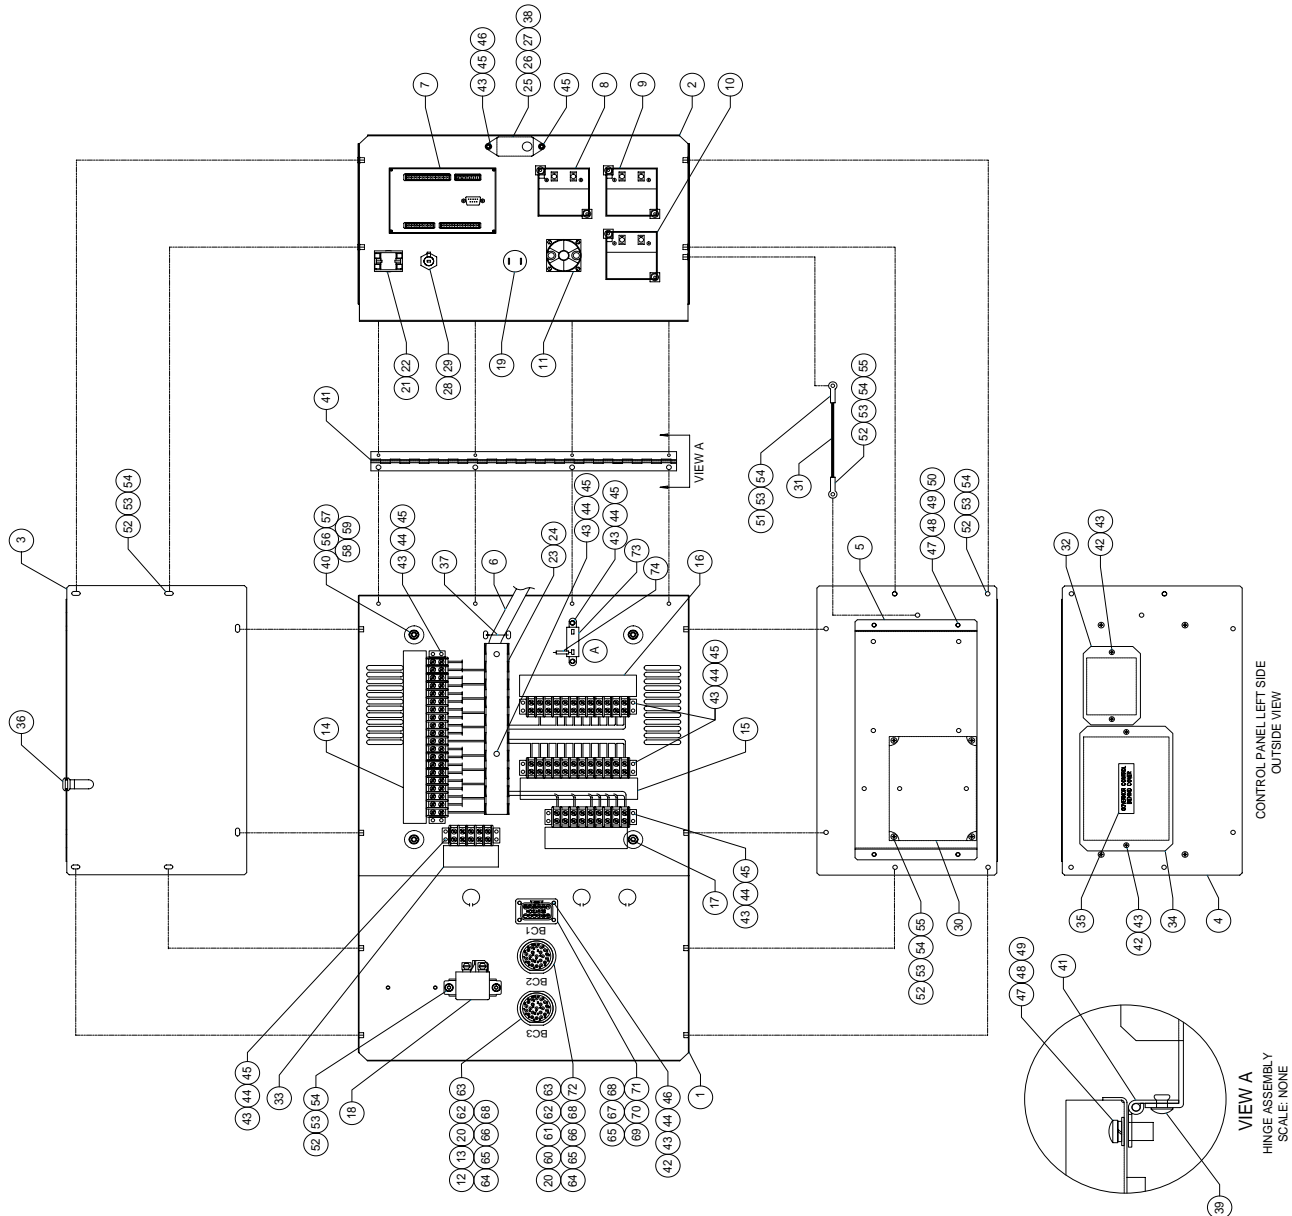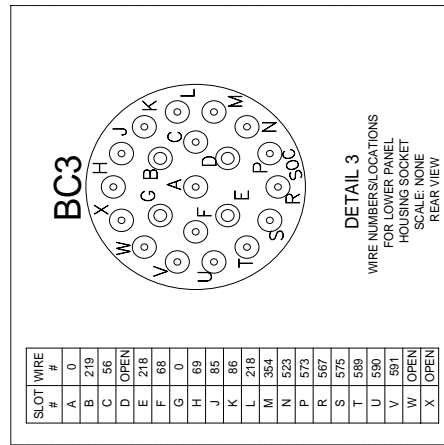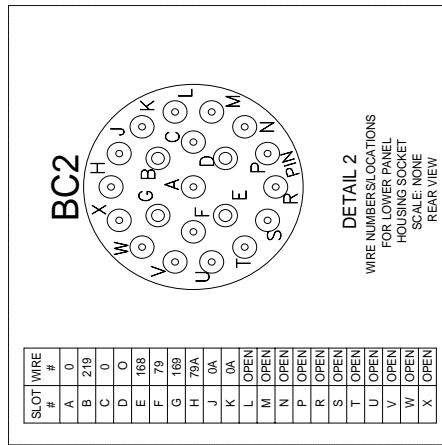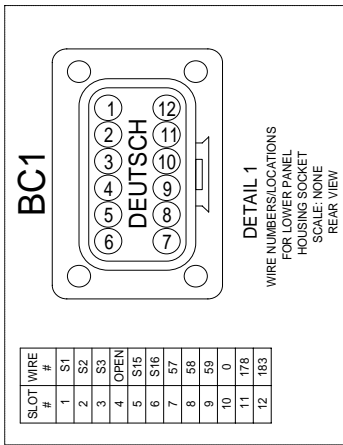

Section 7 – Exploded Views and Parts Lists

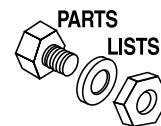

E Option Control Panels Control Panel (For Use With Marathon Alternator) – Drawing No. D4267B-A For units manufactured with a watertight connector

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0D4650	1	"E" PANEL BOTTOM/BACK W/TCONN	36	030809	1	GROMMET 11/16 X 1/8 X 7/16
2	0C3872	1	FRNT E PANEL 400>	37	029333	1	TIE WRAP 7.4"X.19" NATL UL
3	0A6322	1	PANEL RIGHT SIDE E	38	074130	1	LUG DIS SN-PLG I-T 22-18 CU
4	0A6321	1	PANEL LEFT SIDE E	39	036261	4	RIVET POP .125 X .129-.133/#30
5	0A6323	1	CHASSIS, AVR & E-GOV	40	040479	4	MOUNT VIBR 1.00X 1.00X 1/4-20
6	0D4267D	1	HARNESS,"E" CONTROL PNL WT CON	41	0A2273	1	HINGE, RAM PANEL
7	0A4087	1	MSTR CTRL BOX E-PNL	42	036901	8	SCREW PPHM #6-32 X 3/8
8	070060	1	AMMETER 0-800	43	022155	13	WASHER LOCK #6
	0A6798A	1	AMMETER 0-1600	44	022985	10	WASHER FLAT #6 ZINC
	0A6798B	1	AMMETER 0-2000	45	0C2428	16	SCREW PHTT #6-32 X 1/2 ZYC
9	070043	1	VOLTMETER 0-300V	46	022188	6	NUT HEX #6-32 STEEL
	070044	1	VOLTMETER 0-600V	47	036918	8	SCREW PPHM #8-32 X 1/2
	082404	1	VOLTMETER 0-750V	48	022264	8	WASHER LOCK M4
10	0C1212C	1	FREQUENCY METER 120V, 55-65HZ	49	038150	8	WASHER FLAT #8 ZINC
	0C1212B	1	FREQUENCY METER 277V, 55-65HZ	50	022471	4	NUT HEX #8-32 STEEL
	0C1212A	1	FREQUENCY METER 346V, 55-65HZ	51	033120	1	SCREW HHC #10-32 X 3/8
	070042A	1	FREQUENCY METER 240V, 45-55HZ	52	033121	17	SCREW HHC #10-32 X 1/2
11	074386	1	SWITCH SELECT VOLT/AMP 3PH	53	022152	20	WASHER LOCK #10
12	0D4654	1	CONN DEUTSCH PLUG 21 PIN	54	023897	20	WASHER FLAT #10 ZINC
13	0D4655	1	CONN DEUTSCH RECEPT 21 PIN	55	022158	7	NUT HEX #10-32 STEEL
14	0C3207	1	DECAL TSTRIP 1 E PNL	56	022287	4	SCREW HHC 1/4-20 X 3/4 G5
15	0A6576	1	DECAL TSTRIP 2 E PNL	57	022097	4	WASHER LOCK M6-1/4
16	0C3208	1	DECAL TSTRIP 3 E PNL	58	022473	4	97245A FLAT 1/4 ZINC
17	0C3206	1	DECAL TSTRIP 4 E PNL	59	047246	4	FLAT WASHER SPECIAL
18	0C4110	1	RELAY 24V 50A W/DIODE	60	0C8237	1	CONN DTCH HDP24-21PN
19	061286	1	SOUNALERT, BUZZER	61	0C8238	1	CONN DTCH HDP26-21SN
20	0C8243	2	WASHER LOCK HDPDEUTSCH	62	0C8241	3	PIN SIZE 12 DEUTSCH
21	098426A	1	SWITCH EMERG PB HEAD	63	0C8242	4	SOCKET SZ 12 DEUTSCH
22	098426C	3	SWITCH EMERG PB N.C.	64	0C8244	2	NUT, HDP DEUTSCH
23	091472	9.5"	DUCT WIRING 1X1.5 6 FT	65	0C5144	15	CONN DEUTSCH PIN #16-18 BLKHD
24	091472A	9.5"	COVER WIRE DUCT 1 IN	66	0D4651	15	PIN SIZE 14-16 1060-14-0122
25	083287	1	LIGHT HLDR CLR LNS W/O BULB	67	0C5137	1	CONN DEUTSCH RECEPT BK/FLN
26	083288	1	LIGHT 28VDC .17A MIN BAYNT MNT	68	0C5141	1	CONN DEUTSCH GASKET BLKHD
27	070082	1	BLOCKER LIGHT	69	0C5142	1	CONN DEUTSCH RECEPT WDGE BLKHD
28	032300	1	HOLDER FUSE	70	0C5145	1	CONN DEUTSCH PLUG BLKHD BLK
29	022676	1	FUSE 15A X AGC15	71	0C5148	1	CONN DEUTSCH WEDGE LOCK 12-WAY
30	0D4167	1	CONTROLLER,B-C#:DPG-2101 (DSL)	72	0C5185	6	CONN DEUTSCH WDGE 3P RECPT DTM
31	0A2275	1	DOOR-STOP RAM PANEL	73	044213	1	RES 10R 5% 12W
32	0A1441B	1	COVER PLATE, AVR	74	025192	1	RECTIFIER MSC 2A 600V 1N5062
33	0C2688	1	DECAL TERM STRIP TB4				
34	0A1441C	1	COVER PLATE EGOV				
35	0A3394	1	DECAL ELEC GOVERNOR				

Section 7 – Exploded Views and Parts Lists


**E Option Control Panels
Control Panel (For Use With Generac Alternator) – Drawing No. A6325-L
For units manufactured prior to the 2nd quarter of 2000.**

TABLE A-FIELD BOOST RESISTOR DATA	
ALL DIRECTLY EXCITED MACHINES	5 OHM 25W
UPTO 100KW WITH 12 OR 24V DC SYSTEMS	P/N: 48352
ALL BRUSHLESS MACHINES	25 OHM 25W
UPTO 100KW WITH 12V DC SYSTEMS	P/N: 82405
ALL BRUSHLESS MACHINES	50 OHM 25W
UPTO 100KW WITH 24V DC SYSTEMS	P/N: 83364
ALL BRUSHLESS MACHINES	75 OHM 25W
UPTO 100KW WITH 12 OR 24V DC SYSTEMS	P/N: 86266




TABLE B-AVR POWER(DPE) CIRCUIT BREAKER DATA	
ALL DIRECTLY EXCITED MACHINES	7A
19 TO 45KW	P/N: 48467
ALL BRUSHLESS MACHINES	5.5A
19 TO 26KW	P/N: 54450
ALL BRUSHLESS MACHINES	6.0A
21 TO 41KW	P/N: 48505
ALL BRUSHLESS MACHINES	4.5A
45 TO 100KW	P/N: 48476
ALL BRUSHLESS MACHINES	4.5A
OVER 100KW	P/N: 48476

TABLE C-AVR/ELECTRONIC GOVERNOR CONTROLLER DATA	
ALL 60HZ MACHINES WITH GENERAC ALTERNATORS USE AUTOMATIC VOLTAGE REGULATOR(AVR)	P/N: 67680
ALL 50HZ MACHINES WITH GENERAC ALTERNATORS USE AUTOMATIC VOLTAGE REGULATOR(AVR)	P/N: 92952
BARBER COLMAN 12V 2500-5000Hz ELECTRONIC GOVERNOR CONTROLLER	P/N: 67709
BARBER COLMAN 24V 2500-5000Hz ELECTRONIC GOVERNOR CONTROLLER	P/N: 67710
BARBER COLMAN 12V 5000-9500Hz ELECTRONIC GOVERNOR CONTROLLER	P/N: 67711


SLOT #	WIRE #
1	0
2	1
3	2
4	4
5	S1
6	6
7	S15
8	S2
9	S16
10	57
11	S3
12	58
13	59
14	178
15	183

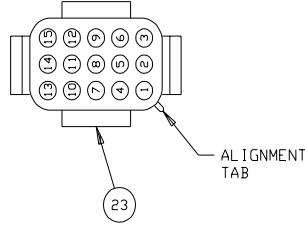

DETAIL 1
WIRE NUMBERS/LOCATIONS
FOR LOWER PANEL
HOUSING SOCKET
SCALE: NONE

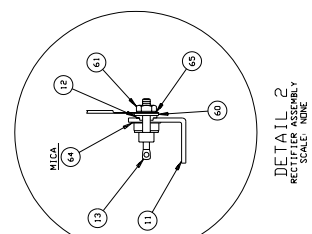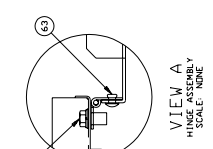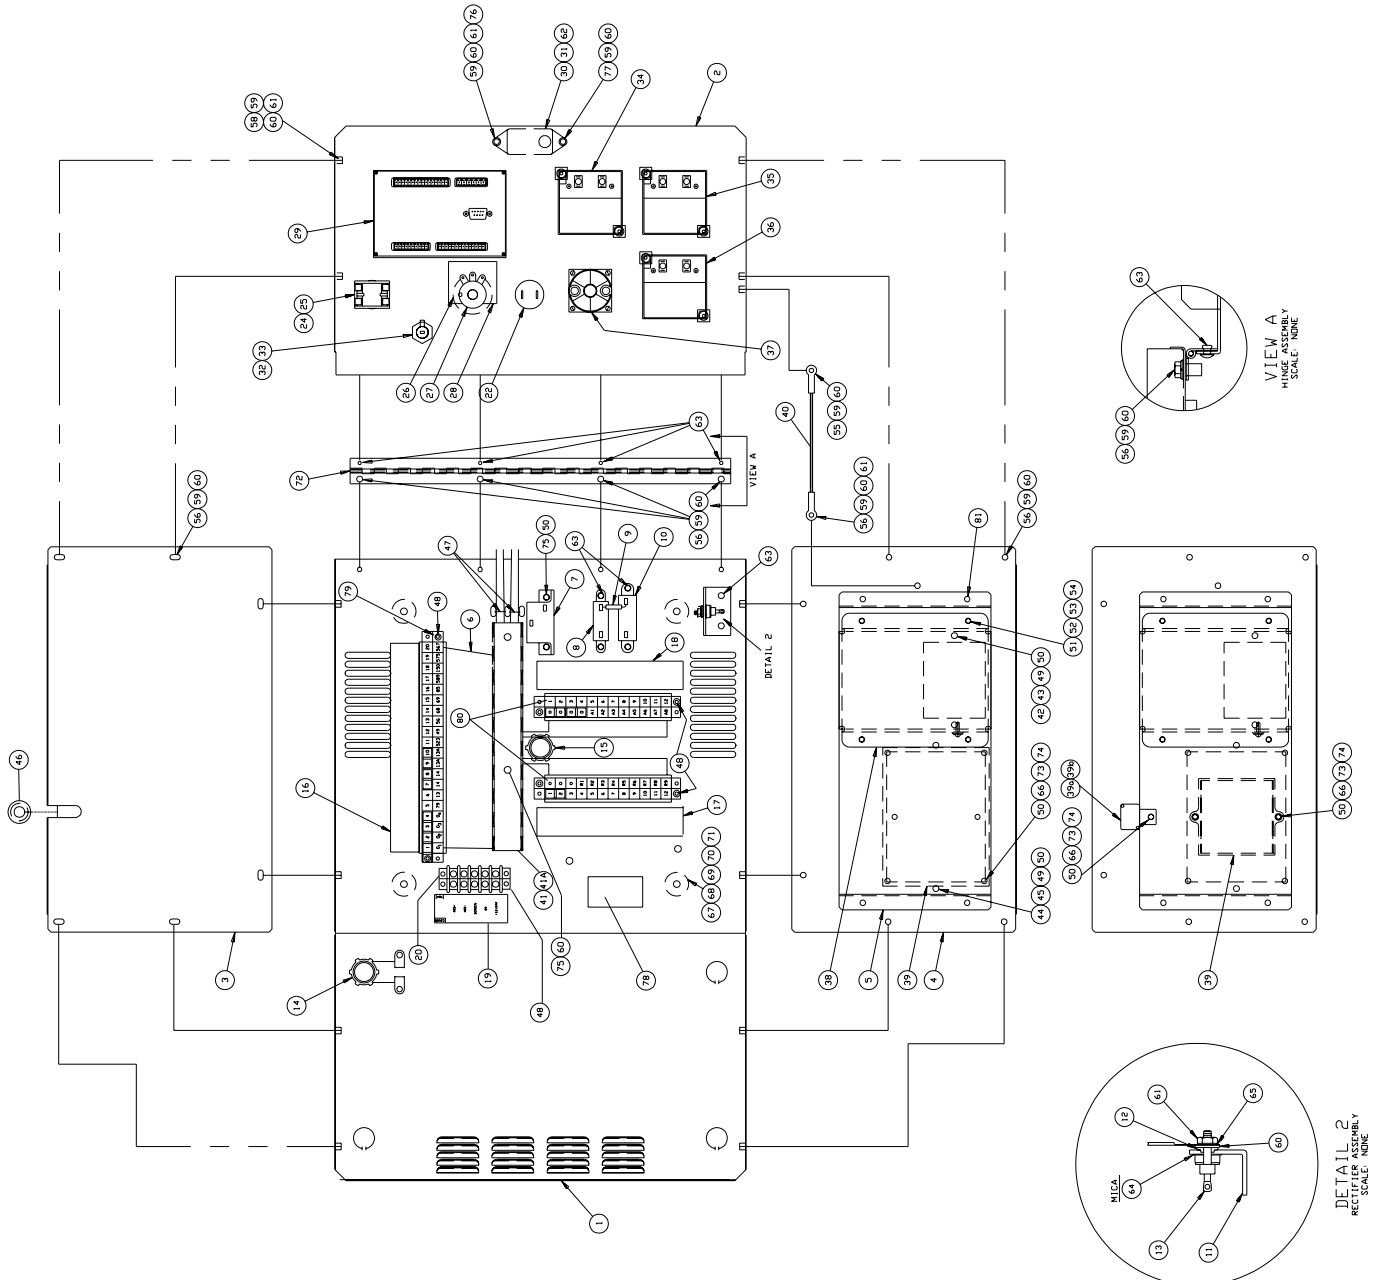

Section 7 – Exploded Views and Parts Lists

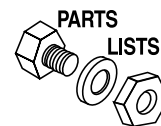


E Option Control Panels Control Panel (For Use With Generac Alternator) – Drawing No. A6325-L For units manufactured prior to the 2nd quarter of 2000.


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0A6320	1	CONTROL PANEL BOTTOM	41	091472	9.5"	WIRE DUCT 1" X 1.5"
2	0A6324	1	CONTROL PANEL FRONT	41A	091472A	9.5"	WIRE DUCT COVER 1"
3	0A6322	1	CONTROL PANEL RIGHT SIDE	42	0A1441B	1	COVER PLATE, AVR
4	0A6321	1	CONTROL PANEL LEFT SIDE	43	0A3393	1	DECAL, AVR COVER
5	0A6323	1	CHASSIS AVR/E GOV.	44	0A1441C	1	COVER PLATE, E-GOV
6	0A6326	1	HARNESS E PNL. MAIN	45	0A3394	1	DECAL, E-GOV COVER
7	SEE TABLE B	1	CIRCUIT BREAKER	46	030809	1	GROMMET 1/8-11/16
8	044213	1	RESISTOR 10 OHM 12W	47	028739	2	TIE WRAP 4"
9	025192	1	DIODE 600V 2A	48	0A1661	8	POP RIVET
10	SEE TABLE A	1	RESISTOR 2	49	036901	3	#6-32 X 3/8" PPHMS
11	055444	1	HEAT SINK	50	022155	9	#6/M3 LOCK WASHER
12	030468	1	STEP WASHER - NYLON	51	036918	4	#8-32 X 1/2" PPHMS
13	049939	1	RECTIFIER	52	022264	4	#8/M4 LOCK WASHER
14	039271	1	90° CONNECTOR 3/4"	53	038150	8	#8/M4 FLAT WASHER
15	034616	1	STRAIGHT CONNECTOR 3/4"	54	022471	4	#8-32 HEX NUT
16	0A3392-C	1	DECAL, TERMINAL STRIP	55	033120	1	#10-32 X 3/8" HHMS
17	0A6576	1	DECAL, TERMINAL STRIP TB2	56	033121	16	#10-32 X 1/2" HHMS
18	0A6577	1	DECAL, TERMINAL STRIP TB3	58	033147	1	#10-32 X 1" HHMS
19	0C2688	1	DECAL, TERMINAL STRIP TB4	59	022152	17	#10/M5 LOCK WASHER
20	048850	1	TERMINAL BLOCK, 5 POS TB4	60	023897	17	#10/M5 FLAT WASHER
22	061286	1	AUDIBLE ALARM	61	022158	4	#10-32 HEX NUT
23	055089	1	HOUSING SOCKET 15 - CKT	62	074130	1	LUG, PIN 4MM 22/18
24	098426A	1	EMERGENCY STOP SWITCH	63	036261	4	POP RIVET
25	098426C	3	CONTACT, EMERGENCY STOP SWITCH	64	070370	2	MICA WASHER
26	071361	1	POTENTIOMETER	65	023762	1	WASHER EXTERNAL SHAKE PROOF
27	050123	1	KNOB	66	022985	6	#6/M3 FLAT WASHER
28	055349	1	INSULATOR	67	040479	4	VIBRATION DAMPENER
29	0A4087	1	MASTER CONTROL BOX	68	022287	4	1/4-20 X 3/4" HHMS
30	070202	1	PANEL LIGHT	69	022097	4	1/4/M6 LOCK WASHER
31	070082	1	LIGHT BLOCKER	70	022473	4	1/4/M6 FLAT WASHER
32	032300	1	FUSE HOLDER	71	047246	4	1/4 FLAT WASHER SPECIAL
33	022676	1	FUSE 15-A	72	0A2273	1	HINGE
34	070045	1	AMMETER	73	036902	4	#6-32 X 1/2" PPHMS
35	070043	1	VOLT METER AC 0-300	74	022188	4	#6-32 HEX NUT
	070044	1	VOLT METER AC 0-600	75	0C2428	20	#6-32 X 1/2" TAPTITE
36	070042	1	FREQUENCY METER 60 HZ	76	024413	1	#10-32 X 1/2" TAPTITE
	070042A	1	FREQUENCY METER 50 HZ	77	0C2720	1	#10-32 X 3/8" TAPTITE
37	061945	1	VOLT/AMP SWITCH	*	0A5705	1	INTERNAL MODULE FUSE, 5A (NOT SHOWN)
38	SEE TABLE C	1	AVR ASSEMBLY	78	060164	1	SOCKET DPDT P& B
39	SEE TABLE C	1	OPTIONAL ELECTRICAL GOVERNOR	79	057335	1	TERMINAL STRIP
39A	098941A	1	HOUSING, CONNECTOR	80	055911	2	TERMINAL STRIP
39B	098942A	1	COVER, CONNECTOR HOUSING	81	0C2212	4	SCREW TAPTITE PH M4-0.7X16 ZYC
40	0A2275	1	FRONT PANEL STAY				

Section 7 – Exploded Views and Parts Lists

**E Option Control Panels
Control Panel (For Use With Marathon Alternator) – Drawing No. C3879-A
For units manufactured prior to the 2nd quarter of 2000.**

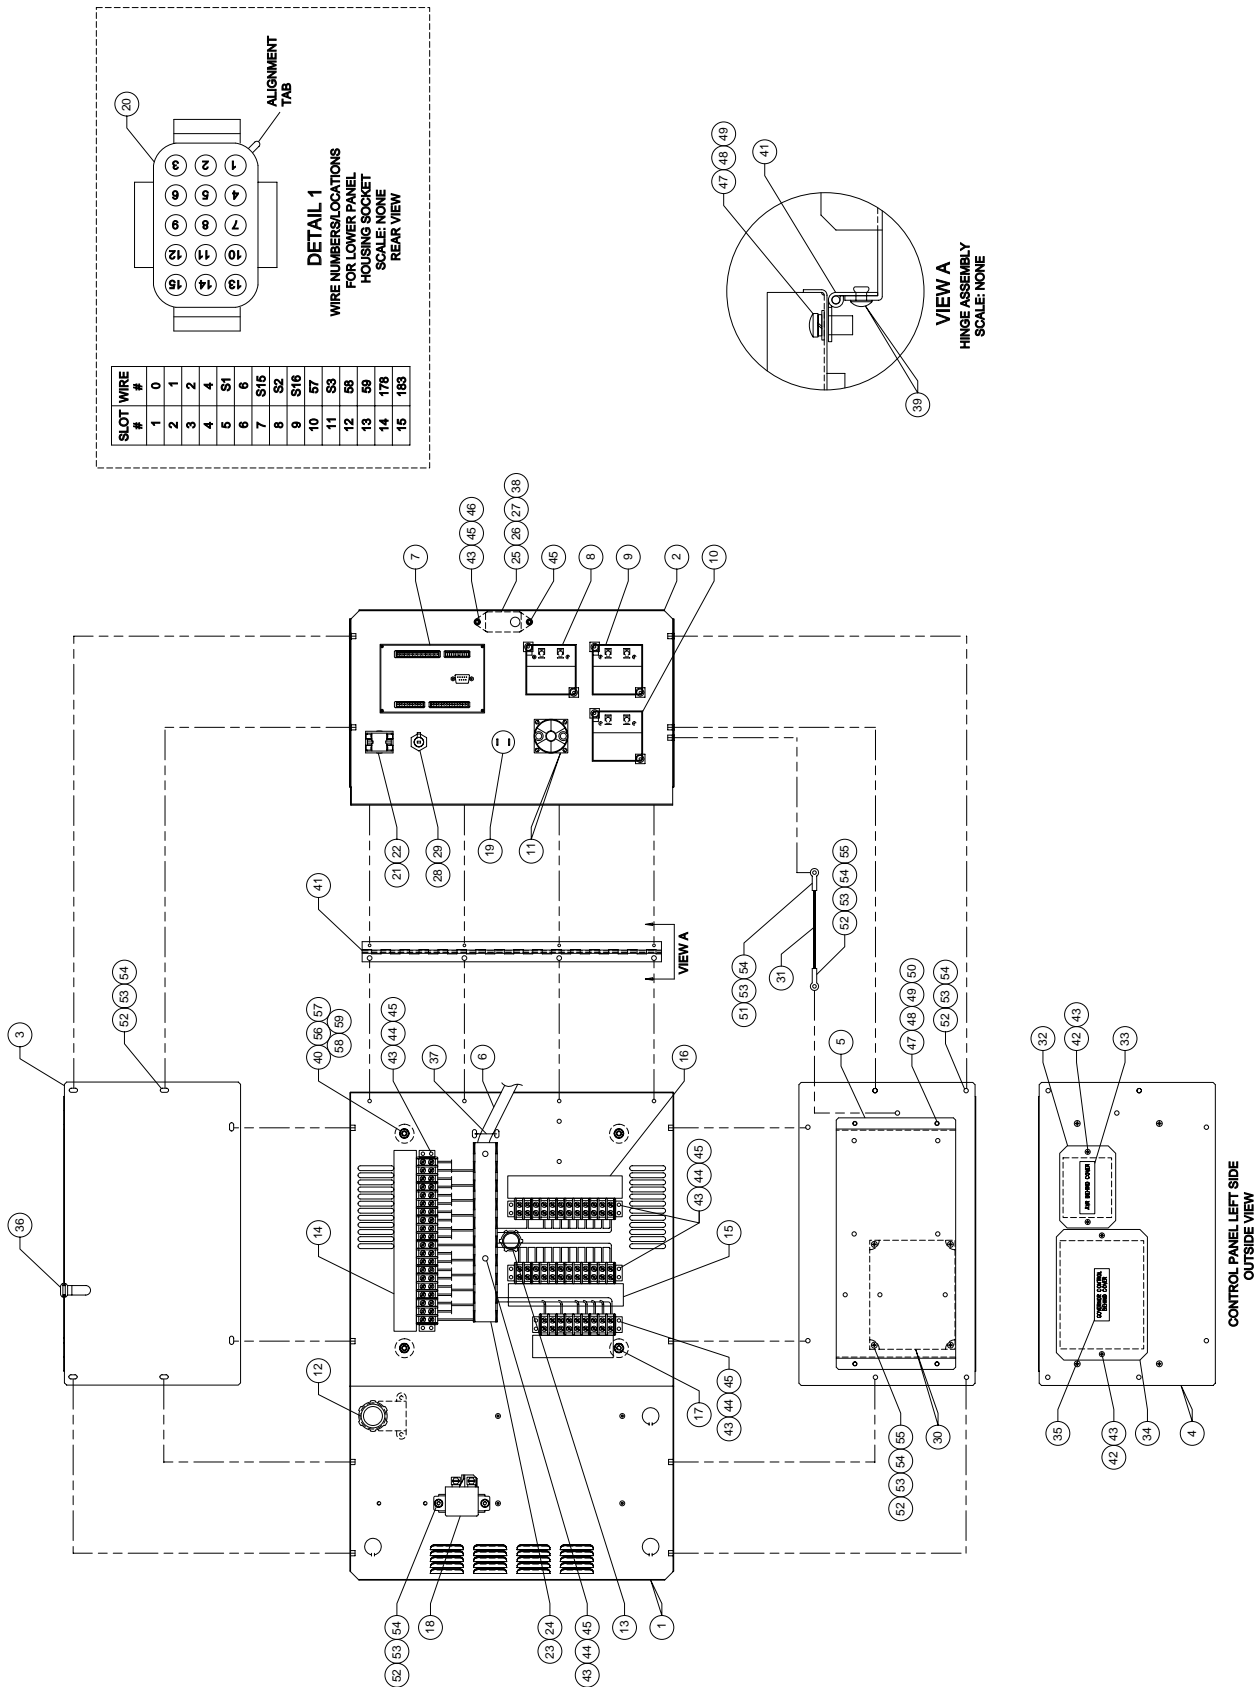


Section 7 – Exploded Views and Parts Lists

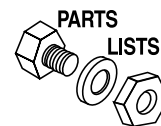

E Option Control Panels Control Panel (For Use With Marathon Alternator) – Drawing No. C3879-A For units manufactured prior to the 2nd quarter of 2000.

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0C2616	1	CONTROL PANEL BOTTOM	31	0A2275	1	FRONT PANEL DOOR STOP
2	0C3872	1	CONTROL PANEL FRONT	32	0A1441B	1	COVER PLATE, AVR
3	0A6322	1	CONTROL PANEL RIGHT SIDE	33	0C1127	1	DECAL, AVR COVER
4	0A6321	1	CONTROL PANEL LEFT SIDE	34	0A1441C	1	COVER PLATE, E-GOV
5	0A6323	1	CHASSIS AVR/E GOV	35	0C1126	1	DECAL, E-GOV COVER
6	0C1377	1	HARNESS E PNL MAIN	36	030809	1	GROMMET 1/8 - 11/16
7	0A4087	1	MASTER CONTROL BOX	37	029333	1	TIE WRAP 7"
8	SEE NOTE	1	AMMETER	38	074130	1	LUG, PIN 4MM 22/18
9	SEE NOTE	1	VOLTMETER AC	39	036261	4	POP RIVET
10	SEE NOTE	1	FREQUENCY METER	40	040479	4	VIBRATION DAMPENER
11	074386	1	VOLT/AMP SWITCH	41	0A2273	1	HINGE
12	0A9243	1	90° CONNECTOR 1"	42	036901	4	#6-32 X 3/8" PPHMS
13	034616	1	STRAIGHT CONNECTOR 3/4"	43	022155	18	#6/M3 LOCK WASHER
14	0C3207	1	DECAL, TERMINAL STRIP TB1	44	022985	12	#6/M3 FLAT WASHER
15	0A6576	1	DECAL, TERMINAL STRIP TB2	45	0C2428	14	#6-32 X 1/2" TAPTITE
16	0C3208	1	DECAL, TERMINAL STRIP TB3	46	022188	1	#6-32 HEX NUT
17	0C3206	1	DECAL, TERMINAL STRIP TB4	47	036918	8	#8-32 X 1/2" PPHMS
18	0C4110	1	RELAY 24V W/DIODE 50A	48	022264	8	#8/M4 LOCK WASHER
19	061286	1	AUDIBLE ALARM	49	038150	8	#8/M4 FLAT WASHER
20	055089	1	HOUSING SOCKET 15-CKT	50	022471	4	#8-32 HEX NUT
21	098426A	1	EMERGENCY STOP SWITCH	51	033120	1	#10-32 X 3/8" HHMS
22	098426C	3	CONTACT, EMERGENCY STOP SWITCH	52	033121	17	#10-32 X 1/2" HHMS
23	091472	9.5"	WIRE DUCT 1" X 1.5"	53	022152	20	#10/M5 LOCK WASHER
24	091472A	9.5"	WIRE DUCT COVER 1"	54	023897	20	#10/M5 FLAT WASHER
25	083287	1	PANEL LIGHT W/O BULB	55	022158	7	#10-32 HEX NUT
26	083288	1	PANEL LIGHT BULB (24VDC)	56	022287	4	1/4-20 X 3/4" HHCS
27	070082	1	LIGHT BLOCKER	57	022097	4	1/4-M6 LOCK WASHER
28	032300	1	FUSE HOLDER	58	022473	4	1/4-M6 FLAT WASHER
29	022676	1	FUSE 15-A	59	047246	4	1/4 FLAT WASHER SPECIAL
30	067710	1	ELECTRONIC GOVERNOR CONTROLLER				


NOTE: CONTACT GENERAC SERVICE FOR CORRECT PART NUMBER FOR YOUR UNIT.

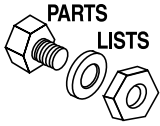





Section 7 – Exploded Views and Parts Lists

E Option Control Panels

Control Panel (For Use With Generac Alternator) – Drawing No. C8459-D
For units manufactured starting the 2nd quarter of 2000.

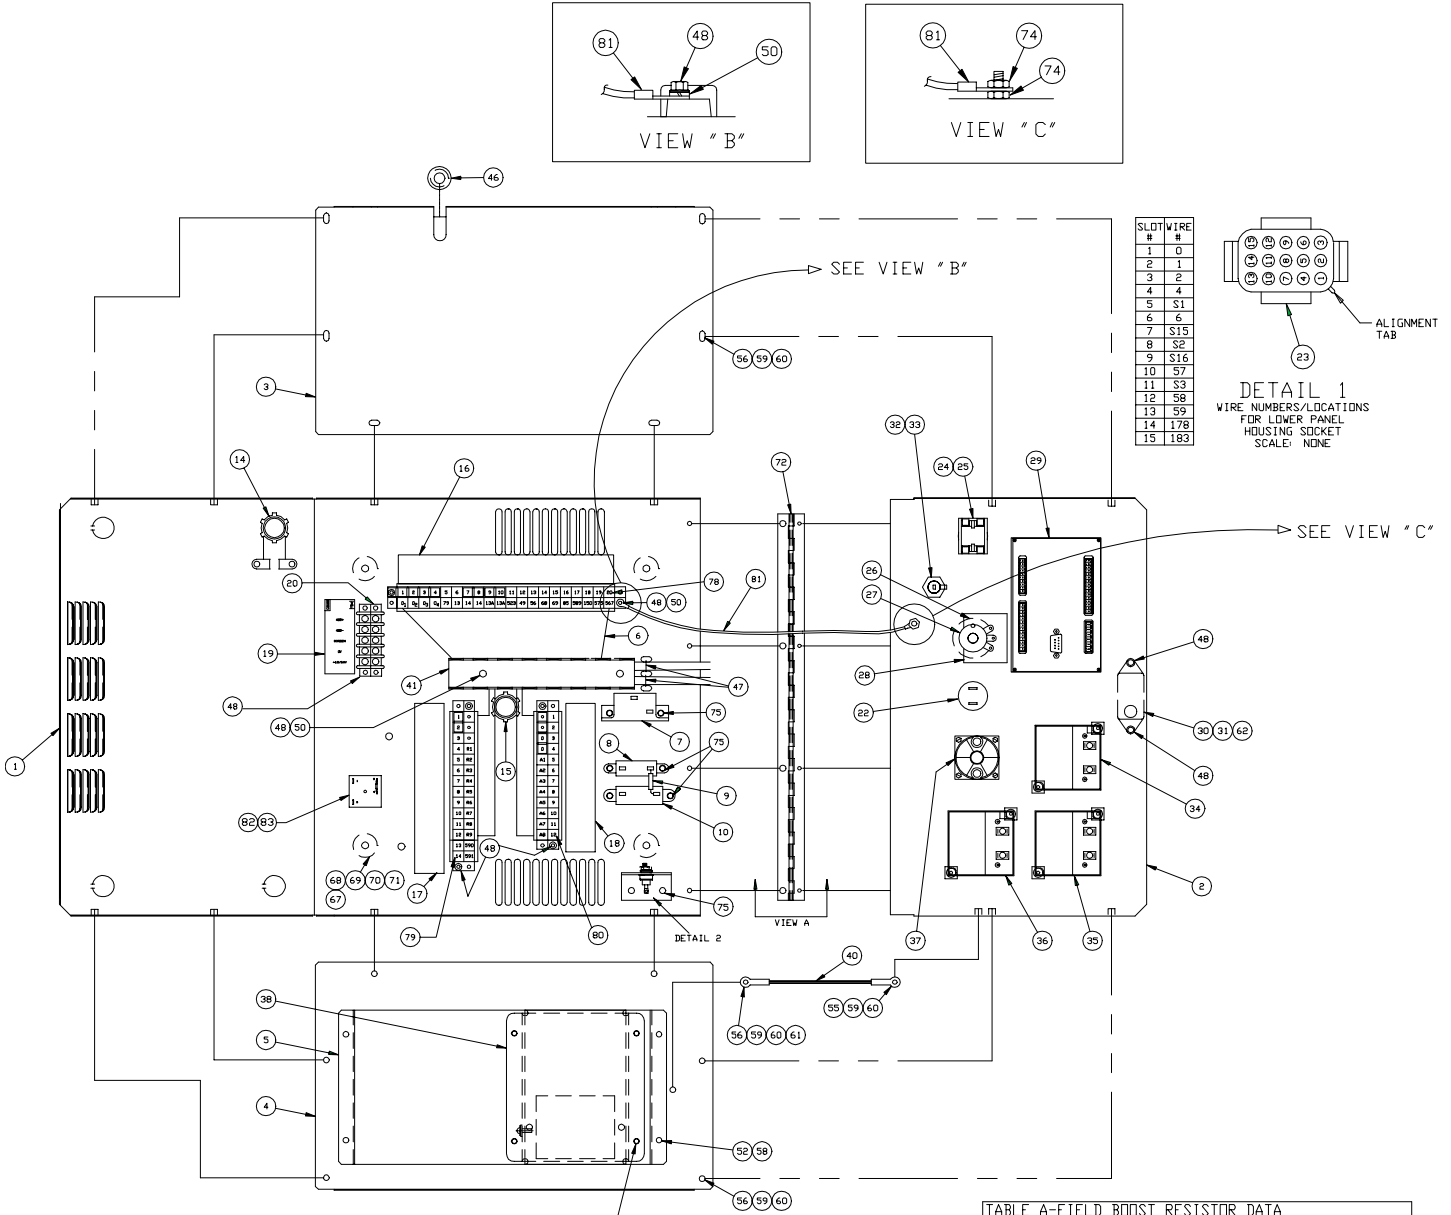


SLOT	WIRE #	WIRE #
1	0	
2	1	
3	2	
4	4	
5	S1	
6	6	
7	S15	
8	S2	
9	S16	
10	S7	
11	S3	
12	S8	
13	S9	
14	178	
15	182	

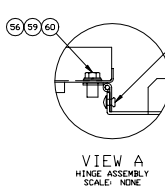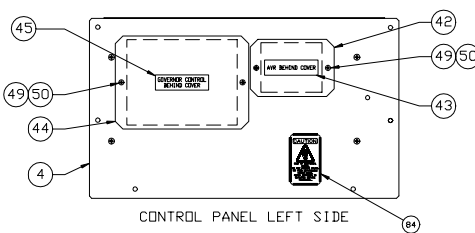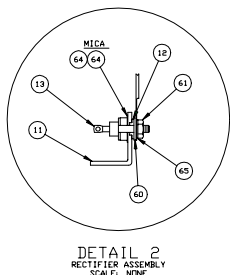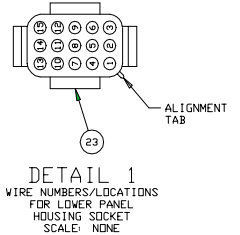

ALL DIRECTLY EXCITED MACHINES	5 DHM 25W
UPTD 100KW WITH 12 OR 24V DC SYSTEMS	P/N: 048352
ALL BRUSHLESS & PME MACHINES	25 DHM 25W
UPTD 100KW WITH 12V DC SYSTEMS	P/N: 057405
ALL BRUSHLESS & PME MACHINES	50 DHM 25W
UPTD 100KW WITH 24V DC SYSTEMS	P/N: 083264
ALL BRUSHLESS & PME MACHINES	75 DHM 25W
OVER 100KW WITH 12 OR 24V DC SYSTEMS	P/N: 086266

ALL DIRECTLY EXCITED MACHINES	7A
19 TO 45KW	P/N: 048467
ALL BRUSHLESS & PME MACHINES	5 SA
19 TO 26KW	P/N: 054450
ALL BRUSHLESS & PME MACHINES	6.0A
21 TO 41KW	P/N: 048505
ALL BRUSHLESS & PME MACHINES	4 SA
45 TO 100KW	P/N: 048476
ALL BRUSHLESS & PME MACHINES	4 SA
OVER 100KW	P/N: 048476

Section 7 – Exploded Views and Parts Lists

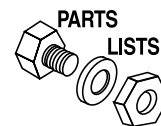


E Option Control Panels Control Panel (For Use With Generac Alternator) – Drawing No. C8459-D For units manufactured starting the 2nd quarter of 2000.

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0A6320	1	CONTROL PANEL BOTTOM		070042A	1	METER FREQUENCY 240V 45-55HZ
2	0A6324	1	CONTROL PANEL FRONT	37	061945	1	SWITCH 6A AMP/V SELECTOR
3	0A6322	1	CONTROL PANEL RIGHT SIDE	38	067680	1	ASSY VOLTAGE REGULATOR 60HZ
4	0A6321	1	CONTROL PANEL LEFT SIDE		092952	1	ASSY VOLTAGE REGULATOR 50HZ
5	0A6323	1	CHASSIS AVR/E GOV.	40	0A2275	1	DOOR-STOP RAM PANEL
6	0C8320	1	HARNESS E PNL. WAUK (W/FS)	41	0A4200A	1	TRUNKING 180MM
7	SEE TABLE B	1	CIRCUIT BREAKER	42	0A1441B	1	COVER PLATE AVR
8	044213	1	RESIST MISC 10RX12W	43	0C1127	1	DECAL AVR COVER
9	025192	1	RECTIFIER MSC 2A 600V 1N5062	44	0A1441C	1	COVER PLATE E-GOV
10	SEE TABLE A	1	RESISTOR 2	45	0A3394	1	DECAL E-GOV COVER
11	055444	1	HEAT SINK	46	030809	1	GROMMET 11/16 X 1/8 X 7/16
12	030468	1	WASHER STEP NYLON .20	47	028739	2	TIE WRAP 4" WHITE
13	049939	1	RECTIFIER MSC 12A 600V 1N1206R	48	0C2323	12	SCREW PHM SWAGE 6-32X5/8 Z/YC
14	039271	1	FITTING 90DEGREE 3/4	49	036901	4	SCREW PPHM #6-32 X 3/8
15	034616	1	FITTING STRAIGHT 3/4	50	022155	7	WASHER LOCK #6
16	0A3392	1	DECAL TERMINAL STRIP	51	036918	8	SCREW PPHM #8-32 X 1/2
17	0C8229	1	DECAL E PNL TS#2 (W/FS)	52	022264	8	WASHER LOCK M4
18	0A6577	1	DECAL TERMINAL STRIP TB3	53	038150	4	WASHER FLAT #8 ZINC
19	0C2688	1	DECAL TERMINAL STRIP TB4	54	022471	4	NUT HEX #8-32 STEEL
20	048850	REF.	BLOCK TERM 20A 5 X 6 X 1100V	55	033120	1	SCREW HHM 10-32 X 3/8
22	061286	1	AUDIBLE ALARM	56	033121	13	SCREW HHM 10-32 X 1/2
23	055089	1	CONN ELEC AMP M-N-L 15PLUG PNL	58	0A2284	4	SCREW SWAGE 8-32 X 1/2 Z/YC
24	098426A	1	EMERGENCY STOP SWITCH	59	022152	14	WASHER LOCK #10
25	098426C	3	CONTACT, EMERGENCY STOP SWITCH	60	023897	15	WASHER FLAT #10 ZINC
26	071361	1	POTENTIOMETER PNL 5K +/-10% 2.25W	61	022158	2	NUT HEX #10-32 STEEL
27	050123	1	KNOB PLASTIC .25 SHAFT	62	074130	1	LUG DIS SN-PLG I-T 22-18 CU
28	055349	1	INSULATOR	63	036261	4	RIVET POP .125 X .129-.133/#30
29	0A4087	1	MASTER CONTROL BOX	64	070370	2	WASHER MICA .203
30	0C8481	REF.	BULB-PANEL LIGHT-12V	65	023762	1	WASHER SHAKEPROOF EXT #10 STL
	083287	REF.	LIGHT HLDR CLR LNS W/O BULB	67	040479	4	MOUNT VIBR 1.00X1.00X1/4-20
	083288	REF.	LIGHT 28VDC .17A MIN BAYNT MNT	68	022287	4	SCREW HHC 1/4-20 X 3/4 G5
31	070082	1	LIGHT BLOCKER	69	022097	4	WASHER LOCK M6-1/4
32	032300	1	FUSE HOLDER	70	022473	4	WASHER FLAT M6-1/4 ZINC
33	022676	1	FUSE 15A X AGC15	71	047246	4	WASHER FLAT 1/4 SPECIAL
34	070054	1	AMMETER AC 0-50	72	0A2273	1	HINGE
	070055	1	AMMETER AC 0-100	74	022188	2	NUT HEX #6-32 STEEL
	070056	1	AMMETER AC 0-150	75	0C2428	8	SCREW TAPTITE PH #6-32X1/2 ZYC
	070057	1	AMMETER AC 0-300	*	0A5705	1	FUSE 5A X LTTL215005 HLDRA4017 (NOT SHOWN)
	070058	1	AMMETER AC 0-400	78	057335	REF.	BLOCK TERM 20A 20 X 6 X 1100V
	070059	1	AMMETER AC 0-600	79	0C4167	REF.	BLOCK TERM 20A 14 X 6 X 1100V
	070060	1	AMMETER AC 0-800	80	055911	REF.	BLOCK TERM 20A 12 X 6 X 1100V
	075323	1	AMMETER AC 0-1000	81	0441140156	REF.	WIRE ASSEMBLY
	075324	1	AMMETER AC 0-1600	82	084717	1	ASSY TIME DELAY (13.3L GAS ONLY)
	075325	1	AMMETER AC 0-2000	83	036908	1	SCREW PPHM #6-32 X 1-1/4 (13.3L GAS ONLY)
35	070043	1	METER VOLT AC 0-300	84	0C1229	1	DECAL WARNING
	070044	1	METER VOLT AC 0-600				
36	070042	1	METER FREQUENCY 55-65HZ				




Section 7 – Exploded Views and Parts Lists

E Option Control Panels Control Panel (For Use With Marathon Alternator) – Drawing No. C8460-B For units manufactured starting the 2nd quarter of 2000.

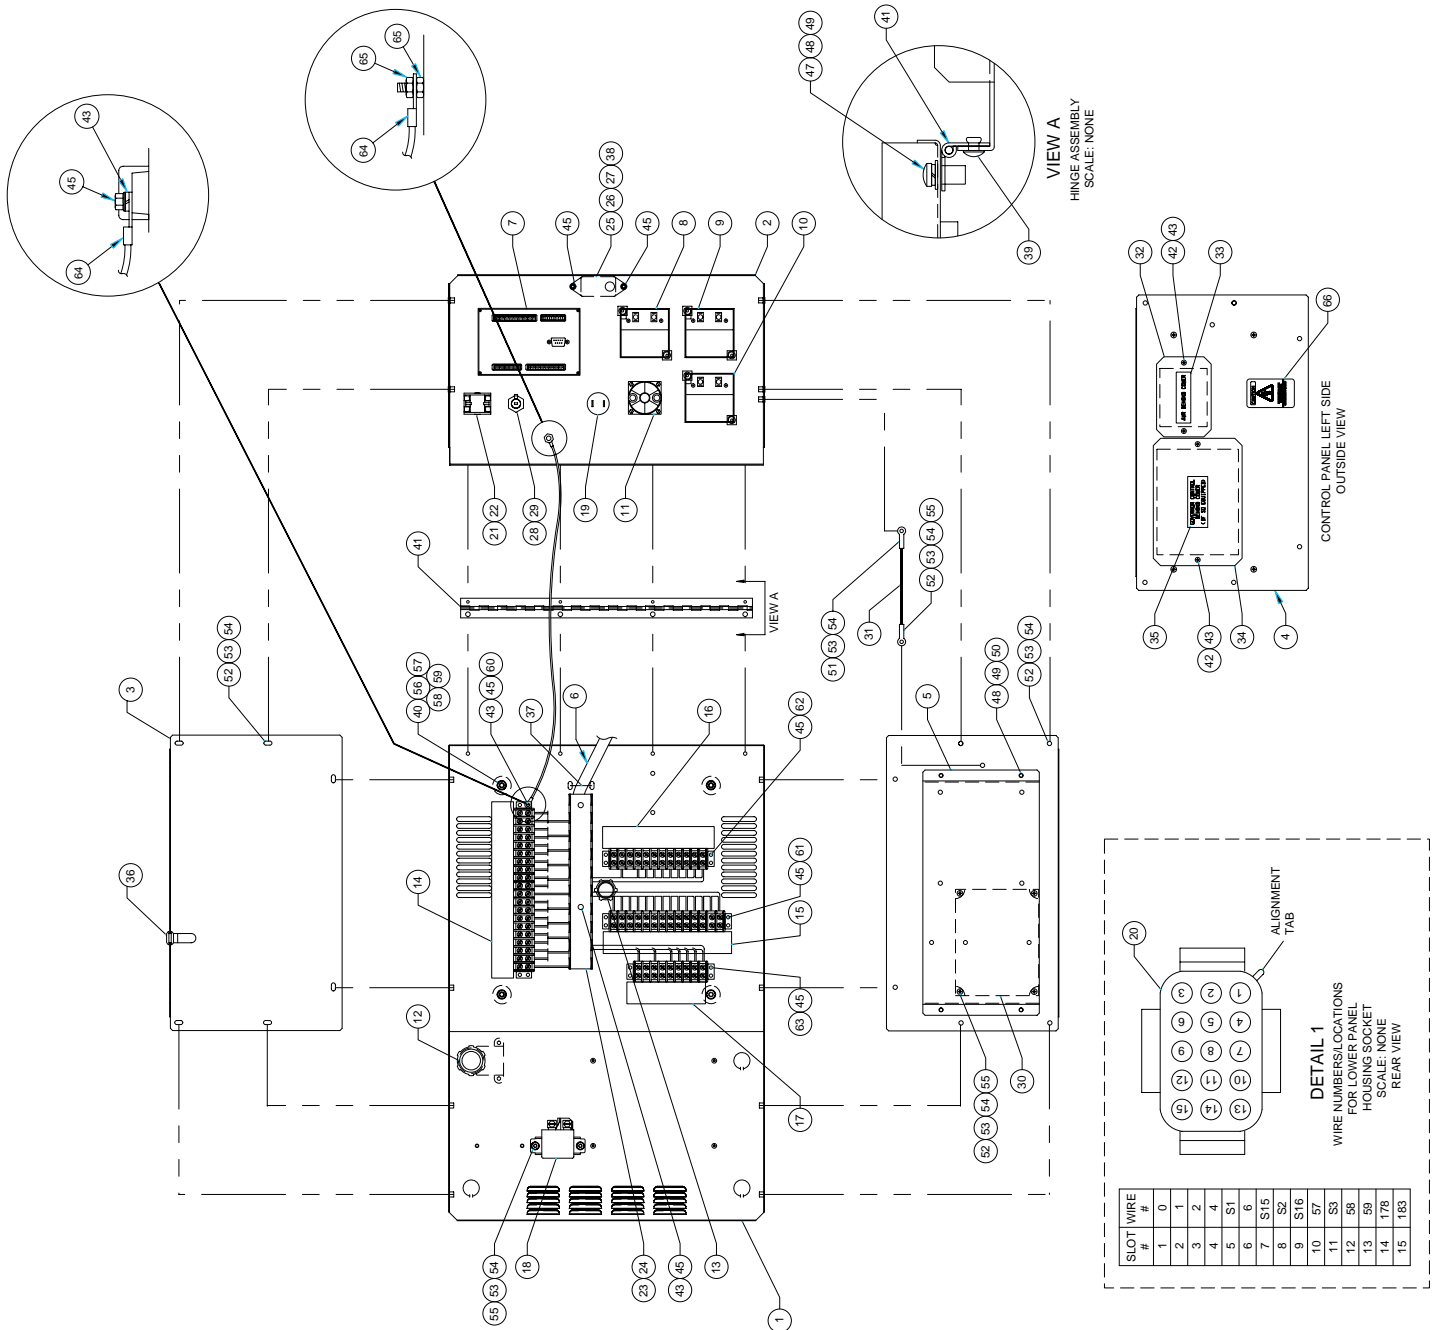

Section 7 – Exploded Views and Parts Lists

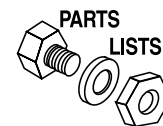

E Option Control Panels Control Panel (For Use With Marathon Alternator) – Drawing No. C8460-B For units manufactured starting the 2nd quarter of 2000.

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0C2616	1	CONTROL PANEL BOTTOM	35	0A3394	1	DECAL ELECTRONIC GOVERNOR
2	0C3872	1	CONTROL PANEL FRONT	36	030809	1	GROMMET 11/16 X 1/8 X 7/16
3	0A6322	1	CONTROL PANEL RIGHT SIDE	37	029333	1	TIE WRAP 7" WHITE
4	0A6321	1	CONTROL PANEL LEFT SIDE	38	074130	1	LUG DIS SN-PLG I-T 22-18 CU
5	0A6323	1	CHASSIS AVR/ E GOV	39	036261	4	RIVET POP .125 X .129-.133/#30
6	0C8328	1	HARNESS E PANEL MAIN	40	040479	4	MOUNT VIBR 1.00 X 1.00 X 1/4-20
7	0A4087	1	MASTER CONTROL BOX	41	0A2273	1	HINGE RAM PANEL
8	SEE NOTE	1	AMMETER	42	036901	4	SCREW PPHM #6-32 X 3/8
9	SEE NOTE	1	VOLT METER AC	43	022155	7	WASHER LOCK #6
10	SEE NOTE	1	FREQUENCY METER	45	0C2323	12	SCREW TAPTITE PH 6-32 X 5/8 ZYC
11	074386	1	SWITCH VOLT/AMP	47	036918	4	SCREW PPHM #8-32 X 1/2
12	0A9234		CONNECTOR 90 DEGREE ELBOW	48	022264	8	WASHER LOCK M4
13	034616	1	FITTING STRAIGHT 3/4	49	038150	4	WASHER FLAT M4
14	0C3207	1	DECAL TERM STRIP TB1	50	0A2284	4	SCREW SWAGE 8-32 X 1/2 Z/YC
15	0C8229	1	DECAL TERM STRIP TB2	51	033120	1	SCREW HHM 10-32 X 3/8
16	0C3208	1	DECAL TERM STRIP TB3	52	033121	17	SCREW HHM 10-32 X 1/2
17	0C3206	1	DECAL TERM STRIP TB4	53	022152	20	WASHER LOCK #10
18	0C4110	1	RELAY 24V 50A W/DIODE	54	023897	20	WASHER FLAT #10 ZINC
19	061286	1	ALARM AUDIBLE	55	022158	6	NUT HEX #10-32 STEEL
20	055089	1	CONN ELEC AMP M-N-L 15PLUG PNL	56	022287	4	SCREW HHC 1/4-20 X 3/4 G5
21	098426A	1	SWITCH EMERGENCY STOP	57	022097	4	WASHER LOCK M6-1/4
22	098426C	3	CONTACT EMERGENCY STOP SWITCH	58	022473	4	WASHER FLAT M6-1/4 ZINC
23	091472	9.5"	WIRE DUCT1 X 1.5	59	047246	4	WASHER FLAT 1/4 SPECIAL
24	091472A	9.5"	WIRE DUCT COVER 1"	60	057335	1	BLOCK TERM 20 POS TB1
25	083287	1	LIGHT HLDR CLR LNS W/O BULB	61	0C4167	1	BLOCK TERM 20A 14 X 6 X 1100V
26	083288	1	LIGHT 28VDC .17A MIN BAYNT MNT	62	055911	1	BLOCK TERM 20A 12 X 6 X 1100V
27	070082	1	LIGHT BLOCKER	63	061520	1	BLOCK TERM 20A 9 X 6 X 1100V
28	032300	1	FUSE HOLDER	64	0441140156	1	WIRE ASSY 18AWG #0
29	022676	1	FUSE 15A X AGC15	65	022188	2	NUT HEX #6-32 STEEL
30	067710	1	CONTROLLER ELECTRONIC GOVERNOR	66	0C1229	1	DECAL WARNING
31	0A2275	1	DOOR-STOP RAM PANEL				
32	0A1441B	1	COVER PLATE AVR	NOTE:	CONTACT GENERAC SERVICE FOR CORRECT PART NUMBER FOR YOUR UNIT.		
33	0C1127	1	DECAL AVR COVER				
34	0A1441C	1	COVER PLATE ELECTRONIC GOVERNOR				

GENERAC® POWER SYSTEMS, INC.

P.O. BOX 8
WAUKESHA, WI 53187

Part No. OA7605

Revision 5 (09/13/01)

Printed in U.S.A.