

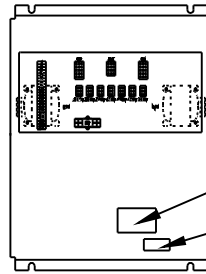
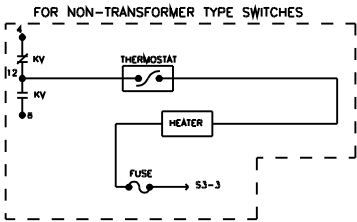


INSTALLATION INSTRUCTIONS (ATC-300) G52 & G53

- 1 MOUNT HEATER ONTO WELDED STUDS LOCATED ON THE BOTTOM OF THE DOOR USING SUPPLIED WIRE TIE NUTS. PRESS NUTS DOWN ONTO THE STUDS.
- 2 MOUNT THE FUSE BLOCK WITH THE LARGER SCREWS PROVIDED IN THE LOCATION SHOWN TO THE RIGHT.
- 3 MOUNT THE THERMOSTAT WITH THE SMALLER SCREWS PROVIDED IN THE LOCATION SHOWN TO THE RIGHT.
- 4 WIRE PER DIAGRAMS BELOW

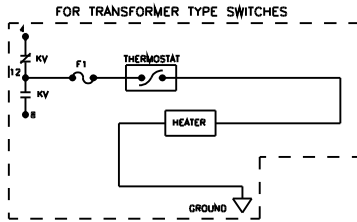

HORIZONTAL PANEL

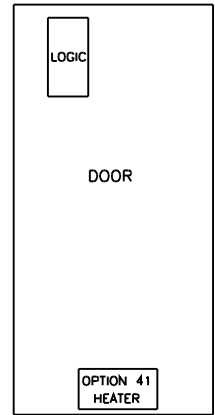

HORIZONTAL AND VERTICAL PANEL DOOR



VERTICAL PANEL

GS-0042 REVISION 6 11/16/2006 100 WATT, 120 VOLT HEATER, THERMOSTAT INSTALLATION	THE INFORMATION ON THIS DOCUMENT IS CREATED BY OUTLER-HAMMER. IT IS DISCLOSED IN CONFIDENCE AND IS ONLY TO BE USED FOR THE PURPOSE IN WHICH IT IS SUPPLIED.		DFTR PETRUSKA	DATE 06/13/2000	Cutler-Hammer	DEWEER PLANT
			APPD LATHROP	DATE	TITLE AUTOMATIC TRANSFER SWITCH 100 WATT, 120 VOLT HEATER, THERMOSTAT INSTALLATION	
			APPD KAHL	DATE	TYPE ATC-300 CONTROLLER	DWG TYPE OUTLINE
	FEDERAL ID NO	PRODUCT CODE 6418	REVISION 5	DWG SIZE A	G.O.	DWG 8160A41