

GE ZENITH Controls

F-14 Replacement of the Micro Switch

Purpose:	To replace a defective Micro Switch
When:	When directed by a service order.

Required Tools & Equipment:

Basic electricians hand tools	PPE
Micro Switch	Rubber insulating gloves class 0
	Safety glasses
	Electrical hazard safety shoes



Danger

HAZARDOUS VOLTAGE
Can Cause Severe Injury or Death

Ensure before the enclosure is opened, you must lockout all energy sources to the ATS.

Do These Steps:

1. *Obtain* the proper documentation.
2. *Open* the front cover.
3. *Place* the disconnect switch to "Inhibit".

GE ZENITH Controls

4. *Disable* the generator start-up circuit.

 **Danger**

HAZARDOUS VOLTAGE
Can Cause Severe Injury or Death

On systems with multiple ATS's connected to a single generator, you will need to lockout all energy sources to the ATS generator before continuing on.



Figure 1.

5. *Disconnect* Main Power
6. *Verify* zero volts across each phase.

GE ZENITH Controls

7. *Disconnect* the J8 plug from the RT box.

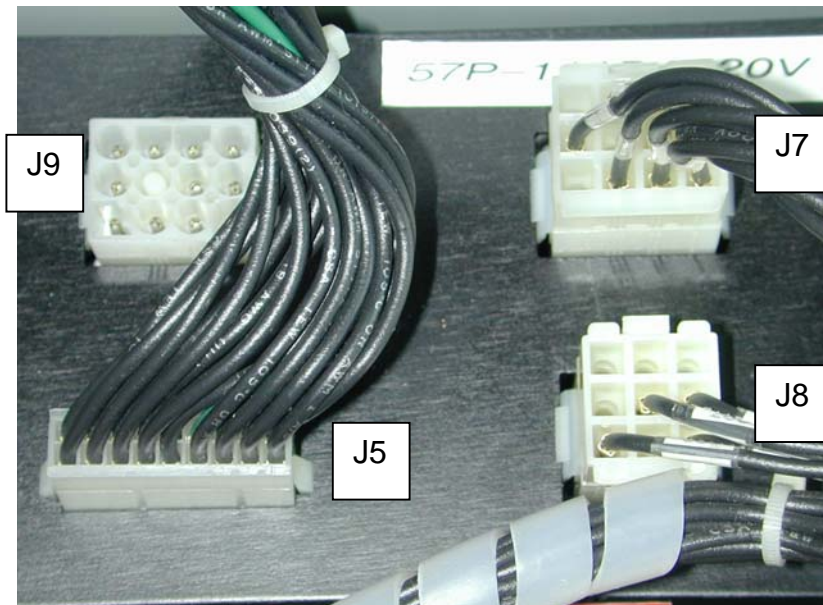


Figure 2.

8. *Note* the location of the Faston connectors to the micro switch terminals.

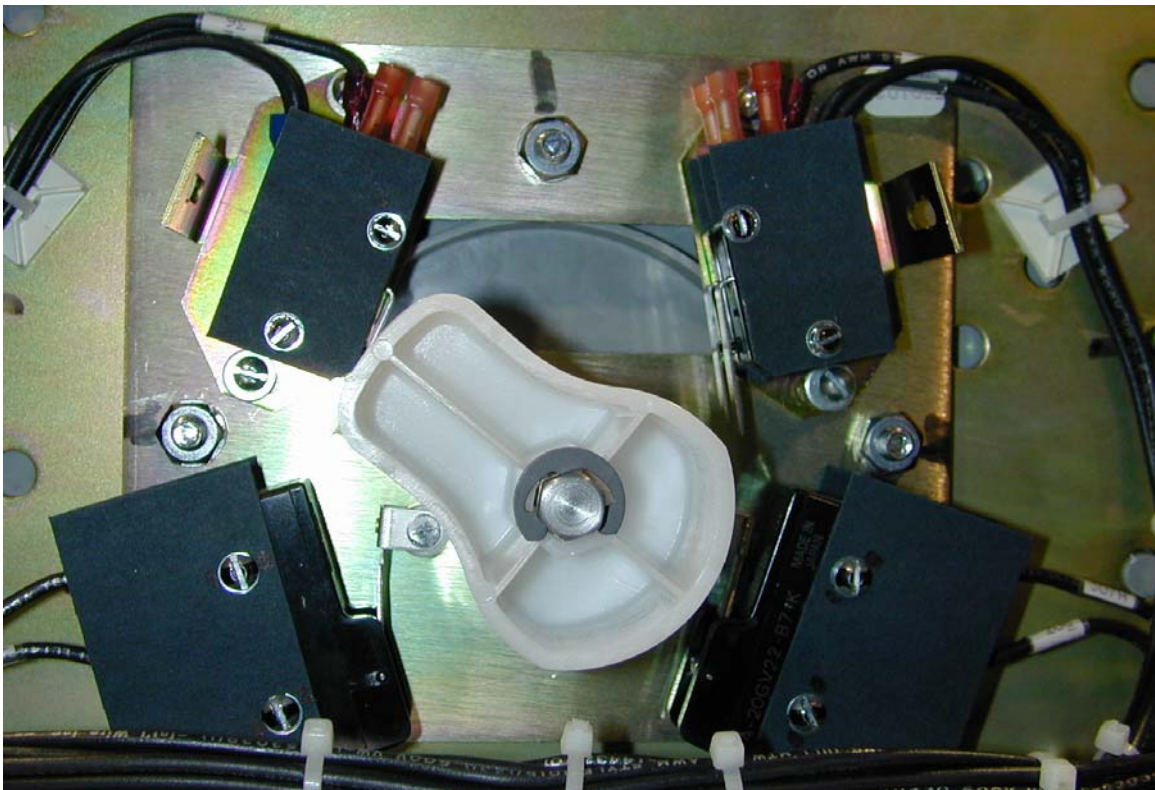


Figure 3.

9. *Disconnect* the Faston connectors.

GE ZENITH Controls

10. *Remove* the holding screws.

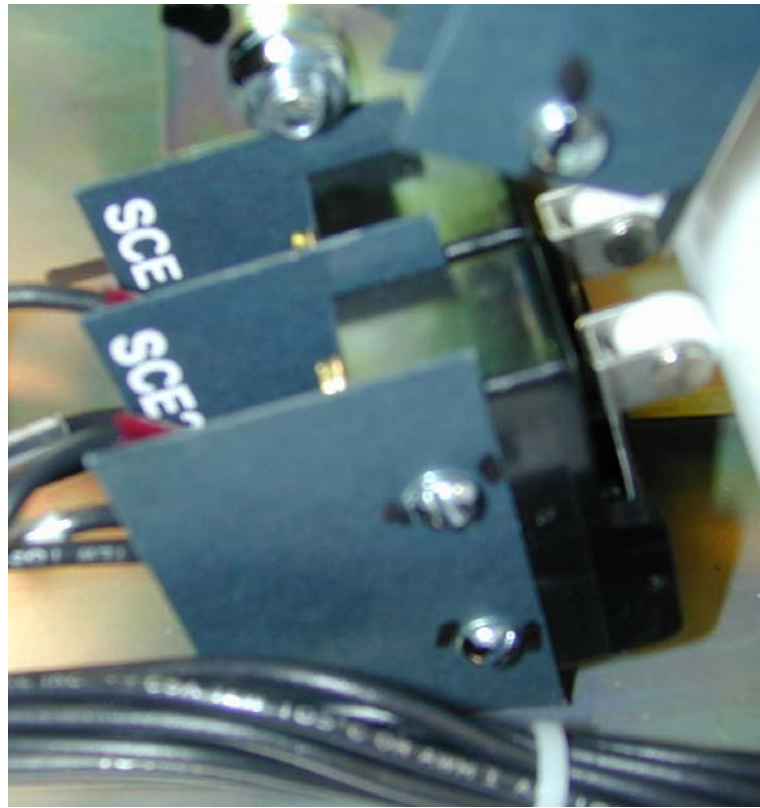


Figure 4.



Danger

**HAZARDOUS VOLTAGE
Can Cause Severe Injury or Death**

The A3/A4 micro switches can still be energized with customer power. This could be due to the micro switches are used for primary alarm circuits or primary controlling devices that can not be de-energized.

11. *Remove* the suspect micro switch.

12. *Install* the new micro switch.

13. *Install* the holding screws.

GE ZENITH Controls

14. *Tighten* the holding screws to 3 in-lbs.

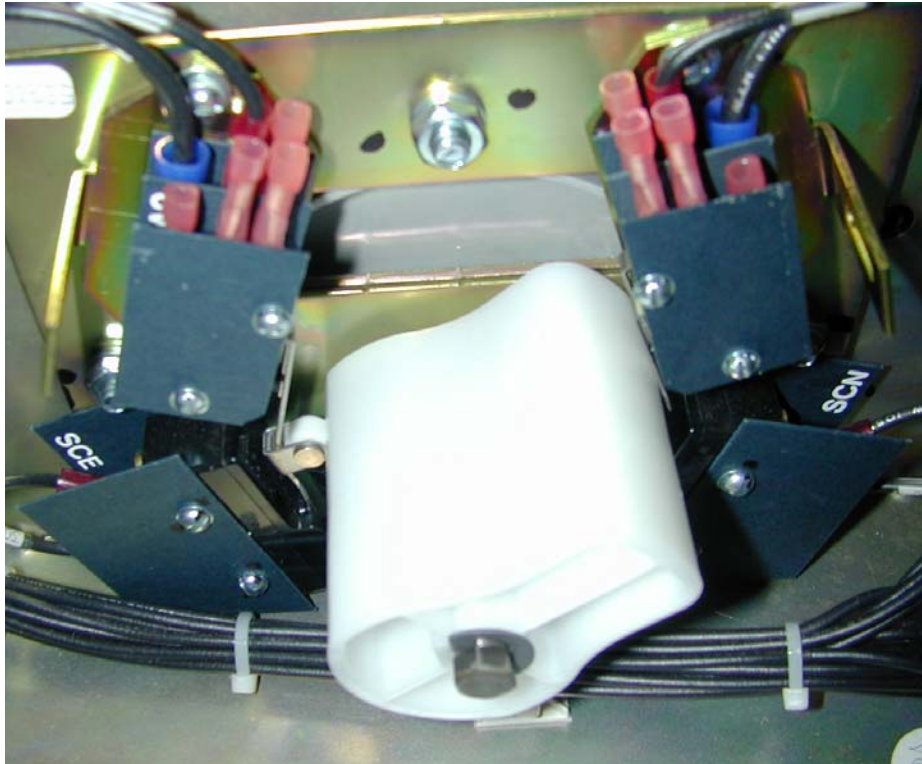


Figure 6.

15. *Connect* the “Fast on” connections to the micro switch terminals.

Note: the terminals used were noted in step 7.

16. *Energize* the ATS.

17. *Connect* the J8 plug to the RT box.

18. *Enable* the generator start-up.

19. *Place* the disconnect switch to “Auto”.

20. *Close* the front cover.

21. *Push and hold* the test pushbutton.

GE ZENITH Controls

Note: After the time delay switch should automatically transfer to the emergency position.



Figure 7.

22. Release the test pushbutton.

Note: Once you release the test pushbutton and after the time delay, the ATS should return to the normal position.



Figure 8.

23. Clean-up the area.

GE ZENITH Controls

24. *Complete* the Service Report.

25. *Send* Reports to GE Zenith Controls.

You know you are completed when:

- The transfer switch is secured and operating properly.
- The tools are stored.
- The reports are completed.