


GENERAC[®]

POWER SYSTEMS, INC.

Operator's Manual

"C" Option Control Panel

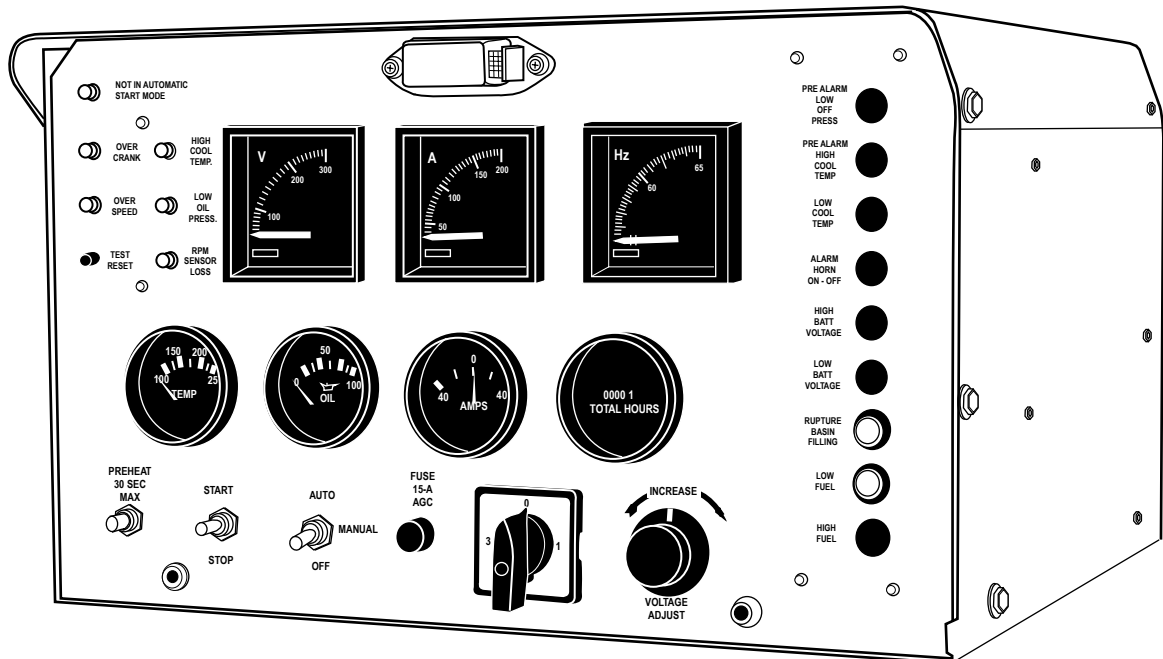



Important Safety Instructions

"C" Option Control Panel

⚠ SAVE THESE INSTRUCTIONS – The manufacturer suggests that these rules for safe operation be copied and posted in potential hazard areas. Safety should be stressed to all operators and potential operators of this equipment. ⚠

Study these SAFETY RULES carefully before installing, operating, or servicing this equipment. Become familiar with this manual and all literature pertaining to your generator set and related equipment. This equipment can operate safely, efficiently, and reliably only if it is properly installed, operated, and maintained. Many accidents are caused by failing to follow simple and fundamental rules or precautions.

Generac cannot possibly anticipate every possible circumstance that might involve a hazard. The warnings in this manual, and on tags and decals affixed to your equipment, are, therefore, not all-inclusive. If you use a procedure, work method, or operating technique Generac does not specifically recommend, you must satisfy yourself that it is safe for you and others. You also must make sure the procedure, work method, or operating technique that you choose does not render the equipment unsafe.

⚠ GENERAL HAZARDS ⚠

- For safety reasons, Generac recommends that this equipment be installed and serviced by a Generac Authorized Service Dealer or other qualified electrician or installation technician who is familiar with applicable codes, standards, and regulations. The operator also must comply with all such codes, standards, and regulations.
- When working on this equipment, remain alert at all times. Never work on the equipment when you are physically or mentally fatigued.
- Inspect the equipment regularly, and promptly repair or replace all worn, damaged or defective parts, using only factory-approved parts.
- Before performing any maintenance on the generator or any related equipment, disconnect the generator's battery cables to prevent accidental startup. Disconnect the cable from the battery post, indicated by a NEGATIVE, NEG, or (-) first. Reconnect that cable last.
- Do not handle any kind of electrical device while standing in water, while barefoot, or while hands or feet are wet. DANGEROUS ELECTRICAL SHOCK MAY RESULT.
- If people must stand on metal or concrete while installing, operating, servicing, adjusting, or repairing this equipment, place insulative mats over a dry wooden platform. Work on the equipment only while standing on such insulative mats.
- Wire gauge sizes of electrical wiring, cables, and cord sets must be adequate to handle the maximum electrical current (amperage) to which they will be subjected.
- Before installing or servicing this equipment, make sure that all power voltage supplies are positively TURNED OFF at their source. Failure to do so will result in hazardous and possibly fatal electrical shock.
- When installed with an automatic transfer switch, the generator may crank and start anytime, without warning. To prevent injuries caused by sudden start-up, disable the generator's automatic start circuit before working on, or around, the unit. Then, place a "Do Not Operate" tag on the generator control panel and on the transfer switch.
- In case of an accident caused by electric shock, immediately shut down the source of electrical power. If this is not possible, attempt to free the victim from the live conductor. AVOID DIRECT CONTACT WITH THE VICTIM. Use a nonconducting implement, such as, a rope or board, to free the victim from the live conductor. If the victim is unconscious, apply first aid and get immediate medical help.
- Never wear jewelry when working on this equipment. Jewelry can conduct electricity, resulting in electric shock, or may get caught in moving components, causing injury.

⚡ ELECTRICAL HAZARDS ⚡

- Generators produce dangerous electrical voltages and can cause fatal electrical shock. Avoid contact with bare wires, terminals, connections, etc., while the generator and related equipment are running. Ensure all appropriate covers, guards, and barriers are in place before operating the equipment. If you must work around an operating unit, stand on an insulated, dry surface to reduce shock hazard.

🔥 FIRE HAZARDS 🔥

- For fire safety, the generator and related equipment must be installed and maintained properly. Installation always must comply with applicable codes, standards, laws, and regulations. Adhere strictly to local, state, and national electrical and building codes. Comply with regulations the Occupational Safety and Health Administration (OSHA) has established. Also, ensure that the equipment is installed in accordance with the manufacturer's instructions and recommendations. Following proper installation, do nothing that might alter a safe installation and render the unit in noncompliance with the aforementioned codes, standards, laws, and regulations.

Safety RulesInside Front Cover

Section 1 – General Information2

1.1 Overview2
1.2 Control Panel Components2
1.3 Optional Equipment2
 1.3.1 Remote Annunciator Panel.....2
 1.3.2 Remote Relay Panel2
 1.3.3 Additional Options.....2
1.4 Panel Face Components2
 1.4.1 AC Voltmeter2
 1.4.2 AC Ammeter2
 1.4.3 Frequency Meter2
 1.4.4 Line-Phase Selector Switch3
 1.4.5 Voltage Adjust Potentiometer3
 1.4.6 Coolant Temperature Gauge3
 1.4.7 Oil Pressure Gauge3
 1.4.8 DC Voltmeter3
 1.4.9 Hourmeter3
 1.4.10 Start/Stop Switch.....4
 1.4.11 Auto/Off/Manual Switch4
 1.4.12 Panel Fuse4
1.5 Engine Monitor Panel4
 1.5.1 Not in Automatic Start Mode Lamp4
 1.5.2 Overcrank Lamp4
 1.5.3 High Coolant Temperature Lamp.....4
 1.5.4 Overspeed Lamp4
 1.5.5 Low Oil Pressure Lamp5
 1.5.6 RPM Sensor Loss Lamp.....5
 1.5.7 Test/Reset Switch5
1.6 Optional Annunciator Panel5
1.7 Optional Remote Annunciator6
1.8 Optional Alarm Relay6
1.9 Preparation Before Startup6
 1.9.1 Prior to Initial Startup6
 1.9.2 Startup Inspection7

Section 2 – Operation7

2.1 Operating Unit with Manually-Operated
Transfer Switch7
2.2 Operating Unit with Automatic Transfer Switch ..7
 2.2.1 Manual Startup and Transfer7
 2.2.2 Manual Retransfer and Engine
Shutdown7
 2.2.3 Preventing Automatic Startup8

Appendix 1 – Electrical Data9

Appendix 2 – Exploded Views and Parts Lists16


Appendix 3 – Notes24

**AUTHORIZED SERVICE
DEALER LOCATION**

To locate the GENERAC AUTHORIZED SERVICE
DEALER nearest you, please call this number:

1-800-333-1322

DEALER LOCATION INFORMATION
CAN BE OBTAINED AT THIS NUMBER.



1.1 OVERVIEW

The “C” option control panel is an analog generator set control panel designed for Generac’s range of standby generators. It allows for either manual (electric) or automatic startup and shutdown.

The panel is housed in a steel sheet metal enclosure that meets NEMA 1 specifications. The front face of the panel includes a number of analog meters and gauges that indicate generator operating conditions, several indicator lamps for annunciation of engine fault shutdowns, and various other generator set controls.

1.2 CONTROL PANEL COMPONENTS

The control panel contains one main printed-circuit board (PCB), the automatic voltage regulator (AVR), various discrete components, and terminal blocks for external connections.

To find locations of the circuit board, refer to Appendix 2 for the control panel exploded view. The PCB has the following defined functions.

⚠ WARNING ⚠

⚠ Remove the 15-amp fuse from the front of the panel during all engine maintenance to guard against accidental or remote startup.

1.3 OPTIONAL EQUIPMENT

◆ 1.3.1 REMOTE ANNUNCIATOR PANEL

When connected to the generator via a 19 wire connection link, this multi-light remote indicator panel will display the generator’s status.

◆ 1.3.2 REMOTE RELAY PANEL

This panel is similar to the remote annunciator, but, in addition to indicator lights, it provides relay contact closures for status (e.g., alarms).

◆ 1.3.3 ADDITIONAL OPTIONS

The following are some of the more frequently requested optional accessories for the “C” option control panel:

- Emergency stop button
- Oil temperature gauge
- Engine run relay
- 100 dBa alarm horn
- Over/Under voltage relay
- Voltage adjust potentiometer (Standard on all units that does not use the Marathon alternator.)

1.4 PANEL FACE COMPONENTS

(FIGURE 1.1, PAGE 3)

◆ 1.4.1 AC VOLTMETER

This meter indicates the generator AC output voltage. (Also see “Line-phase Selector Switch” and “Voltage Adjust Potentiometer” in this section.) To determine the nominal rated AC voltage of your unit, refer to your unit’s data plate.

NOTE:

Some generators are reconnectable to a variety of voltages. Some units may be equipped with a rotary “Voltage Selector Switch.” Be sure to read the “Generator AC Lead Connections” section in your Owner’s Manual.


◆ 1.4.2 AC AMMETER

This meter indicates the current draw of connected electrical loads, in amps. Also, see “Line-phase Selector Switch.” For continuous operation, never exceed the rated maximum continuous current capacity of your generator.

◆ 1.4.3 FREQUENCY METER

This meter indicates the generator’s AC output frequency in “Hertz” (cycles per second).

Figure 1.1 – "C" Option Panel Components

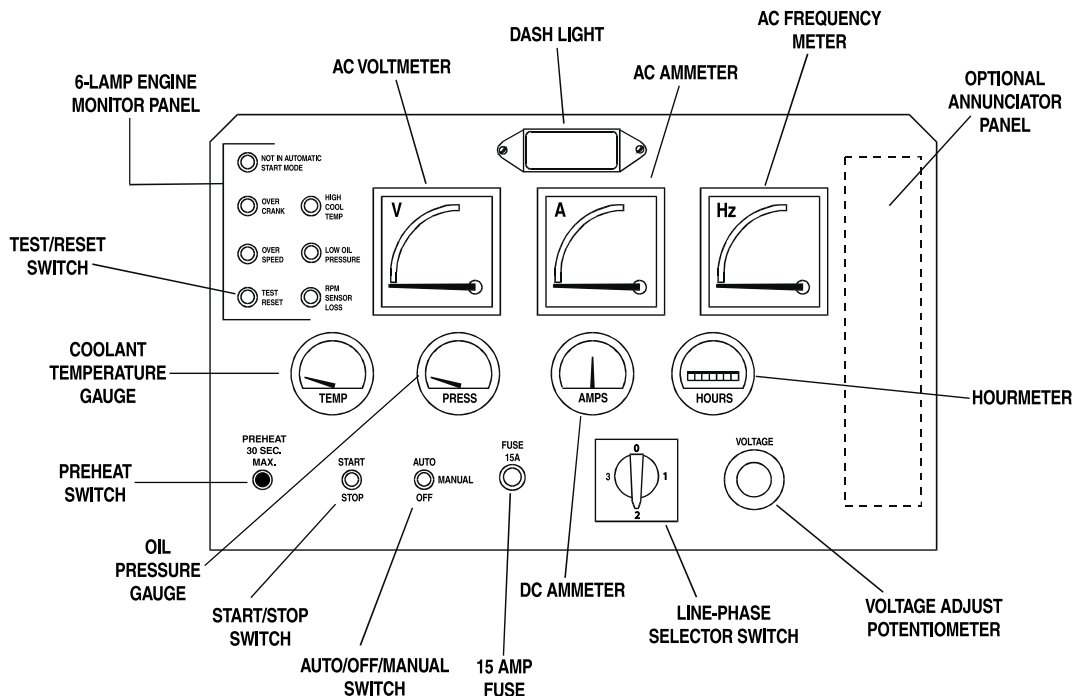

◆ 1.4.4 LINE-PHASE SELECTOR SWITCH

This four-position switch permits you to select either line-to-line or line-to-neutral readings on the panel voltmeter and ammeter. Switch positions are as follows:

Switch	Single-phase Units	Three-phase units
1	Line E1 to Neutral	Line E1 to E2
2	Line E3 to Neutral	Line E2 to E3
3	Line E1 to E3	Line E3 to E1
O	No Reading	No Reading

◆ 1.4.5 VOLTAGE ADJUST POTENTIOMETER

This potentiometer permits the operator to "fine-adjust" the generator's AC output voltage. Adjustment range is plus or minus 5 percent from the midpoint. Turn the knob clockwise to increase voltage, counter-clockwise to decrease voltage.

◆ 1.4.6 COOLANT TEMPERATURE GAUGE

This gauge indicates the engine coolant temperature. Normal operating temperature should read between 185° to 215°F (85° to 102°C). If coolant temperature exceeds a safe level, the engine shuts down automatically.

NOTE:

Actual coolant temperature reading may vary due to variables, such as, ambient temperature, applied load, or cooling system condition.

◆ 1.4.7 OIL PRESSURE GAUGE

This gauge indicates oil pressure during operation. After warm-up, oil pressure should be about 25-90 psi. Generac recommends that the operator record the normal oil pressure during initial startup. Sudden changes in oil pressure after first starting indicate a possible engine problem.

NOTE:


Engine oil pressure may vary, depending on oil viscosity, oil temperature, engine speed, ambient temperature, etc. The engine automatically shuts down if oil pressure drops below a safe level. (10 psi.)

◆ 1.4.8 DC AMMETER

The engine is equipped with a belt-driven DC alternator, which charges the battery while the unit is running. This ammeter indicates the rate of charge to the battery during operation. If the needle drops to the left of zero, battery is discharging. Investigate and correct this problem immediately. Erratic movement of the needle should also be corrected immediately.

◆ 1.4.9 HOURMETER

The hourmeter provides a continuous indication of engine/generator operating time, in hours and tenths of hours. Use the hourmeter with the periodic maintenance schedule (See "Maintenance" section).



◆ 1.4.10 START/STOP SWITCH

Use this switch to crank and start the engine manually, or to shut down an operating engine.

- To crank and start engine, first set the Auto/Off/Manual switch to its "Manual" position.
- Hold the Start/Stop switch at "Start." When the engine starts, release the switch to its center (run) position.
- To shut engine down, set the switch to its "Stop" position.

◆ 1.4.11 AUTO/OFF/MANUAL SWITCH

This safety switch should be used to prevent automatic startup of the engine when working on the engine/generator. Use the switch as follows:

▶ Auto Position

Always set switch to AUTO for automatic system operation. This means that, when this generator is installed with a GTS-type automatic transfer switch, the generator automatically cranks and starts when the utility source voltage drops below a preset level, or the unit exercises if programmed to do so.

▶ Off Position

The engine cannot be started either automatically or manually. Always set switch to OFF before working on, or around, the engine-generator.

▶ Manual Position

The engine can be cranked and started manually using the panel Start/Stop switch. The engine will not start automatically.

NOTE:

Also see "Engine Monitor Panel." With switch set to either OFF or MANUAL, a "Not in Automatic Start Mode" lamp lights up on the panel.

◆ 1.4.12 PANEL FUSE

This fuse protects the control console's DC circuits against overload. If the fuse element melts open due to an overload, engine cranking and startup will not be possible. Should fuse replacement become necessary, use only an identical fuse.

1.5 ENGINE MONITOR PANEL

This panel has five advisory shutdown lamps for separate engine fault conditions, plus a "Not in Automatic Start Mode" lamp. Cranking and starting will not be possible while any one, or more, of engine fault conditions lamps is lit, with the exception of "Not in Auto" illuminated in the manual mode. The following apply:

- A "lamp ON" condition indicates that fault condition has been "latched" by DC control/latch-crank circuit board.
- If any one of the lamps is ON (fault condition latched), the engine cannot be cranked either manually or automatically.
- To unlatch a fault (that is, to turn a lamp OFF) and permit cranking, push the Test/Reset switch in. Lamp goes OFF, allowing for additional cranking.

◆ 1.5.1 NOT IN AUTOMATIC START MODE LAMP

This lamp comes ON to indicate that automatic startup of the engine is not possible. The lamp lights up whenever the Auto/Off/Manual switch is set to OFF or MANUAL.

◆ 1.5.2 OVERCRANK LAMP

The control console houses a DC control/latch-crank circuit board that controls engine startup and shutdown. During automatic startup, the engine cranks for about five seconds, rests for about five seconds, and so on, until eight of the crank-rest cycles have occurred. At the end of eight attempts, cranking stops, and the overcrank lamp goes ON.


◆ 1.5.3 HIGH COOLANT TEMPERATURE LAMP

This lamp comes ON if coolant temperature is too high or coolant level is too low. The engine shuts down automatically when such unsafe conditions occur. The following apply:

- If the engine is started with an existing high coolant temperature or low coolant level condition, the engine shuts down, and lamp comes ON when engine speed reaches about 1000 rpm.
- If the engine starts normally but high temperature/low coolant level develops later, the engine shuts down, and light comes ON immediately.

◆ 1.5.4 OVERSPEED LAMP

An engine overspeed above a safe limit causes the engine to automatically shut down, which turns ON the indicator lamp. The overspeed lamp comes on when the unit is run at a 15% faster rpm than rated.



◆ 1.5.5 LOW OIL PRESSURE LAMP

This lamp lights up (latches) to indicate low oil pressure in the engine as follows:

- During cranking, after engine has reached 800 to 1000 rpm, the circuit allows four seconds for oil pressure to build.
- In auto mode, if the unit runs above 800-1000 rpm for more than four seconds, and oil pressure is below a safe level, the engine shuts down, but the lamp does NOT go ON. The system then actuates eight restart attempts; the engine shuts down, and the lamp goes ON.
- If the engine starts normally with good oil pressure, but oil pressure drops later, the system waits five seconds for oil pressure to be restored. If pressure is still low after a five-second delay, the engine shuts down, and the lamp goes ON immediately.

◆ 1.5.6 RPM SENSOR LOSS LAMP

Units with the "C" Option console are equipped with an rpm sensor, which is mounted directly over the engine flywheel gear teeth. This sensor is a magnetic pickup that emits an electrical pulse at the passage of each flywheel gear tooth. Sensor electrical signals are used by the DC control/latch-crank circuit board as engine speed (rpm) signals. The circuit board uses these rpm signals (a) to establish a starter lockout speed, and (b) to shut down the engine if the engine runs too fast (overspeed). If the rpm signals to the circuit board are lost, engine shutdown occurs, but the lamp will not light, (i.e., the condition will not latch), then, depending on whether the sensor signal loss occurred during a manual or an automatic start attempt, the following events occur:

► Manual Startup

If the engine starts within two seconds after cranking begins, shutdown occurs as soon as the Start/Stop switch is released, but without a lamp ON condition (latching does not occur). If engine does not start within two seconds after cranking begins, which disables starting, the rpm sensor loss light goes ON.

► Automatic Startup

The engine recranks within about one second after it has stopped. If sensor loss persists, engine shuts down, and lamp lights about two seconds after cranking has restarted.

If engine starts within two seconds after recrank has begun, the starter remains engaged until the two-second delay is over.

◆ 1.5.7 TEST/RESET SWITCH

To test all lamps, push this switch in. Following any fault shutdown with any monitor panel lamp illuminated, engine cranking is inhibited. To reset the system (unlatch a fault) and crank the engine again, push the switch in (lamp must go out). If the switch is actuated with the engine running, only the lamps will be tested. The engine will not shut down.

NOTE:


If engine shuts down due to some unmonitored problem (such as, out of fuel or failed ignition system), none of the lamps will come ON. If such an unmonitored shutdown occurs with the Auto/Off/Manual switch set to AUTO, engine recranks and attempts to start for any of the cycles remaining in the eight-crank limit. After all eight crank cycles have been used, the engine shuts down, and the OVERCRANK lamp goes ON.

1.6 OPTIONAL ANNUNCIATOR PANEL

Some units may come equipped with a factory-installed annunciator panel having up to nine annunciated fault conditions displayed. This optional panel is often called a "prealarm" panel, since it warns of impending problems before an actual fault shutdown occurs.

The panel is designed to monitor various engine condition-sensing devices having normally-open (N.O.) or normally-closed (N.C.) contacts.

Figure 1.2 — Optional Annunciator (Prealarm) Panel

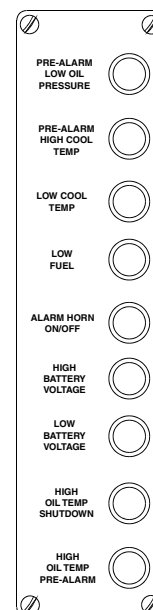


1.7 OPTIONAL REMOTE ANNUNCIATOR

An optional 18-light REMOTE annunciator panel you can mount on a wall (Figure 1.3) is also available. For information on the remote annunciator panels, ask your dealer/distributor or consult the factory. Ask for information on the Models 9555 and 9556 remote annunciator panels. The following apply to the remote annunciator panels:

- It is designed for use with installation having a Generac Power Systems GTS-type transfer switch and a "C" Option control panel.
- The panel is available in both flush-mounted (Model 9556) and surface-mounted (Model 9555) configurations.
- The panel has a built-in audible alarm horn, with a reset switch to turn off the horn without disturbing the lighted indication.
- Remote monitoring of the standby generator set provides enough information to avoid unnecessary maintenance trips to the generator site.

Figure 1.3 — Optional 18-Light Remote Annunciator

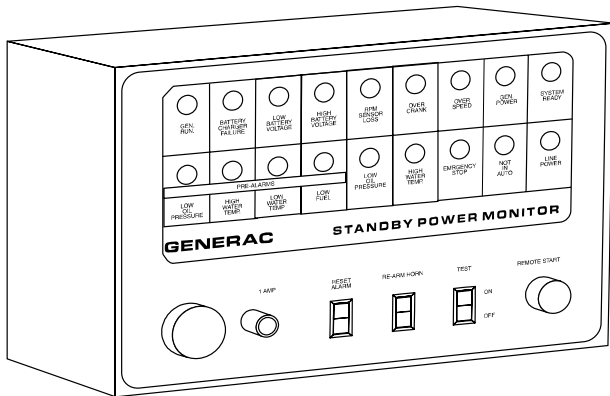


1.8 STANDARD ALARM RELAY

The generator's DC control/latch-crank circuit board is equipped with an alarm relay "driver". All units with "C" Option control panels are equipped with an alarm relay that is connected to the circuit board driver (Figure 1.4). If any one or more of the five annunciated shutdown faults occur, the circuit board driver energizes the optional alarm relay.

A remote-mounted alarm or annunciator device may be connected across the relay contacts so that a failure will turn on the remote alarm or device. The connected alarm device may range from an alarm horn to a warning light to a telephone dialer with a pre-recorded message. The alarm relay normally-open, normally-closed, and common contacts are shown in Figure 1.4.

Figure 1.4 — Standard Alarm Relay

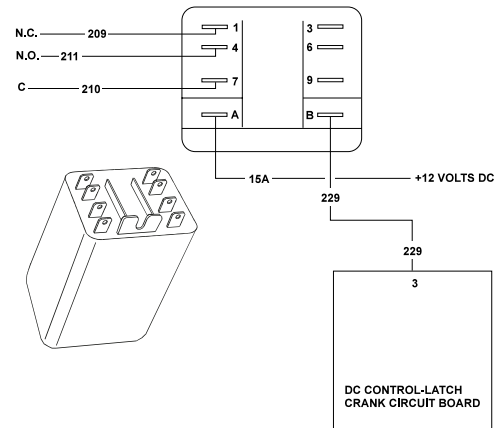

1.9 PREPARATION BEFORE STARTUP

The instructions in this section assume that the standby generator has been properly installed, serviced, tested, adjusted, and otherwise prepared for use by a competent, qualified installation contractor. Be sure to read RULES FOR SAFE OPERATION on the inside of the front cover carefully, before attempting to operate this (and related) equipment.

◆ 1.9.1 PRIOR TO INITIAL STARTUP

Before starting the generator for the first time, the installer must complete the following:

- Properly locate and properly mount the generator, transfer switch, and other standby system components, in strict compliance with applicable codes, standards, and regulations.
- Make sure the fuel supply system to the generator (a) delivers the correct fuel at the correct pressure, and (b) is properly purged and leak-tested according to code. No fuel leakage is permitted.
- Have the engine crankcase properly filled to the correct level with the recommended oil.
- Have engine cooling system properly filled with recommended coolant mixture. Check the system for leaks and other problems.
- If engine is equipped with a mechanical governor, make sure the governor is properly filled with oil. Use crankcase oil to fill.
- Check engine v-belt tension and belt condition.
- Make sure the generator is properly connected to an approved earth ground.
- The generator battery must be fully charged, properly installed and interconnected, and ready for use.

◆ 1.9.2 STARTUP INSPECTION

A standard, three-part form entitled “Startup Inspection for Standby Power Systems” (Part No. 67377) should be completed by the installation technician or engineer. As stated on the form, inspections are to be performed only by factory-trained personnel. The installer should complete the form and distribute copies as follows:

- White copy: Mail to Generac Service Department, P.O. Box 310, Eagle, WI 53119.
- Pink copy: For service file of installing dealer.
- Yellow copy: For the customer’s records.

2.1 OPERATING UNIT WITH MANUALLY OPERATED TRANSFER SWITCH

If your generator was installed with a transfer switch capable of manual operation only, the following applies. A manually-operated transfer switch is one that will not provide automatic startup and does not include the intelligence circuit.

2.2 OPERATING UNIT WITH AUTOMATIC TRANSFER SWITCH

If your generator has been installed with a Generac “GTS”-type automatic transfer switch, the engine may be started and stopped either automatically or manually.

IMPORTANT: BE SURE TO READ THE APPLICABLE AUTOMATIC TRANSFER SWITCH MANUAL CAREFULLY. DIFFERENCES EXIST BETWEEN TRANSFER SWITCHES.

◆ 2.2.1 MANUAL STARTUP AND TRANSFER

To crank and start the engine and to transfer electrical loads to the STANDBY power source, proceed as follows:

- See applicable transfer switch instructions. If so equipped, set the Safety Disconnect Switch to MANUAL.
- On the generator’s Meter and Control Panel, set the Auto/Off/Manual switch to MANUAL.



The safety disconnect switch and the Auto/Off/Manual switches must be set as instructed above, or the generator will crank and start as soon as the utility power to the transfer switch is turned OFF.

- Turn OFF both the NORMAL (utility) and EMERGENCY (standby) power supplies to the transfer switch, using whatever means is provided (such as, the main-line circuit breakers).



DO NOT attempt manual operation until all power voltage supplies to the transfer switch have been positively turned OFF; otherwise, extremely dangerous---possibly lethal---electrical shock will result.

- Refer to the instructions that correspond to the installed transfer switch. Manually actuate the switch main contacts to their STANDBY (emergency) position, as outlined in the corresponding manual. LOAD circuit must be connected to the STANDBY power supply before proceeding.
- On the generator console, hold the Start/Stop switch START to crank the engine. Hold it until it begins running, then release the switch to its centered (RUN) position.
- Let the engine warm up and stabilize at no-load.
- Turn ON the STANDBY power supply to the transfer switch, using whatever means provided (such as, STANDBY source main-line circuit breaker).
- The generator now powers the load circuits.

◆ 2.2.2 MANUAL RETRANSFER AND ENGINE SHUTDOWN


To retransfer LOAD circuits back to the NORMAL (utility) power source and to stop the engine, proceed as follows:

- Turn OFF both the UTILITY and STANDBY power supplies to the transfer switch, using whatever means provided, i.e., the power source main-line circuit breakers.



DO NOT attempt manual operation until all power voltage supplies to the transfer switch have been positively turned OFF; otherwise, extremely dangerous---possibly lethal---electrical shock will result.

- Refer to the applicable transfer switch instructions. Manually actuate the transfer switch main contacts to their utility position (LOAD connected to UTILITY power supply).
- Turn ON the UTILITY power supply to the transfer switch, using whatever means are provided (such as, the UTILITY main-line circuit breakers).
- Check that the UTILITY voltage is available to the transfer switch (see appropriate transfer switch instructions).
- Let the generator engine run at no-load for a few minutes. Then, set the generator Start/Stop switch to STOP. Wait for the engine to come to a complete stop.
- Reset the system for fully automatic operation.




◆ 2.2.3 PREVENTING AUTOMATIC STARTUP




When installed with an automatic transfer switch, Generac standby generators can crank and start suddenly, without warning, when UTILITY source voltage drops below a preset value. To prevent possible injuries caused by such sudden starts, disable the automatic transfer switch before working on, or around, the generator. Use any one, or more, of the following methods to disable the automatic start function:

- Set the generator's Auto/Off/Manual switch to OFF. Neither a manual nor an automatic start can be accomplished with this switch set to OFF.
- Remove the fuse from the generator control panel. To remove the fuse, push fuse holder cap in and turn cap counterclockwise. Remove cap and fuse element.
- Refer to the automatic transfer switch instructions. If the transfer switch is so equipped, set its Safety Disconnect switch to MANUAL position to prevent automatic startup and transfer.
- Disconnect battery cable from generator battery post, indicated by a negative, NEG, or (-).

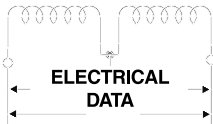

Appendix 1 – Electrical Data

"C" Option Control Panel 24 Volt, 400kW and Larger Electrical Schematic – Drawing No. A4722-A

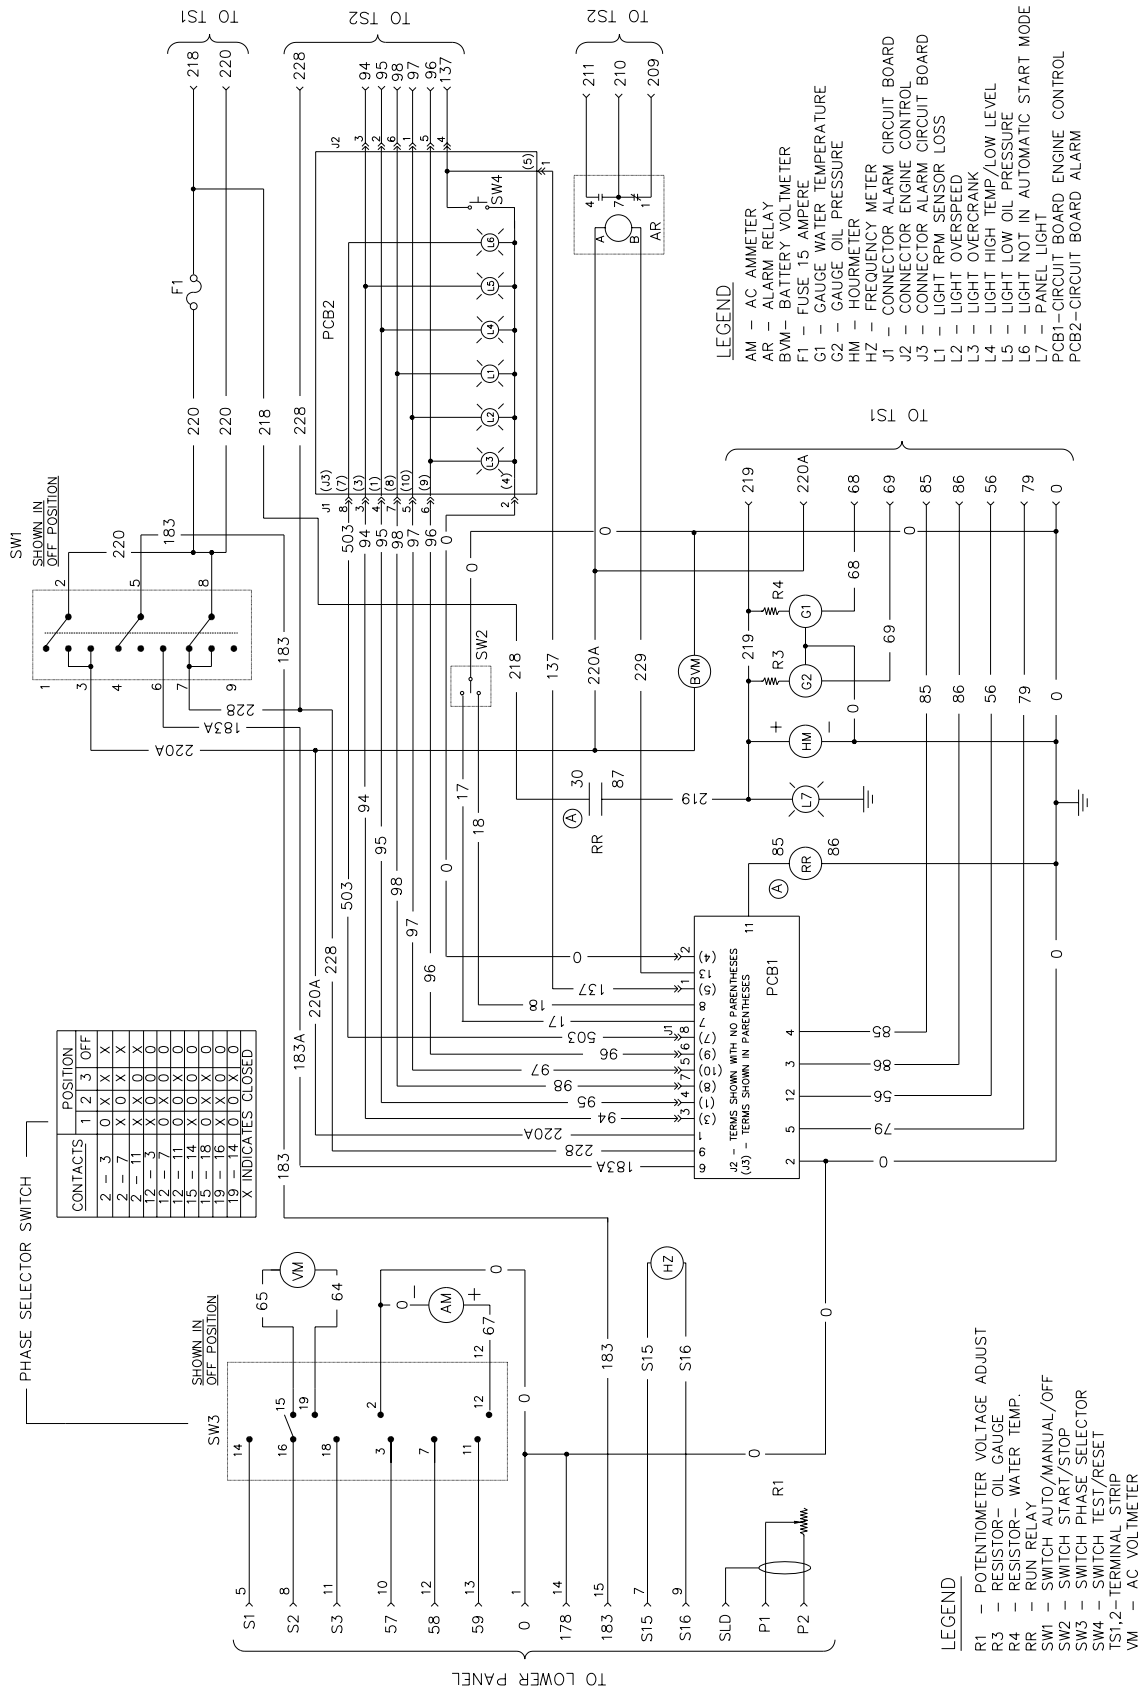

CONTACTS	POSITION		
	1	2	3
1	0	X	X
2	0	X	X
3	0	X	X
4	0	X	X
5	0	X	X
6	0	X	X
7	0	X	X
8	0	X	X
9	0	X	X
10	0	X	X
11	0	X	X
12	0	X	X
13	0	X	X
14	0	X	X
15	0	X	X
16	0	X	X
17	0	X	X
18	0	X	X
19	0	X	X
20	0	X	X



X INDICATES CLOSED


LEGEND
 AM – AC AMMETER
 AR – ALARM RELAY
 BVM – BATTERY VOLTMETER
 F1 – FUSE 15 AMPERE
 G1 – GAUGE WATER TEMPERATURE
 G2 – GAUGE OIL PRESSURE
 HM – HOURMETER
 HZ – FREQUENCY METER
 J1 – CONNECTOR ALARM CIRCUIT BOARD
 J2 – CONNECTOR ENGINE CONTROL
 J3 – CONNECTOR ALARM CIRCUIT BOARD
 L1 – LIGHT RPM SENSOR LOSS
 L2 – LIGHT OVERSPEED
 L3 – LIGHT OVERCRANK
 L4 – LIGHT HIGH TEMP/LOW LEVEL
 L5 – LIGHT LOW OIL PRESSURE
 L6 – LIGHT NOT IN AUTOMATIC START MODE
 L7 – PANEL LIGHT
 PCB1 – CIRCUIT BOARD ENGINE CONTROL
 PCB2 – CIRCUIT BOARD ALARM

LEGEND
 R1 – POTENTIOMETER VOLTAGE ADJUST
 R3 – RESISTOR – OIL GAUGE
 R4 – RESISTOR – WATER TEMP.
 RR – RUN RELAY
 SW1 – SWITCH AUTO/MANUAL/OFF
 SW2 – SWITCH START/STOP
 SW3 – SWITCH PHASE SELECTOR
 SW4 – SWITCH TEST/RESET
 TS1,2 – TERMINAL STRIP
 VM – AC VOLTMETER

Appendix 1 – Electrical Data


“C” Option Control Panel 24 Volt, 400 kW and Larger Wiring Diagram – Drawing No. A4723-B

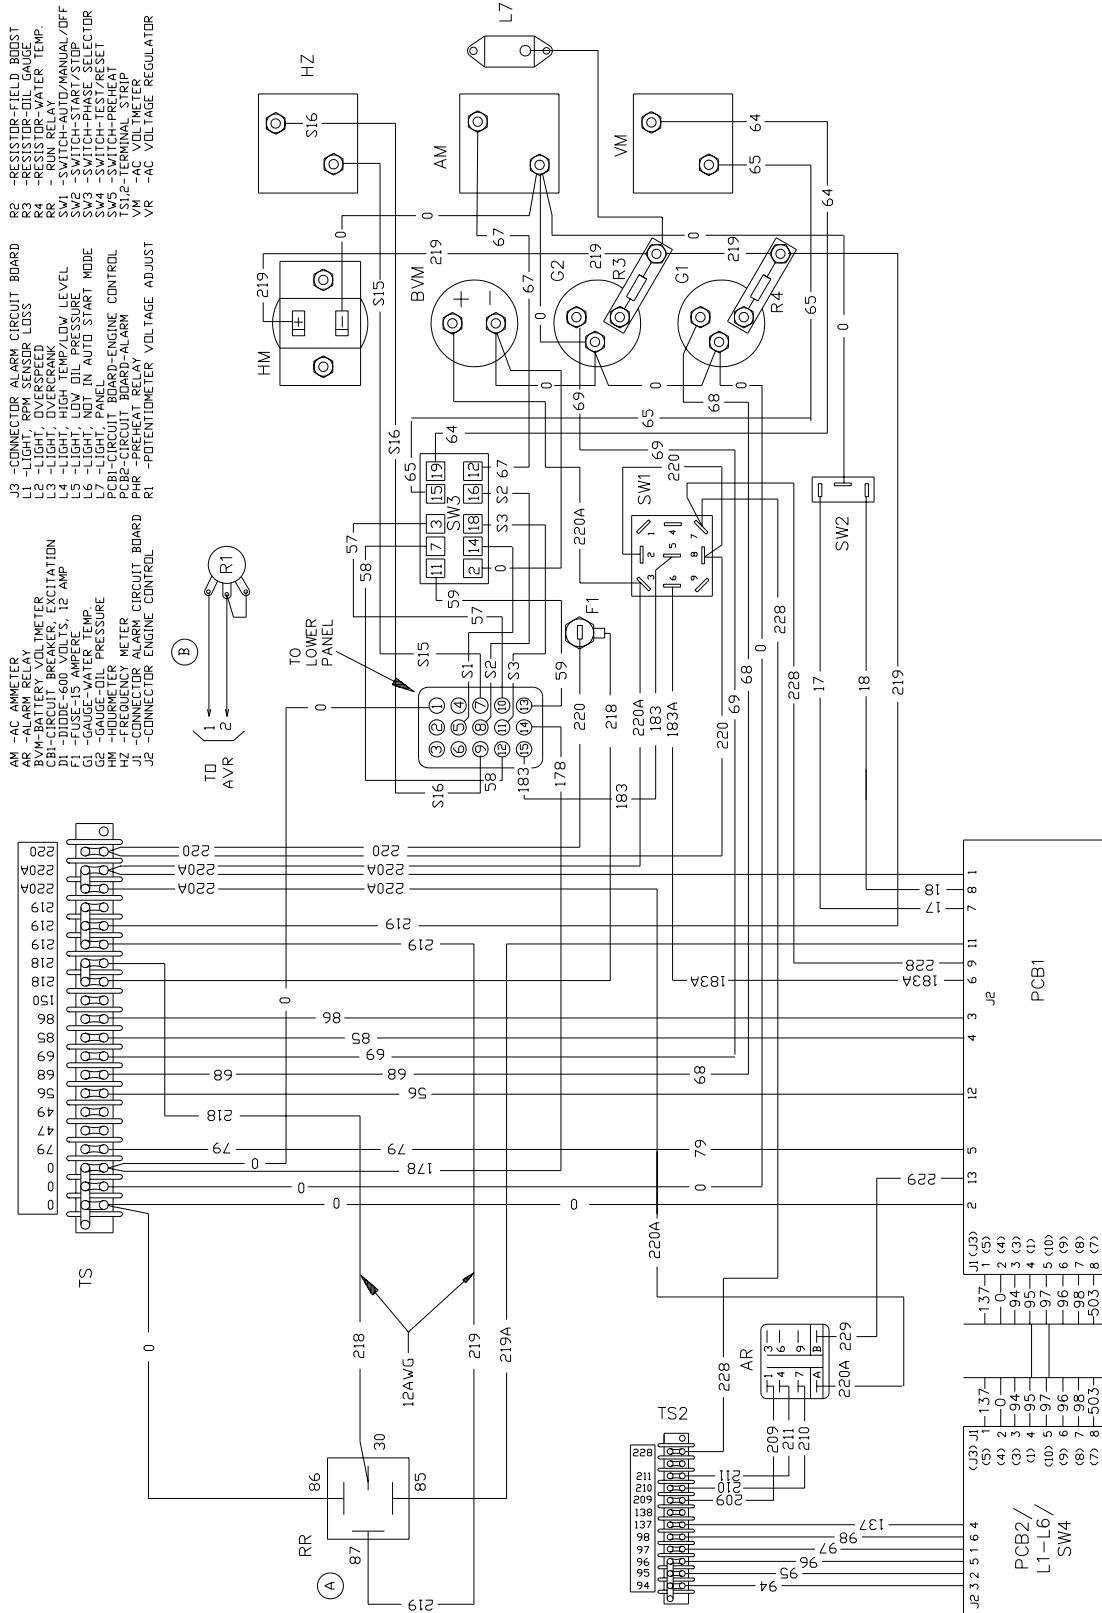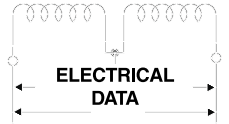

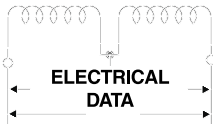



Appendix 1 – Electrical Data


"C" Option Control Panel 24 Volt Diesel, Less than 400 kW Control Panel Electrical Schematic – Drawing No. 84850-C

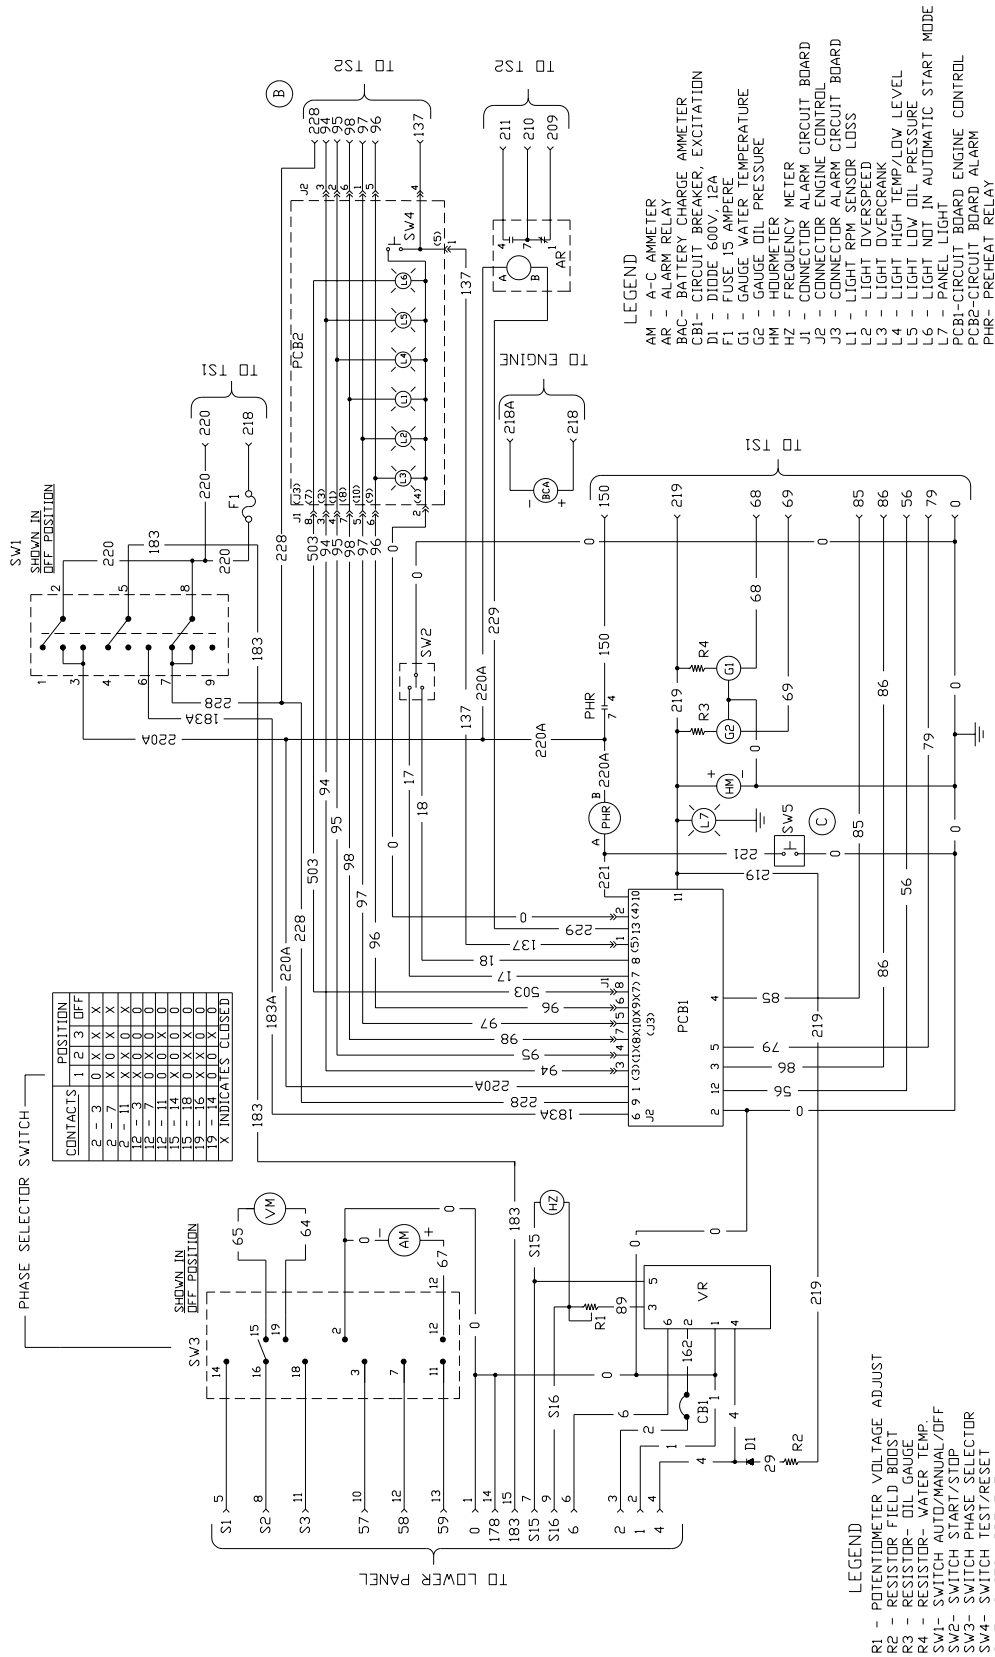

Appendix 1 – Electrical Data


"C" Option Control Panel 24 Volt Diesel, Less than 400 kW Control Panel Wiring Diagram – Drawing No. 84849-C

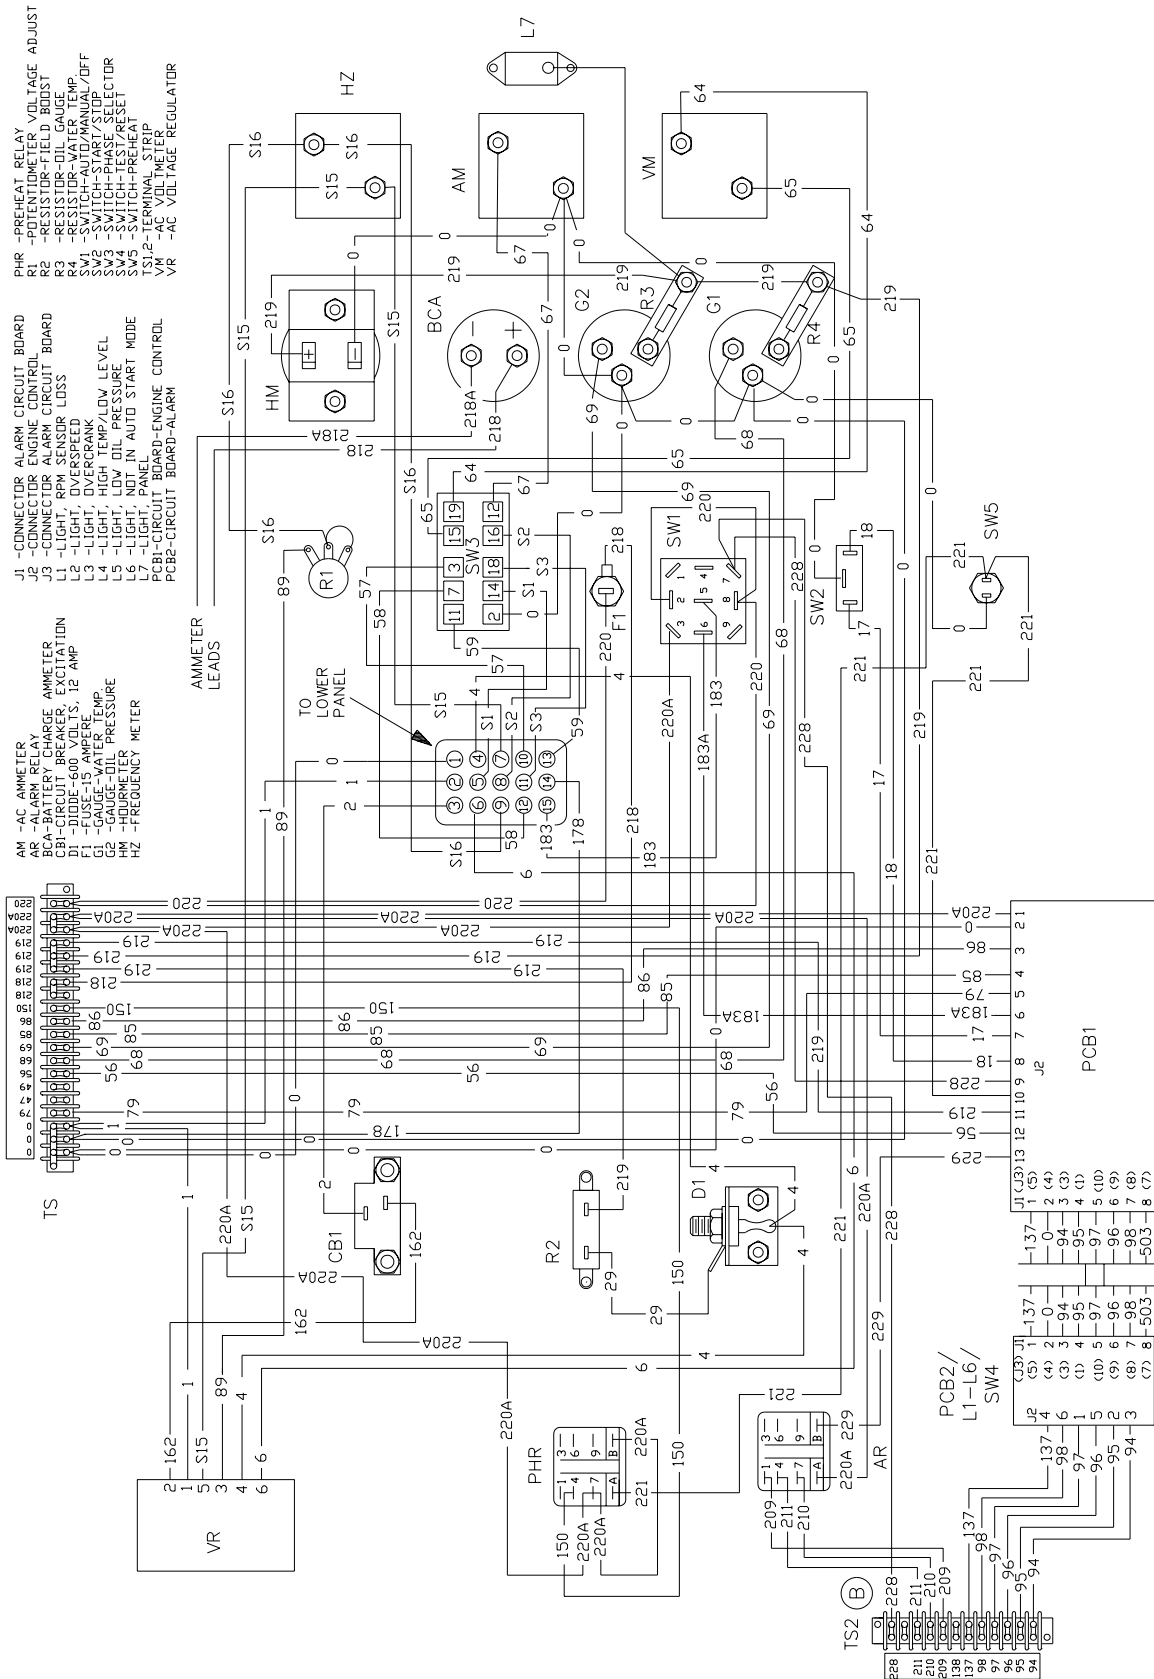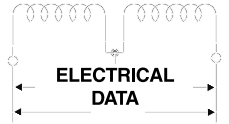

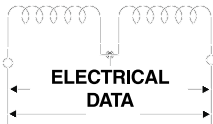

Appendix 1 – Electrical Data

"C" Option Control Panel 12 Volt Gas Control Panel Electrical Schematic – Drawing No. 85023-A

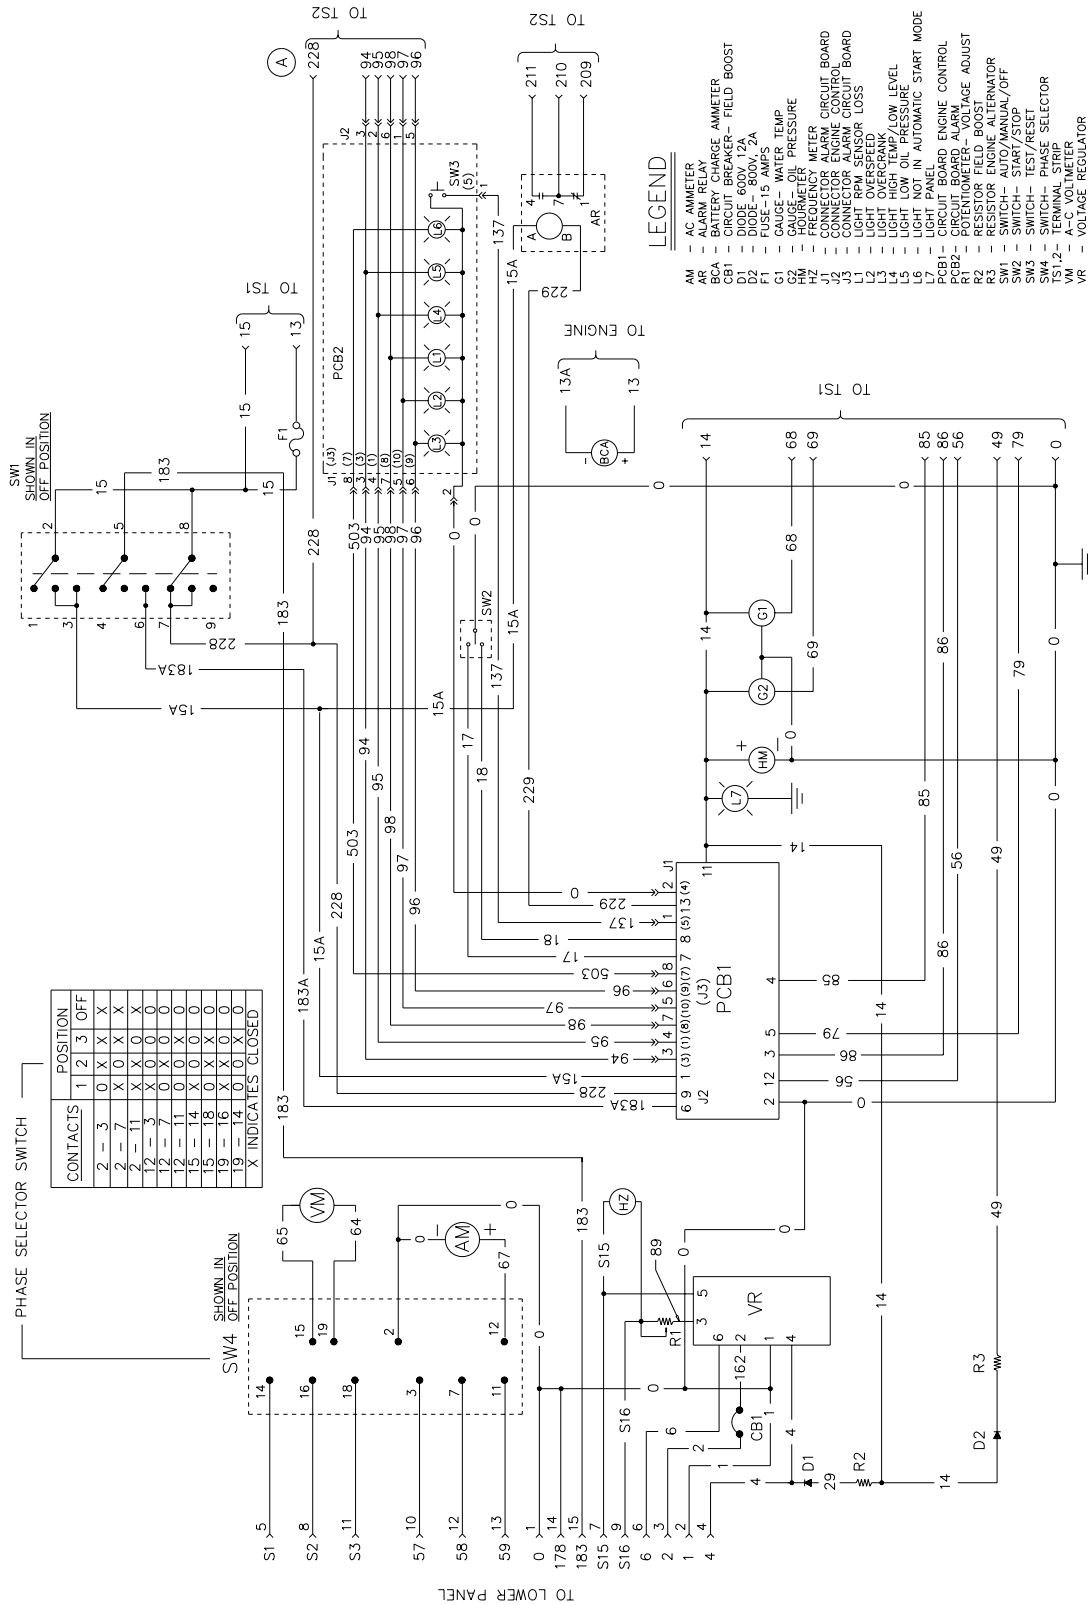

PHASE SELECTOR SWITCH

CONTACTS	POSITION		
	1	2	3 OFF
1	0	X	X
2	0	X	X
3	X	0	X
4	X	0	X
5	X	0	X
6	X	0	X
7	X	0	X
8	X	0	X
9	X	0	X
10	X	0	X
11	X	0	X
12	X	0	X
13	X	0	X
14	X	0	X
15	X	0	X
16	X	0	X
17	X	0	X
18	X	0	X
19	X	0	X
20	X	0	X

X INDICATES CLOSED


LEGEND

- AM - AC AMMETER
- AR - ALARM RELAY
- BCA - BATTERY CHARGE AMMETER
- BCB - BATTERY CHARGE AMMETER
- D1 - DIODE - 600V, 12A
- D2 - DIODE - 800V, 2A
- F1 - FUSE - 15 AMPS
- G1 - GAUGE - WATER TEMP
- G2 - GAUGE - WATER TEMP
- HM - HOURMETER PRESSURE
- HZ - FREQUENCY METER
- J1 - CONNECTOR ENGINE CIRCUIT BOARD
- J2 - CONNECTOR ENGINE CIRCUIT BOARD
- J3 - CONNECTOR ALARM CIRCUIT BOARD
- L1 - LIGHT OVERCRANK
- L2 - LIGHT OVERCRANK
- L3 - LIGHT OVERCRANK
- L4 - LIGHT OVERCRANK
- L5 - LIGHT OVERCRANK
- L6 - LIGHT NOT IN AUTOMATIC START MODE
- L7 - LIGHT PANEL
- PCB1 - CIRCUIT BOARD ENGINE CONTROL
- PCB2 - CIRCUIT BOARD ENGINE CONTROL
- POT - POTENTIOMETER VOLTAGE ADJUST
- R2 - RESISTOR FIELD BOOST
- R3 - RESISTOR ENGINE ALTERNATOR
- SW1 - SWITCH - AUTO/MANUAL/OFF
- SW2 - SWITCH - TEST/RESET
- SW3 - SWITCH - TEST/RESET
- SW4 - SWITCH - PHASE SELECTOR
- TS1,2 - TERMINAL STRIP
- VM - A-C VOLTMETER
- VR - VOLTAGE REGULATOR

Appendix 1 – Electrical Data


“C” Option Control Panel 12 Volt Gas

Control Panel Wiring Diagram – Drawing No. 85024-A

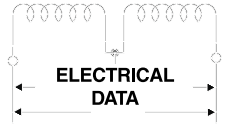


LEGEND


- | | | | |
|-----|--------------------------------|-------|--------------------------------|
| AM | AC AMMETER | L4 | LIGHT HIGH TEMP/LOW LEVEL |
| AR | ALARM RELAY | L5 | LIGHT LOW OIL PRESSURE |
| CB1 | CIRCUIT BREAKER | L7 | LIGHT IN AUTOMATIC START MODE |
| D1 | DIODE 600V, 12A | PCB1 | CIRCUIT BOARD ENGINE CONTROL |
| D2 | DIODE - 800V, 2A | PCB2 | CIRCUIT BOARD VOLTAGE ADJUST |
| F1 | FUSE - 15 AMPS | R1 | POTENTIOMETER - VOLTAGE ADJUST |
| G1 | GAUGE - WATER TEMP | R2 | RESISTOR FIELD BOOST |
| G2 | GAUGE - OIL PRESSURE | SW1 | SWITCH AUTO/MANUAL/OFF |
| J1 | CONNECTOR ALARM CIRCUIT BOARD | SW2 | SWITCH - START/STOP |
| J2 | CONNECTOR ENGINE CIRCUIT BOARD | SW3 | SWITCH - TEST/RESET |
| L1 | LIGHT RPM SENSOR LOSS | SW4 | SWITCH - PHASE SELECTOR |
| L2 | LIGHT OVERSPEED | TS1,2 | TERMINAL STRIP |
| L3 | LIGHT OVERCRANK | VM | A-C VOLTMETER |
| | | VR | VOLTAGE REGULATOR |

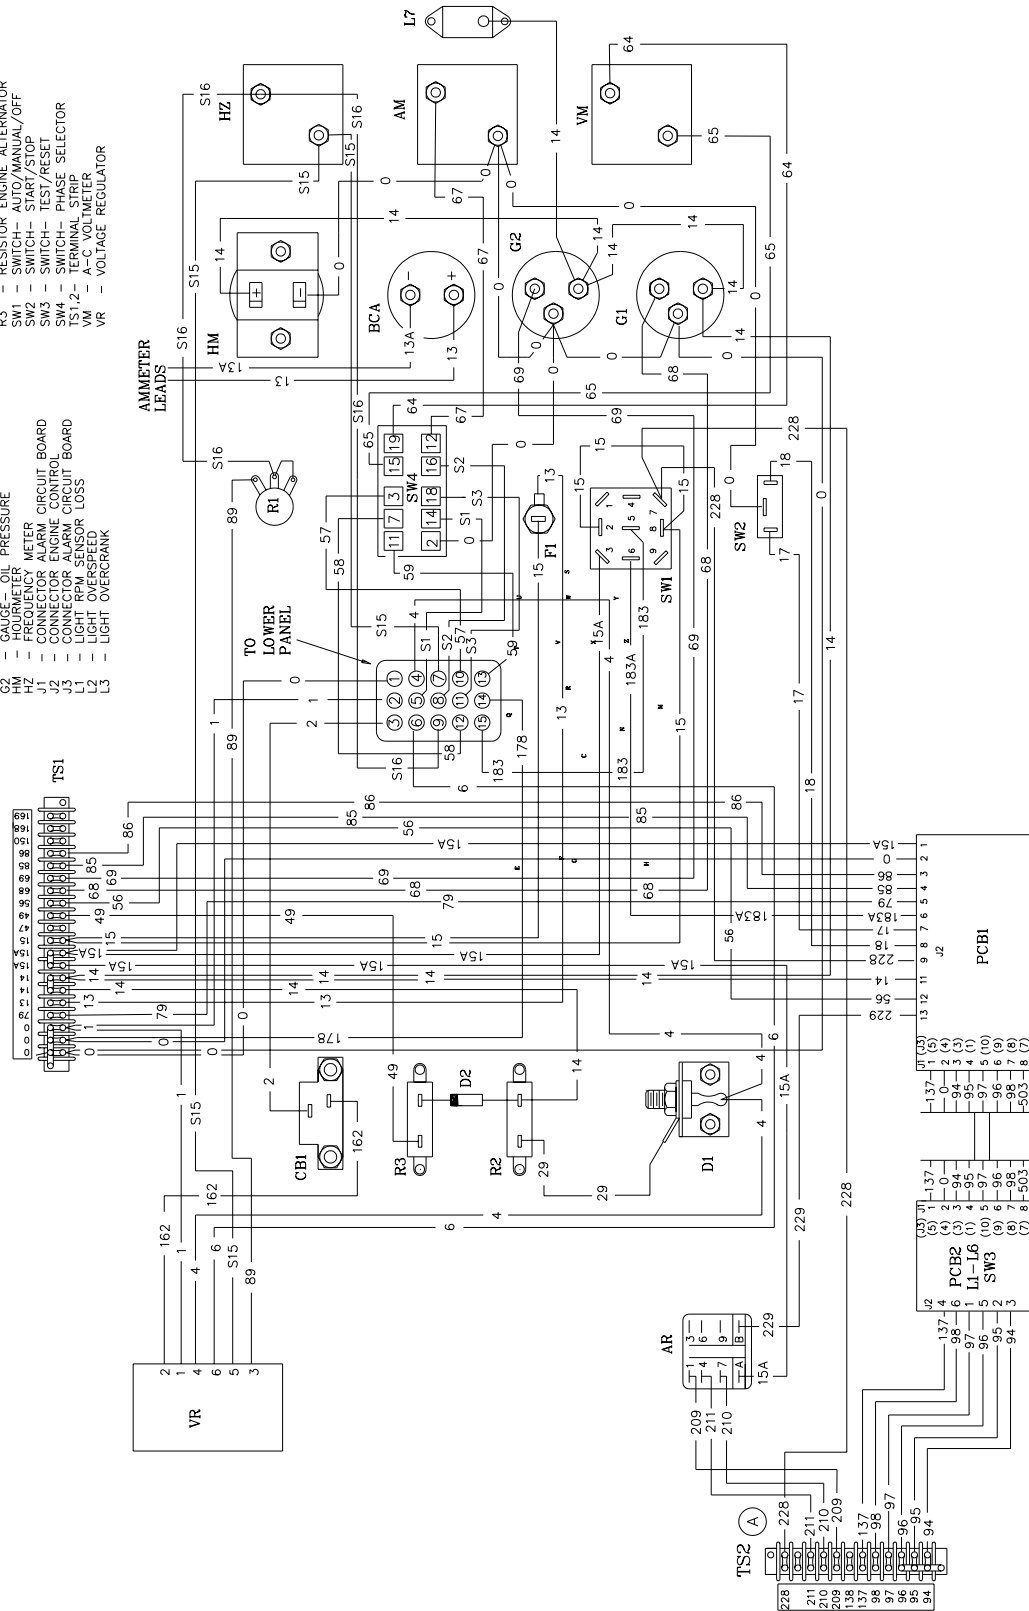

Appendix 2 – Exploded Views
"C" Option Control Panel 24 Volt Diesel
Control Panel – Drawing No. 84852-H

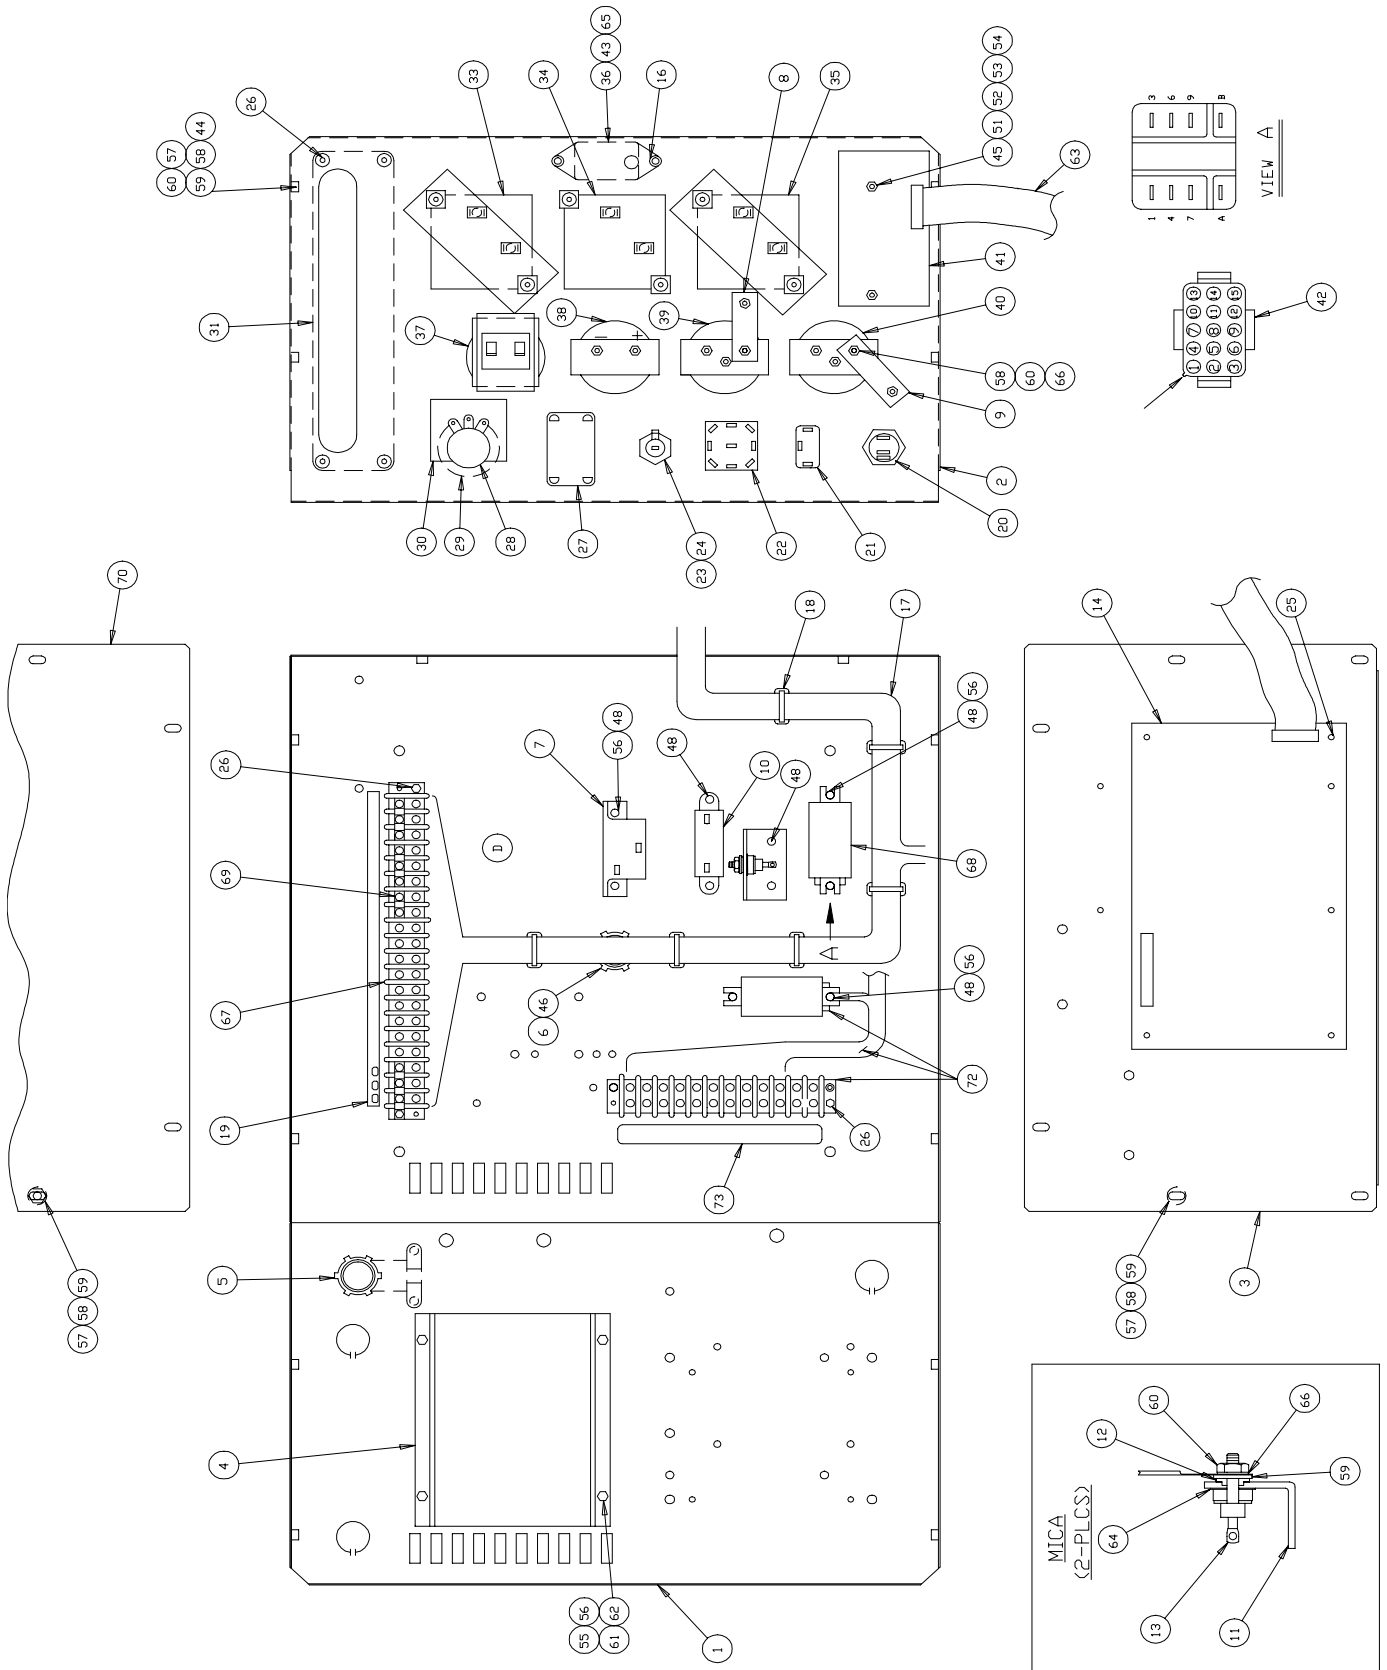


Appendix 2 – Exploded Views
"C" Option Control Panel 24 Volt Diesel
Control Panel – Drawing No. 84852-H

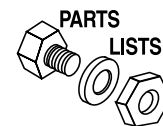


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	070023	1	PANEL CONTROL BOTTOM	35	070043	1	AC VOLTMETER-0 TO 300
2	070026	1	PANEL CONTROL FRONT		070044	1	AC VOLTMETER-0 TO 600
3	070028	1	PANEL CONTROL SIDE	36	083287	1	LIGHT HLDR CLR LNS W/O BULB
4	067680	1	REGULATOR ASSEMBLY VOLTAGE	37	070081	1	METER HOURS
	092952	1	REGULATOR VOLTAGE -50HZ	38	062304	1	AMMETER 40-0-40 DC
5	039271	1	FITTING 90DEGREE 3/4	39	055405	1	GAUGE OIL PRESSURE
6	034616	1	FITTING STRAIGHT 3/4	40	055406	1	GAUGE COOLANT TEMPERATURE
7	057159	1	CIRCT BRK 2 X 1 ETA 46-500-P	41	070083	1	ASSY PCB ENGINE MONITOR
	053623	1	CIRCT BRK 2.5 X 1 ETA 46-500-P	42	055089	1	CONN ELEC AMP M-N-L 15PLUG PNL
	054502	1	CIRCT BRK 3 X 1 ETA 46-500-P	43	070082	1	LIGHT BLOCKER
	056247	1	CIRCT BRK 3.5 X 1 ETA 46-500-P	44	053247	1	LUG RNGTNG INS 22-18X10X.322
	049350	1	CIRCT BRK 4 X 1 ETA 46-500-P	45	029187	2	SPACER .19X.31X.50 ST/ZNC
	048476	1	CIRCT BRK 4.5 X 1 AUT30KW CNT45K	46	077043B	16"	FLEX CONDUIT .50 ID
	048512	1	CIRCT BRK 5 X 1 ETA 46-500-P	48	0C2323	10	SCREW PHM SWAGE M4-0.7 X 16 Z/YC
	054450	1	CIRCT BRK 5.5 X 1 ETA 46-500-P	50	036904	4	SCREW PPHM #6-32 X 3/4 (NOT SHOWN)
	048505	1	CIRCT BRK 6 X 1 ETA 46-500-P	51	036908	2	SCREW PPHM #6-32 X 1-1/4
	048467	1	CIRCT BRK 7 X 1 ETA 46-500-P	52	022155	2	WASHER LOCK #6
	048468	1	CIRCT BRK 8 X 1 ETA 46-500-P	53	022985	5	WASHER FLAT #6
	048470	1	CIRCT BRK 9 X 1 ETA 46-500-P	54	022188	2	NUT HEX #6-32 STEEL
8	082985	1	RESISTOR 68R 5% 5W ASSY=55405	55	036918	4	SCREW PPHM #8-32 X 1/2
9	082984	1	RESISTOR 120R 10% 2W ASSY=55406	56	022264	10	WASHER LOCK M4
10	086266	1	RESISTOR WW LUG 75R 5% 25W	57	033121	14	SCREW HHM 10-32 X 1/2
11	055444	1	HEAT SINK 13.3L	58	022152	24	WASHER LOCK #10
12	030468	1	WASHER STEP NYLON .20	59	023897	15	WASHER FLAT #10 ZINC
13	049939	1	RECTIFIER MSC 12A 600V 1N1206R	60	022158	12	NUT HEX #10-32 STEEL
14	083089	1	ASSY PCB "C" CONTROL 12/24V	61	038150	4	WASHER FLAT #8 ZINC
16	024469	2	SCREW TAPTITE #10-32X3/8 BP	62	022471	4	NUT HEX #8-32 STEEL
17	084853	1	HARNESS, CONTROL PANEL	63	084787	1	RIBBON CABLE 16 IN.
18	029333	6	TIE WRAP 7" WHITE	64	070370	2	WASHER MICA .203
19	084875	1	DECAL, TERMINAL STRIP	65	083288	1	LIGHT 28VDC .17A MIN BAYNT MNT
20	055920	1	SWITCH 1PST SPADE PNL MNT	66	023762	3	WASHER SHAKEPROOF EXT #10 STL
21	055867	1	SWITCH SPDT 15A SPD TGGL MOM	67	057335	1	BLOCK TERM 20A 20 X 6 X 1100V
22	067625	1	SWITCH 3P TRIP THR 15/10A TGGL	68	081767	1	RELAY PNL 24VDC DPDT 10A
23	032300	1	FUSE HOLDER	69	046669	7	BLOCK TERM JUMPER FOR S141
24	022676	1	FUSE 15A X AGC15	70	064000	1	PANEL CONTROL SIDE
25	040213	4	PCB SUPPORT SNAP-IN 1/4	71	064008	1	PANEL CONTROL TOP (NOT SHOWN)
26	0C2428	8	SCREW TAPTITE PH #6-32X1/2 ZYC	72	098940	1	ASSY HARNESS CONTROL PNL C-OPT.
27	061945	1	SWITCH 6A AMP/V SELECTOR	73	066040	1	DECAL, TERMINAL STRIP
28	071361	1	POTENTIO PNL 5K +/-10% 2.25W	74	022507	4	SCREW HHC 1/4-20 X 1/2 G5 (NOT SHOWN)
29	050123	1	KNOB PLASTIC .25 SHAFT	75	022097	8	WASHER LOCK M6-1/4 (NOT SHOWN)
30	055349	1	INSULATOR	76	040479	4	MOUNT VIBR 1.00X1.00X1/4-20 (NOT SHOWN)
31	070030	1	COVER GENERAC SILKSCREEN	77	0441140156	1	ASSY WIRE 18AWG #15 (NOT SHOWN)
33	070042	1	METER FREQUENCY 55-65HZ	78	033147	1	SCREW HHM #10-32 X 1 (NOT SHOWN)
	070042A	1	METER FREQUENCY 240V 45-55HZ				
34	070054	1	AC AMMETER-0 TO 50				
	070055	1	AC AMMETER-0 TO 100				
	070056	1	AC AMMETER-0 TO 150				
	070045	1	AC AMMETER-0 TO 200				
	070057	1	AC AMMETER-0 TO 300				
	070058	1	AC AMMETER-0 TO 400				
	070059	1	AC AMMETER-0 TO 600				
	070060	1	AC AMMETER-0 TO 800				



Appendix 2 – Exploded Views
"C" Option Control Panel 24 Volt Gas
Control Panel – Drawing No. 84711-L

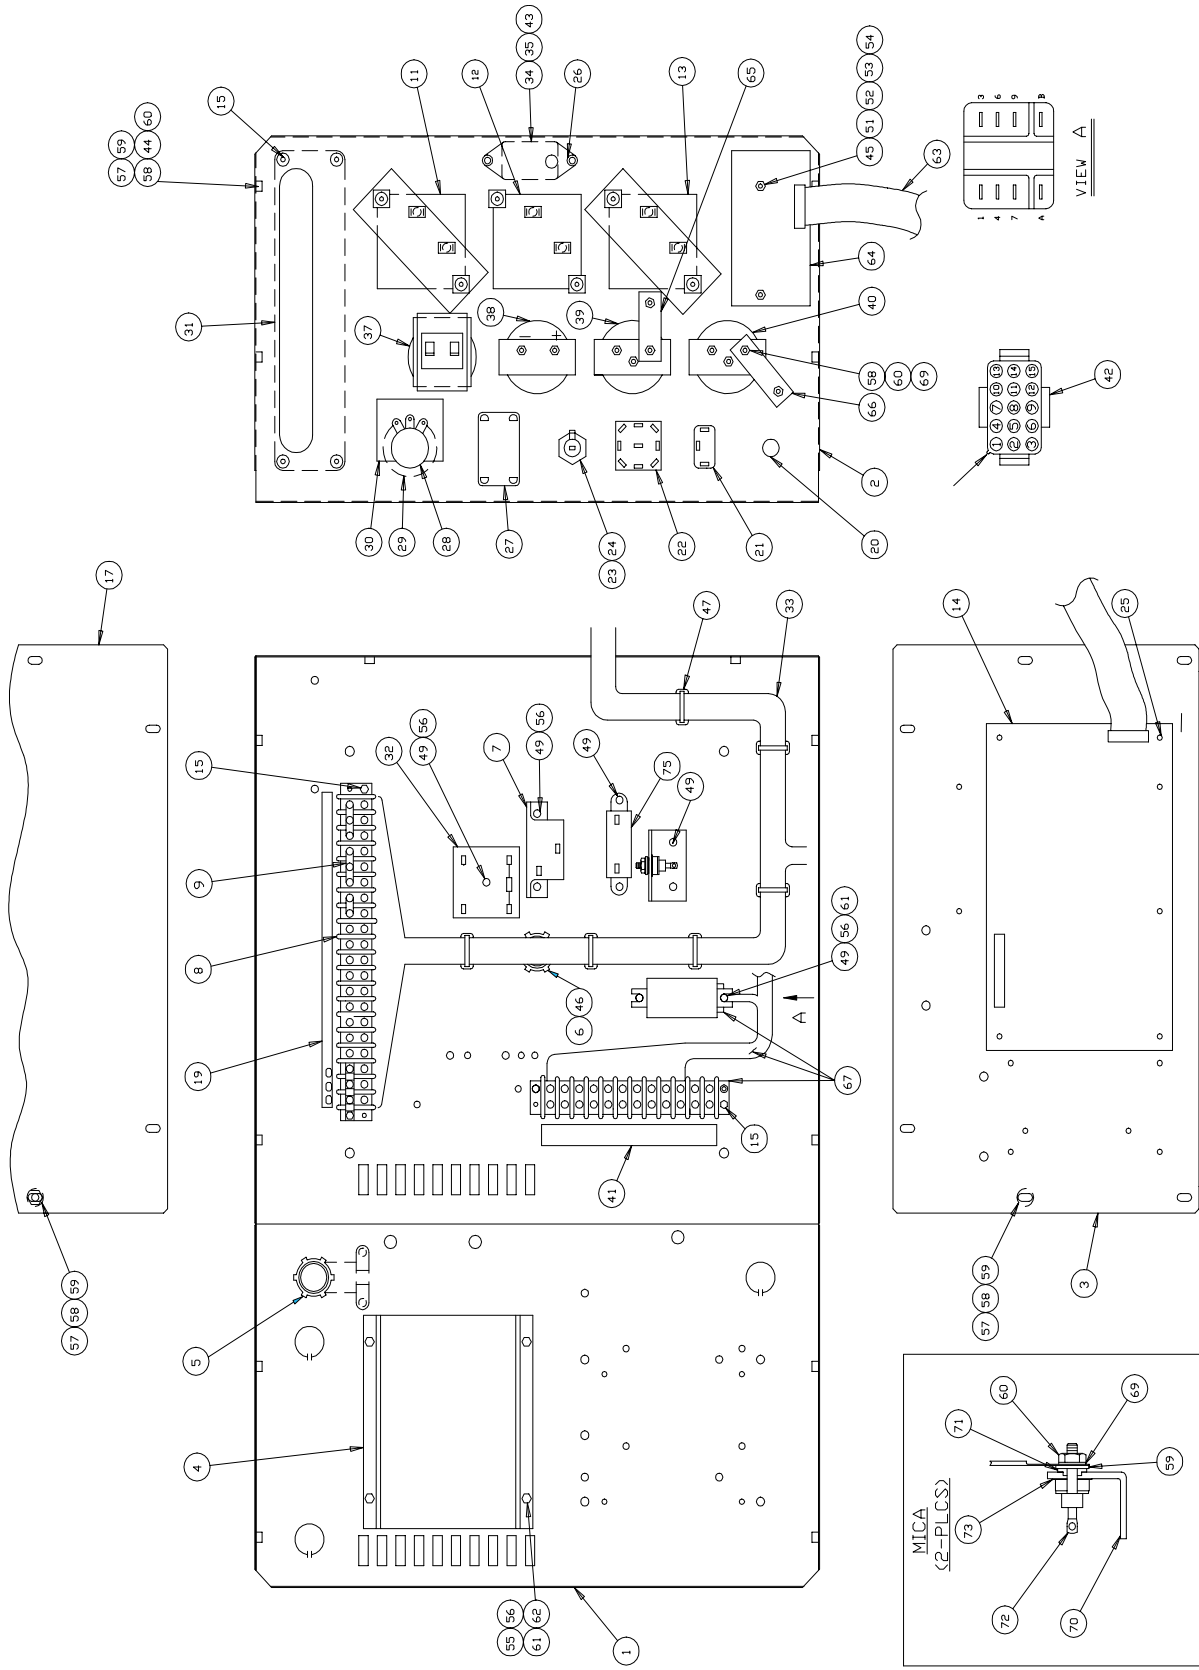


Appendix 2 – Exploded Views
"C" Option Control Panel 24 Volt Gas
Control Panel – Drawing No. 84711-L

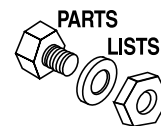


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	070023	1	CONTROL PANEL BOTTOM	31	070030	1	COVER GENERAC SILKSCREEN
2	070026	1	CONTROL PANEL FRONT	32	*084717	1	ASSEMBLY TIME RELAY
3	070028	1	CONTROL PANEL SIDE	33	084733	1	HARNESS CONTROL PANEL C
4	067680	1	REGULATOR ASSEMBLY VOLTAGE B&D	34	083287	1	LIGHT HLDLR CLR LNS W/O BULB
5	039271	1	FITTING 90 DEGREE 3/4	35	083288	1	LIGHT 28V DC .17A MIN BAYNT MNT
6	034616	1	FITTING STRAIGHT 3/4	37	070081	1	METER HOURS
7	057159	1	CIRCT BRK 2 X 1 ETA 46-500-P	38	062304	1	AMMETER 40-0-40 DC
	053623	1	CIRCT BRK 2.5 X 1 ETA 46-500-P	39	055405	1	GAUGE OIL PRESSURE
	054502	1	CIRCT BRK 3 X 1 ETA 46-500-P	40	055406	1	GAUGE COOLANT TEMPERATURE
	056247	1	CIRCT BRK 3.5 X 1 ETA 46-500-P	41	066040	1	DECAL TERMINAL STRIP
	049350	1	CIRCT BRK 4 X 1 ETA 46-500-P	42	055089	1	CONN ELEC AMP M-N-L 15 PLUG PNL
	048476	1	CIRCT BRK 4.5 X 1 AUT30KW CNT45K	43	070082	1	BLOCKER LIGHT
	048512	1	CIRCT BRK 5 X 1 ETA 46-500-P	44	053247	1	LUG RNGTNG INS 22-18 X 10 X .322
	504450	1	CIRCT BRK 5.5 X 1 ETA 46-500-P	45	029187	2	SPACER .19 X .31 X .50 ST/ZNC
	048505	1	CIRCT BRK 6 X 1 ETA 46-500-P	46	077043B	16"	FLEX CONDUIT .50 ID
	048467	1	CIRCT BRK 7 X 1 ETA 46-500-P	47	029333	6	TIE WRAP 7" WHITE
	048468	1	CIRCT BRK 8 X 1 ETA 46-500-P	49	0C2323	10	SCREW PHM SWAGE 6-32 X 5/8 Z/YC
	048470	1	CIRCT BRK 9 X 1 ETA 46-500-P	50	036904	2	SCREW PPHM #6-32 X 3/4 (NOT SHOWN)
8	057335	1	BLOCK TERM 20A 20 X 6 X 1100V	51	036908	2	SCREW PPHM #6-32 X 1-1/4
9	046669	7	BLOCK TERM JUMPER FOR S141	52	022155	2	WASHER LOCK #6
11	070042	1	METER FREQUENCY 55-65HZ	53	022985	6	WASHER FLAT #6-M4
	070042A	1	METER FREQUENCY 240V 45-55HZ	54	022188	2	NUT HEX #6-32 STEEL
12	070054	1	AMMETER AC 0 TO 50	55	036918	4	SCREW PPHM #8-32 X 1/2
	070055	1	AMMETER AC 0 TO 100	56	022264	11	WASHER LOCK M4
	070056	1	AMMETER AC 0 TO 150	57	033121	14	SCREW HHM 10-32 X 1/2
	070045	1	AMMETER AC 0 TO 200	58	022152	22	WASHER LOCK #10
	070057	1	AMMETER AC 0 TO 300	59	023897	15	WASHER FLAT #10 ZINC
	070058	1	AMMETER AC 0 TO 400	60	022158	11	NUT HEX #10-32 STEEL
	070059	1	AMMETER AC 0 TO 600	61	038150	8	WASHER FLAT #8 ZINC
	070060	1	AMMETER AC 0 TO 800	62	022471	4	NUT HEX #8-32 STEEL
13	070043	1	METER VOLT AC 0-300	63	084787	1	CABLE RIBBON 16"
	070044	1	METER VOLT AC 0-600	64	070083	1	ASSEMBLY ENGINE MONITOR
14	083089	1	ASSY BOARD "C" CONTROL 12/24V	65	082985	1	ASSEMBLY RESISTER 68 OHM 5W
15	0C2428	8	SCREW TAPTITE PH #6-32 X 1/2 ZYC	66	082984	1	ASSEMBLY RESISTER 120 OHM 2W
17	064000	1	CONTROL PANEL SIDE	67	098940	1	HARNESS C-OPT CTRL PNL
18	064008	1	COVER CONTROL PANEL TOP (NOT SHOWN)	69	023762	3	WASHER SHAKEPROOF EXT #10 STL
19	084736	1	DECAL TERMINAL STRIP	70	055444	1	SINK HEAT
20	026536	1	PLUG STEEL 0.5	71	030468	1	WASHER STEP NYLON .20
21	055867	1	SWITCH SPDT 15A SPD TGGL MOM	72	049939	1	RECTIFIER MSC 12A 600V 1N1206R
22	067625	1	SWITCH 3P TRIP THR 15/10A TGGL	73	070370	2	WASHER MICA .203
23	032300	1	HOLDER FUSE	75	086266	1	RESISTOR WW LUG 75R 5% 25W
24	022676	1	FUSE 15A X AGC15	76	022507	4	SCREW HHC 1/4-20 X 1/2 G5 (NOT SHOWN)
25	040213	4	PCB SUPPORT SNAP-IN 1/4	77	022097	8	WASHER LOCK M6-1/4 (NOT SHOWN)
26	024469	2	SCREW TAPTITE #10-32 X 3/8 BP	78	040479	4	MOUNT VIBR 1.0 X 1.0 X 1/4-20 (NOT SHOWN)
27	061945	1	SWITCH 6A AMP/V SELECTOR	79	0441140156	1	WIRE ASSY 18AWG #15 (NOT SHOWN)
28	071361	1	POTENTIOMETER 5K +/-10% 2.25W PNL	80	033147	1	SCREW HHM #10-32 X 1 (NOT SHOWN)
29	050123	1	KNOB PLASTIC .25 SHAFT				
30	055349	1	INSULATOR				

Appendix 2 – Exploded Views
"C" Option Control Panel 12 Volt Diesel
Control Panel – Drawing No. 85027-H

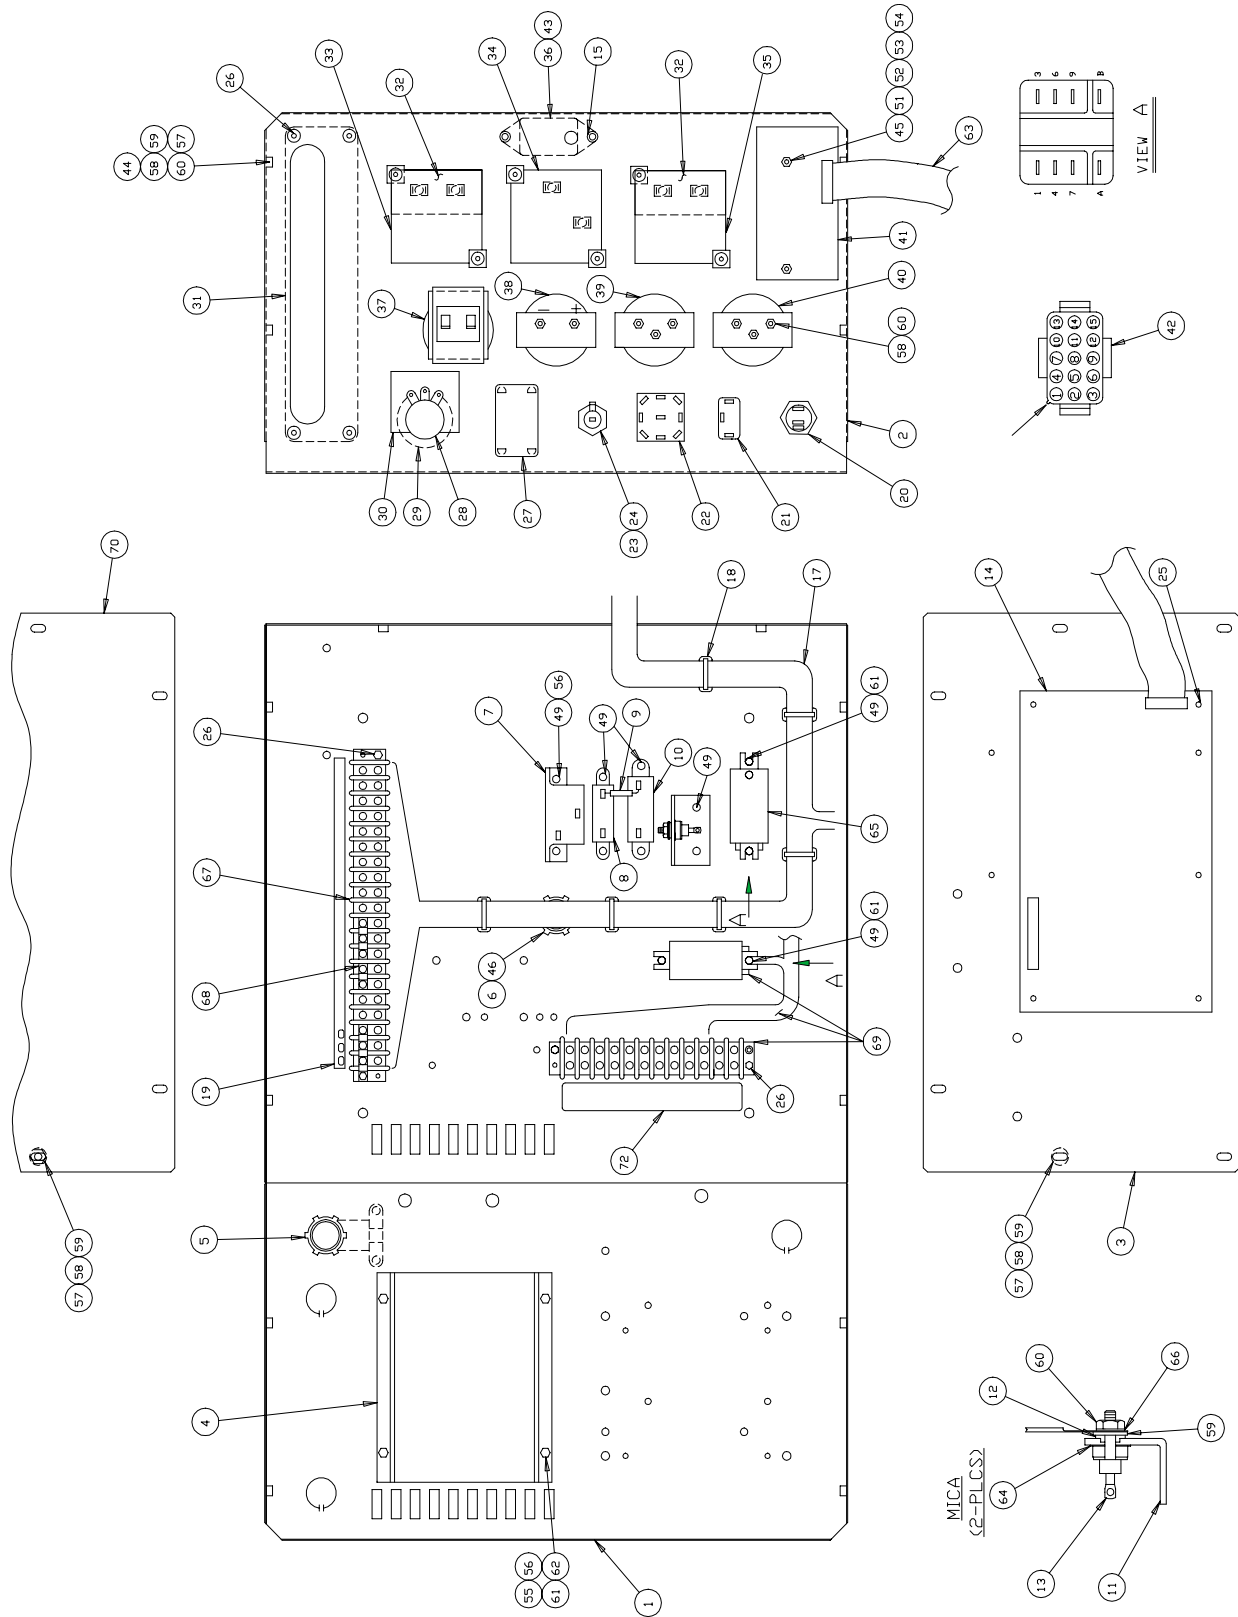


Appendix 2 – Exploded Views
"C" Option Control Panel 12 Volt Diesel
Control Panel – Drawing No. 85027-H

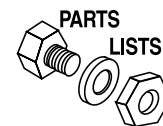


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	070023	1	CONTROL PANEL BOTTOM		070057	1	AMMETER AC 0 TO 300
2	070026	1	CONTROL PANEL FRONT		070058	1	AMMETER AC 0 TO 400
3	070028	1	CONTROL PANEL SIDE		070059	1	AMMETER AC 0 TO 600
4	067680	1	REGULATOR VOLT 60HZ		070060	1	AMMETER AC 0 TO 800
	092952	1	REGULATOR VOLT 50HZ	35	070043	1	METER VOLT AC 0 TO 300
5	039271	1	FITTING 90 DEGREE 3/4		070044	1	METER VOLT AC 0 TO 600
6	034616	1	FITTING STRAIGHT 3/4	36	070202	1	LIGHT PANEL
7	057159	1	CIRCT BRK 2 X 1 ETA 46-500-P	37	070081	1	METER HOURS
	053623	1	CIRCT BRK 2.5 X 1 ETA 46-500-P	38	062304	1	AMMETER 40-0-40 DC
	054502	1	CIRCT BRK 3 X 1 ETA 46-500-P	39	055405	1	GAUGE OIL PRESSURE
	056247	1	CIRCT BRK 3.5 X 1 ETA 46-500-P	40	055406	1	GAUGE COOLANT TEMPERATURE
	049350	1	CIRCT BRK 4 X 1 ETA 46-500-P	41	070083	1	ASSY ENGINE MONITOR
	048476	1	CIRCT BRK 4.5 X 1 AUT 30KW CNT45K	42	055089	1	CONN ELEC AMP M-N-L 15PLUG PNL
	048512	1	CIRCT BRK 5 X 1 ETA 46-500-P	43	070082	1	BLOCKER LIGHT
	054450	1	CIRCT BRK 5.5 X 1 ETA 46-500-P	44	053247	1	LUG RNGTNG INS 22-18 X 10 X .322
	048505	1	CIRCT BRK 6 X 1 ETA 46-500-P	45	029187	2	SPACER .19 X .31 X .50 ST/ZNC
	048467	1	CIRCT BRK 7 X 1 ETA 46-500-P	46	077043B	16"	FLEX CONDUIT .50 ID
	048468	1	CIRCT BRK 8 X 1 ETA 46-500-P	49	0C2323	12	SCREW PHM SWAGE 6-32X5/8 Z/YC
	048470	1	CIRCT BRK 9 X 1 ETA 46-500-P	51	036908	2	SCREW PPHM #6-32 X 1-1/4
8	044213	1	RESIST MISC 10R X 12W	52	022155	2	WASHER LOCK #6
9	025192	1	RECTIFIER MSC 2A 600V 1N5062	53	022985	2	WASHER FLAT #6
10	048352	1	RESIST MISC 5R X 25W	54	022188	2	NUT HEX #6-32 STEEL
	057907	1	RESISTOR WW LUG 10R 10% 25W	55	036918	4	SCREW HHM #8-32 X 1/2
	057405	1	RESIST MISC 25R X 25W	56	022264	6	WASHER LOCK M4
11	055444	1	HEAT SINK 13.3L	57	033121	14	SCREW HHM 10-32 X 1/2
12	030468	1	WASHER STEP NYLON .20	58	022152	20	WASHER LOCK #10
13	049939	1	RECTIFIER MSC 12A 600V 1N1206R	59	023897	12	WASHER FLAT #10
14	083089	1	BOARD "C" CONTROL 12/24V	60	022158	9	NUT HEX #10-32 STEEL
15	024469	2	SCREW TAPTITE #10-32X3/8 BP	61	038150	4	WASHER FLAT #8 ZINC
17	085058	1	HARNESS 12 VOLT DIESEL	62	022471	4	NUT HEX #8-32 STEEL
18	029333	6	TIE WRAP 7" WHITE	63	084787	1	CABLE RIBBON 16"
19	070097	1	DECAL TERMINAL STRIP	64	070370	2	WASHER MICA .203
20	055920	1	SWITCH 1PST PSADE PNL MNT	65	063617	1	RELAY PNL 12VDC DPDT 10A @ 240VA
21	055867	1	SWITCH SPDT 15A SPD TGGL MOM	66	023762	1	WASHER SHAKEPROOF EXT #10 STL
22	067625	1	SWITCH 3P TRIP THR 15/10A TGGL	67	057335	1	BLOCK TERM 20A 20 X 6 X 1100V
23	032300	1	HOLDER FUSE	68	046669	5	JUMPER TERMINAL BLOCK
24	022676	1	FUSE 15A X AGC15	69	098940	1	HARNESS C-OPTION CONTROL PANEL
25	040213	4	CONN PCB SUP SNAP-IN	70	064000	1	SIDE CONTROL PANEL
26	0C2428	8	SCREW TAPTITE PH #6-32 X 1/2 ZYC	71	064008	1	COVER CONTROL PANEL TOP (NOT SHOWN)
27	061945	1	SWITCH 6A AMP/V SELECTOR				
28	071361	1	POTENTIO PNL 5K +/-10% 2.25W	72	066040	1	DECAL TERMINAL STRIP
29	050123	1	KNOB PLASTIC .25 SHAFT	73	022507	4	SCREW HHC 1/4-20 X 1/2 G5 (NOT SHOWN)
30	055349	1	INSULATOR				
31	070030	1	COVER SILKSCREEN	74	022097	8	WASHER LOCK M6-1/4 (NOT SHOWN)
32	070080	2	INSULATOR	75	040479	4	MOUNT VIBR 1.00X1.00X1/4-20 (NOT SHOWN)
33	070042	1	METER FREQUENCY 55-65HZ				
	070042A	1	METER FREQUENCY 240V 45-55HZ	76	036904	2	SCREW PPHM #6-32 X 3/4 (NOT SHOWN)
34	070054	1	AMMETER AC 0 TO 50				
	070055	1	AMMETER AC 0 TO 100	77	0441140156	1	ASSY WIRE 18AWG #15 (NOT SHOWN)
	070056	1	AMMETER AC 0 TO 150	78	033147	1	SCREW HHM #10-32 X 1 (NOT SHOWN)
	070045	1	AMMETER AC 0 TO 200				

Appendix 2 – Exploded Views

**"C" Option Control Panel 12 Volt Gas
Control Panel – Drawing No. 85026-H**

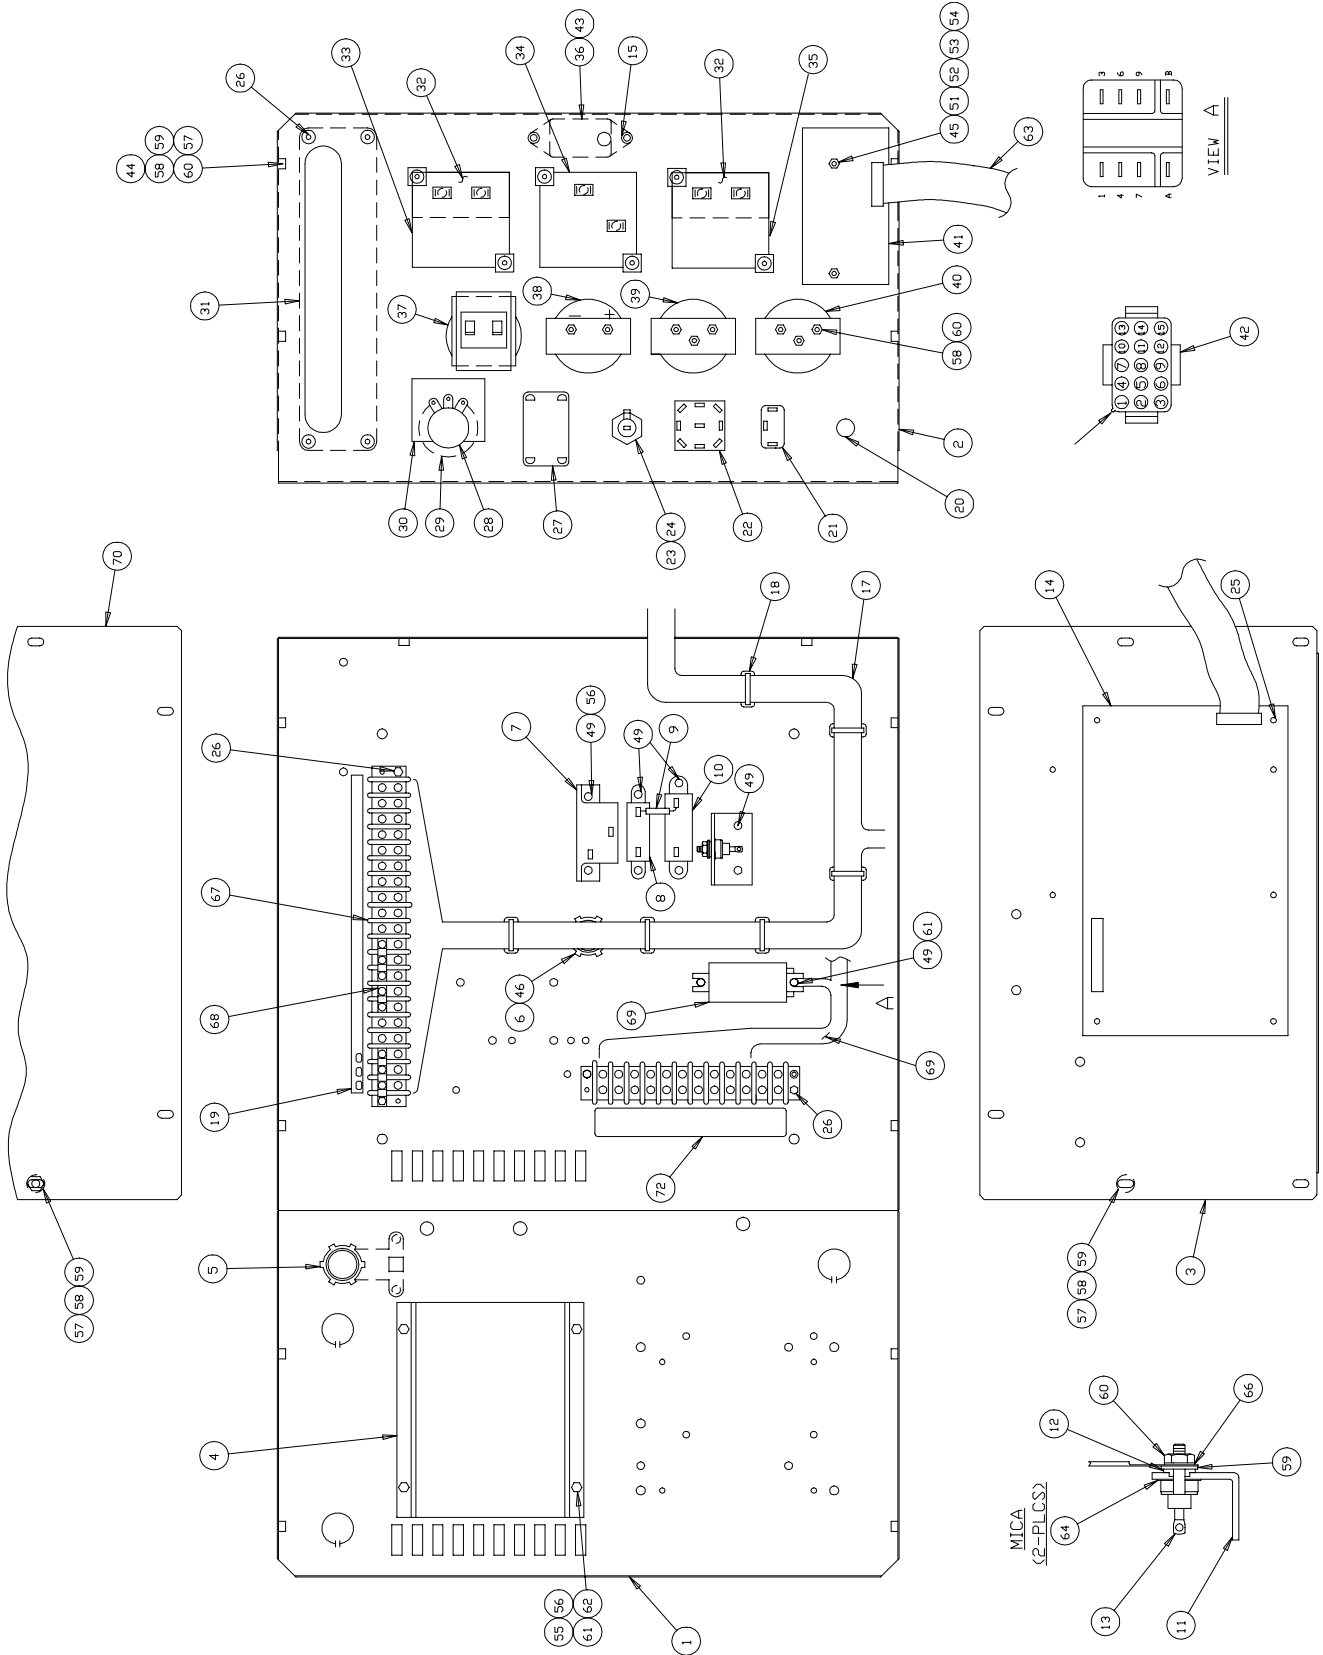

Appendix 2 – Exploded Views
"C" Option Control Panel 12 Volt Gas
Control Panel – Drawing No. 85026-H

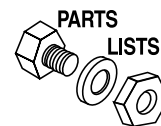

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	070023	1	PANEL BOTTOM CONTROL	070057	1	AC AMMETER-0 TO 300	
2	070026	1	PANEL FRONT CONTROL	070058	1	AC AMMETER-0 TO 400	
3	070028	1	PANEL SIDE CONTROL	070059	1	AC AMMETER-0 TO 600	
4	067680	1	REGULATOR ASSY. VOLTAGE 60HZ	070060	1	AC AMMETER-0 TO 800	
	092952	1	REGULATOR ASSY. VOLTAGE 50HZ	35	070043	1	AC VOLTMETER-0 TO 300
5	039271	1	FITTING 90DEGREE 3/4	070044	1	AC VOLTMETER-0 TO 600	
6	034616	1	FITTING STRAIGHT 3/4	36	070202	1	LIGHT PANEL #26306C
7	057159	1	CIRCT BRK 2 X 1 ETA 46-500-P	37	070081	1	METER HOURS
	053623	1	CIRCT BRK 2.5 X 1 ETA 46-500-P	38	062304	1	AMMETER 40-0-40 DC
	054502	1	CIRCT BRK 3 X 1 ETA 46-500-P	39	055405	1	GAUGE OIL PRESSURE
	056247	1	CIRCT BRK 3.5 X 1 ETA 46-500-P	40	055406	1	GAUGE COOLANT TEMPERATURE
	049350	1	CIRCT BRK 4 X 1 ETA 46-500-P	41	070083	1	ASSY ENGINE MONITOR
	048476	1	CIRCT BRK 4.5 X 1 AUT30KW CNT45K	42	055089	1	CONN ELEC AMP M-N-L 15PLUG PNL
	048512	1	CIRCT BRK 5 X 1 ETA 46-500-P	43	070082	1	LIGHT BLOCKER
	054450	1	CIRCT BRK 5.5 X 1 ETA 46-500-P	44	053247	1	LUG RNGTNG INS 22-18X10X.322
	048505	1	CIRCT BRK 6 X 1 ETA 46-500-P	45	029187	2	SPACER .19X.31X.50 ST/ZNC
	048467	1	CIRCT BRK 7 X 1 ETA 46-500-P	46	077043B	16"	FLEX CONDUIT .50 ID
	048468	1	CIRCT BRK 8 X 1 ETA 46-500-P	49	0C2323	12	SCREW PHM SWAGE 6-32X5/8 Z/YC
	048470	1	CIRCT BRK 9 X 1 ETA 46-500-P				
8	044213	1	RESIST MISC 5R 5% 12W	51	036908	1	SCREW PPHM #6-32 X 1-1/4
9	025192	1	RECTIFIER MSC 2A 600V 1N5062	52	022155	2	WASHER LOCK #6
10	048352	1	RESIST MISC 5R 5% 25W	53	022985	2	WASHER FLAT #6
11	055444	1	HEAT SINK 13.3L	54	022188	2	NUT HEX #6-32 STEEL
12	030468	1	WASHER STEP NYLON .20	55	036918	4	SCREW PPHM #8-32 X 1/2
13	049939	1	RECTIFIER MSC 12A 600V 1N1206R	56	022264	6	WASHER LOCK M4
				57	033121	14	SCREW HHM 10-32 X 1/2
14	083089	1	ASSY PCB "C" CONTROL 12/24V	58	022152	22	WASHER LOCK #10
15	024469	2	SCREW TAPTITE #10-32X3/8 BP	59	023897	14	WASHER FLAT #10 ZINC
17	085025	1	HARNESS 12-V. GAS	60	022158	9	NUT HEX #10-32 STEEL
18	029333	6	TIE WRAP 7" WHITE	61	038150	4	WASHER FLAT #8 ZINC
19	070097	1	DECAL TERMINAL STRIP	62	022471	4	NUT HEX #8-32 STEEL
20	026536	1	PLUG STEEL 0.5	63	084787	1	CABLE RIBBON 16"
21	055867	1	SWITCH SPDT 15A SPD TGGL MOM	64	070370	2	WASHER MICA .203
				66	023762	1	WASHER SHAKEPROOF0 EXT #10 STL
22	067625	1	SWITCH 3P TRIP THR 15/10A TGGL	67	057335	1	BLOCK TERM 20A 20 X 6 X 1100V
23	032300	1	FUSE HOLDER	68	046669	5	BLOCK TERM JUMPER
24	022676	1	FUSE 15A X AGC15	69	098940	1	HARNESS "C" OPTION
25	040213	4	PCB SUPPORT SNAP-IN 1/4	70	064000	1	PANEL SIDE CONTROL
26	0C2428	8	SCREW TAPTITE PH #6-32X1/2 ZYC	71	064008	1	PANEL TOP CONTROL (NOT SHOWN)
27	061945	1	SWITCH 6A AMP/V SELECTOR	72	066040	1	DECAL TERMINAL STRIP
28	071361	1	POTENTIO PNL 5K +/-10% 2.25W	73	036904	2	SCREW PPHM #6-32 X 3/4 (NOT SHOWN)
29	050123	1	KNOB PLASTIC .25 SHAFT				
30	055349	1	INSULATOR	74	022507	4	SCREW HHC 1/4-20 X 1/2 G5
31	070030	1	COVER GENERAC SILKSCREEN	75	040479	4	MOUNT VIBR 1.00X1.00X1/4-20
32	070080	2	INSULATOR	76	022097	8	WASHER LOCK M6-1/4
33	070042	1	METER FREQUENCY 60HZ	77	0441140156	1	ASSY WIRE 18AWG #15 (NOT SHOWN)
	070042A	1	METER FREQUENCY 50HZ				
34	070054	1	AC AMMETER-0 TO 50	78	033147	1	SCREW HHM #10-32 X 1 (NOT SHOWN)
	070055	1	AC AMMETER-0 TO 100				
	070056	1	AC AMMETER-0 TO 150				
	070045	1	AC AMMETER-0 TO 200				

GENERAC® POWER SYSTEMS, INC.

P.O. BOX 8
WAUKESHA, WI 53187

Part No. OC4205

Revision 0 (03/13/01)

Printed in U.S.A.