


Software Operation and Installation

Generator System Monitoring and
Control Software for Windows®

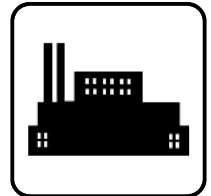

Software:

Monitor II

Applies to:

Decision-Maker™ 550 Controller
Decision-Maker™ 340 Controller
M340+ Transfer Switch Controller
M340 Transfer Switch Controller
PM340 Power Monitor



KOHLER[®]
POWER SYSTEMS

TP-5972 4/01d

Table of Contents

Product Identification Information	Inside front cover
Safety Precautions and Instructions	I
Introduction	i
Service Assistance	ii
Section 1 Requirements and Installation	1
1.1 Introduction	1
1.2 About This Manual	1
1.2.1 Organization	1
1.2.2 Conventions	1
1.3 Installation Requirements	1
1.4 Online PC Connections	2
1.4.1 Local Single Connection	2
1.4.2 Local Area Network (LAN)	3
1.4.3 Remote Single Connection	3
1.4.4 Remote Area Network	3
1.5 Software Installation	4
1.5.1 Installation	4
1.5.2 Uninstallation	4
Section 2 Setup and Operation	5
2.1 Introduction	5
2.2 Connect the Hardware	5
2.3 Set Up the Devices	5
2.4 Start Monitor II	7
2.5 Set Up and Test the Communication Connections	8
2.5.1 Local Connection Setup	8
2.5.2 Remote Connection Setup	9
2.6 Connect to the Device(s)	11
2.7 Add Data Windows and Build Screens	12
2.7.1 Adding Data Windows	13
2.7.2 Working with Data Windows	13
2.7.3 Choosing Analog or Digital Displays	14
2.7.4 Copying Data Windows	14
2.7.5 Deleting Data Windows	14
2.7.6 Saving Screens	14
2.7.7 Opening Screens	15
2.7.8 Clearing Screens	15
2.7.9 Printing Screens	15
2.7.10 Using Templates	15
2.8 Enter User-Programmable Settings	15
2.8.1 User-Programmable Settings	15
2.8.2 Device Designation	16
2.8.3 Relay Driver Outputs	16
2.8.4 Software-Controlled RDOs	16
2.8.5 Engine Start	16
2.9 Save Device Settings	17
2.10 Monitor and Control Devices	17
2.11 Save Screens or Template Files	17
2.12 Disconnect and Exit	17

Table of Contents, continued

Section 3 Working Offline (Configuration Mode)	19
3.1 Configuration Mode	19
3.2 Constructing or Editing a Device List	19
3.3 Building Screens	19
3.4 Using Screens	19
Section 4 Decision-Maker 550 Generator Set Controller	21
4.1 Introduction	21
4.2 Data Windows	21
4.3 Analog Inputs	26
4.4 Common Fault Selections	26
4.5 Digital Inputs	27
4.6 Operational Summary	27
4.6.1 Engine Start and Run	27
4.6.2 Reset Maintenance Records	28
4.7 Relay Driver Outputs	28
4.7.1 Software-Controlled RDOs	29
4.7.2 NFPA 110 Defaults	29
4.8 Time and Date	29
4.9 Decision-Maker 550 Generator Set Controller Parameter Locations	29
4.10 System Event, Common Fault, and RDO Message Summary	31
Section 5 Decision-Maker 340 Controller Data Windows	33
5.1 Introduction	33
5.2 Data Windows	33
5.3 Common Fault Selections	36
5.4 Relay Driver Outputs	36
5.5 Status	36
5.5.1 System Alert Messages	37
5.5.2 Engine Start	37
5.6 Time and Date	37
5.7 Decision-Maker 340 Generator Set Controller Data Windows Item Locations ..	38
Section 6 M340 and M340+ ATS Controller	39
6.1 Introduction	39
6.2 Data Windows	39
6.3 ATS Status Window	43
6.3.1 System Alert Messages	43
6.3.2 Exercising the Generator Set	44
6.4 Load Shed	44
6.5 Source History	45
6.6 Trip Points	45
6.7 M340 and M340+ ATS Controller Item Locations	46
Section 7 Power Monitor	47
7.1 Introduction	47
7.2 Data Windows	47
7.3 Status	49
7.3.1 System Alert Messages	49
7.3.2 Manual Test	49
7.4 Time and Date	49
7.5 Time Delays	49
7.6 Item Locations	50
Appendix A Abbreviations	A-1
Appendix B Pull-Down Menus and Toolbars	A-3
Appendix C Connection Worksheets	A-6

Safety Precautions and Instructions

IMPORTANT SAFETY INSTRUCTIONS. Electromechanical equipment, including generator sets, transfer switches, switchgear, and accessories, can cause bodily harm and pose life-threatening danger when improperly installed, operated, or maintained. To prevent accidents be aware of potential dangers and act safely. Read and follow all safety precautions and instructions. **SAVE THESE INSTRUCTIONS.**

This manual has several types of safety precautions and instructions: Danger, Warning, Caution, and Notice.

DANGER

Danger indicates the presence of a hazard that **will cause severe personal injury, death, or substantial property damage.**

WARNING

Warning indicates the presence of a hazard that **can cause severe personal injury, death, or substantial property damage.**

CAUTION

Caution indicates the presence of a hazard that **will or can cause minor personal injury or property damage.**


NOTICE

Notice communicates installation, operation, or maintenance information that is safety related but not hazard related.

Safety decals affixed to the equipment in prominent places alert the operator or service technician to potential hazards and explain how to act safely. The decals are shown throughout this publication to improve operator recognition. Replace missing or damaged decals.

Accidental Starting

WARNING



Accidental starting.
Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. **Accidental starting can cause severe injury or death.** Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.

Hazardous Voltage/ Electrical Shock

WARNING



Hazardous voltage.
Can cause severe injury or death.

Disconnect all power sources before opening the enclosure.

(600 volts and under)

WARNING




Hazardous voltage.
Can cause severe injury or death.

Disconnect all power sources before servicing. Install the barrier after adjustments, maintenance, or servicing.

(600 volts and under)

WARNING

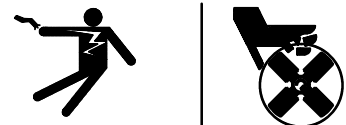


Hazardous voltage. Moving rotor.
Can cause severe injury or death.

Operate the generator set only when all guards and electrical enclosures are in place.

Servicing the transfer switch controls and accessories within the enclosure. Hazardous voltage can cause severe injury or death. Disconnect the transfer switch controls at the inline connector to deenergize the circuit boards and logic circuitry but allow the transfer switch to continue to supply power to the load. Disconnect all power sources to accessories that are mounted within the enclosure but are not wired through the controls and deenergized by inline connector separation. Test circuits with a voltmeter to verify that they are deenergized before servicing.

Opening the power monitor enclosure. Hazardous voltage can cause severe injury or death. A transfer switch or generator set connected to the power monitor could automatically energize the power monitor or accessories. Disconnect all power sources before opening the enclosure. Move the generator set master switch on the controller to the OFF position and disconnect the battery negative (-) lead before proceeding.

Moving Parts

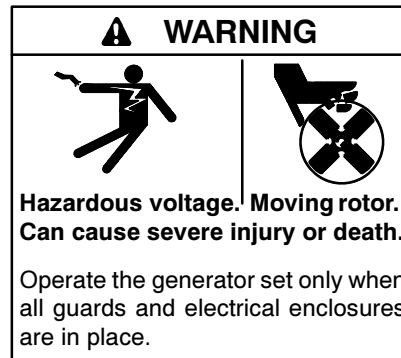

Notice

NOTICE

Hardware damage. The engine and generator set may use both American Standard and metric hardware. Use the correct size tools to prevent rounding of the bolt heads and nuts.

NOTICE

Hardware damage. The transfer switch may use both American Standard and metric hardware. Use the correct size tools to prevent rounding of the bolt heads and nuts.

NOTICE

Hardware damage. The power monitor may use both American Standard and metric hardware. Use the correct size tools to prevent rounding of the bolt heads and nuts.

NOTICE

Electrostatic discharge damage. Electrostatic discharge (ESD) damages electronic circuit boards. Prevent electrostatic discharge damage by wearing an approved grounding wrist strap when handling electronic circuit boards or integrated circuits. An approved grounding wrist strap provides a high resistance (about 1 megohm), *not a direct short*, to ground.

This manual covers the installation and operation of the Monitor II remote monitoring and control communication software for personal computers running the Windows® operating system. The software allows the operator to communicate with Decision-Maker™ 550 and Decision-Maker™ 340 generator set controllers, M340 and M340+ automatic transfer switch controllers, and PM340 power monitors.

Information in this publication represents data available at the time of print. Kohler Co. reserves the right to change this literature and the products represented without notice and without any obligation or liability whatsoever.

Use only Kohler® communication products specified for use with Kohler® products. Kohler Co. assumes no responsibility for problems or equipment damage resulting from the use of non-Kohler products.

Read this manual and carefully follow all procedures and safety precautions to ensure proper equipment operation and to avoid bodily injury. Read and follow the Safety Precautions and Instructions section at the beginning of this manual. Keep this manual with the equipment for future reference.

List of Related Materials

The software covered by this manual is part of a total control system. Separate manuals provide specific information about setting up each transfer switch, generator set controller, or power monitor to enable

remote communications and programming. The manuals also provide information about equipment operating limits, specifications, and functions. The related manual numbers follow.

Controller	Operation/ Installation Manual
Decision-Maker™ 550 generator set controller	TP-6083
Decision-Maker™ 340 generator set controller	TP-5829
M340 controller for model K and KB transfer switches	TP-5569
M340 controller for model GLN/GLS/GTN/GTS transfer switches	TP-5994
M340+ controller for transfer switches	TP-5664
PM340 power monitor	TP-5875
Communication kits	TT-847

Controller communications may require additional communication products. See the operation and installation instruction sheet for controller communication kits, TT-847, for additional information.

Consult specification sheets, accessory installation instructions, service bulletins, application notes, drawings, and other applicable literature for additional information on equipment operating limits and specifications. Contact your local distributor or dealer or the equipment manufacturer to obtain applicable literature.

Service Assistance

Please contact a local authorized distributor/dealer for sales, service, or other information about Kohler Co. Generator Division products.

- Look on the product or in the information included with the product
- Consult the Yellow Pages under the heading Generators—Electric
- Visit the Kohler Co. Generator Division web site at www.kohlergenerators.com
- Inside the U.S.A. and Canada, call 1-800-544-2444
- Outside the U.S.A. and Canada, call the nearest regional office

Africa, Europe, Middle East

London Regional Office
Langley, Slough, England
Phone: (44) 1753-580-771
Fax: (44) 1753-580-036

Australia

Australia Regional Office
Queensland, Australia
Phone: (617) 3893-0061
Fax: (617) 3893-0072

China

China Regional Office
Shanghai, People's Republic of China
Phone: (86) 21-6482 1252
Fax: (86) 21-6482 1255

India, Bangladesh, Sri Lanka

India Regional Office
Bangalore, India
Phone: (91) 80-2284270
(91) 80-2284279
Fax: (91) 80-2284286

Japan

Japan Regional Office
Tokyo, Japan
Phone: (813) 3440-4515
Fax: (813) 3440-2727

Latin America

Latin America Regional Office
Lakeland, Florida, U.S.A.
Phone: (941) 619-7568
Fax: (941) 701-7131

South East Asia

Singapore Regional Office
Singapore, Republic of Singapore
Phone: (65) 264-6422
Fax: (65) 264-6455

Xin:008:001

Section 1 Requirements and Installation

1.1 Introduction

The Monitor II software allows monitoring and control of generator set controllers, transfer switch controllers, and power monitors using a personal computer (PC) with the Windows® operating system and user interface. Monitor II allows an operator to view the status and change the settings of the following devices:

- Decision-Maker™ 550 generator set controller
- Decision-Maker™ 340 generator set controller
- M340 and M340+ automatic transfer switch controllers
- PM340 power monitor

The software allows communication through local direct connections or remote modem connections. See Section 1.4 and the communication kit installation instructions for more information on different configurations, communication port locations, communication kit installation, and connections.

1.2 About This Manual

1.2.1 Organization

This manual is divided into six numbered sections:

- **Section 1, Requirements and Installation.** This section explains the system requirements and the communication connections. It also explains how to install the software.
- **Section 2, Setup and Operation.** This section explains how to set up devices and run the program.
- **Section 3, Working Offline (Configuration Mode).** This section explains how to create data windows and build screens while the PC is not connected to a device or a network of devices.
- **Sections 4 through 7.** These sections list and describe the data windows available for each device.

1.2.2 Conventions

This manual uses an arrow → to show an item or submenu in a menu. For example, File→New represents selecting New from the File menu.

For simplicity, this manual and the software assumes that the PC has the CD-ROM drive installed as the D: drive and the hard drive installed as the C: drive. If your drive locations are different, type in the correct drive letter for your PC hard drive or CD-ROM drive when applicable during software installation or operation.

1.3 Installation Requirements

The Monitor II software requires the following minimum hardware and software:

- 486 or Pentium® processor-based IBM® PC or 100% compatible computer, 33 MHz clock speed
- Microsoft® Windows® 95 with Internet Explorer 4.0 or higher, Windows® 98, Windows NT® Workstation version 4.0, or Windows® 2000 Professional operating system
- 8 MB extended memory
- CD-ROM drive and 5 MB available hard drive space for installation
- VGA resolution video adapter compatible with the operating system
- RS-232 serial COM port labeled between 1 and 16. Must support 1200, 2400, or 9600 baud for the Decision-Maker™ 550 controller; or 2400, 4800, or 9600 baud for the other controllers listed in Section 1.1
- Internal or external modem that supports 1200, 2400, or 9600 baud for the Decision-Maker™ 550 controller; or 2400, 4800, or 9600 baud for the other controllers listed in Section 1.1
- Additional communications hardware such as RS-232 to RS-485 port converters or modems depending upon the connection type
- Customer-provided system wiring and/or telephone lines

Pentium® is a registered trademark of Intel Corporation.
IBM® is a registered trademark of International Business Machines Corporation.
Microsoft®, Windows®, and Windows NT® are registered trademarks of Microsoft Corporation.

1.4 Online PC Connections

The Monitor II software allows the PC to communicate with one or more of the following devices: Decision-Maker™ 550 controller, Decision-Maker™ 340 controller, M340 and M340+ automatic transfer switch controllers, and PM340 power monitor. These PC connections require the following items:

- Monitoring and control communication software for the PC (the software covered by this manual).
- A port on each device. Some devices require communication module kits.
- Other hardware depending upon the connection type between the devices and the PC.

Contact your authorized distributor/dealer for availability. See the installation instructions for communication kits for additional information. See List of Related Materials in the Introduction.

Use only Kohler® communication products specified for use with Kohler® products. Kohler Co. assumes no responsibility for problems or equipment damage resulting from the use of non-Kohler products.

A local connection uses a direct cable connection between the PC and the device(s) being monitored. A remote connection uses a telephone line and modem to connect the PC to the device(s) being monitored. The PC can connect to a single device or a local area network (LAN) of devices (generator set controllers, automatic transfer switch controllers, or power monitors), resulting in four PC connection types: local single, local area network, remote single, and remote area network.

1.4.1 Local Single Connection

Use an RS-232 null modem cable to connect a PC to the RS-232 port on a device (such as a generator set controller) that is located within 15 m (50 ft.) of the PC. See Figure 1-1. For longer connections, use an RS-232 to RS-485 port converter within 15 m (50 ft.) of the PC. Then use an RS-485 cable to connect to an RS-485 port on a device located up to 1220 m (4000 ft.) away from the converter. See Figure 1-2.

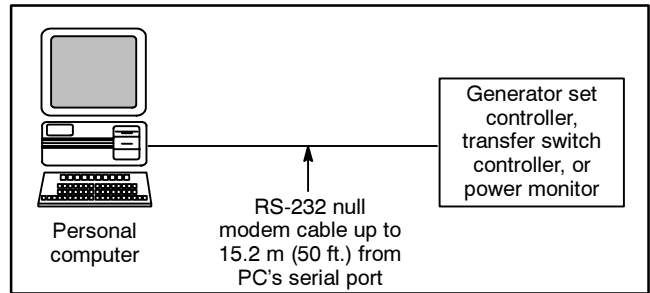


Figure 1-1 Local Single Connection, up to 15 m (50 ft.)

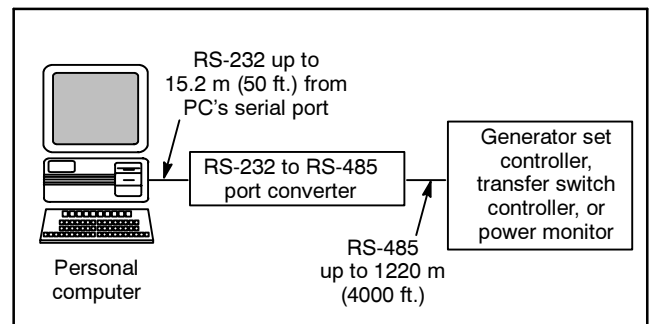


Figure 1-2 Local Single Connection, up to 1220 m (4000 ft.)

1.4.2 Local Area Network (LAN)

Use an RS-232 cable, an RS-232 to RS-485 converter, and an RS-485 cable to connect a PC to a local area network (LAN) with as many as 128 devices. See Figure 1-3.

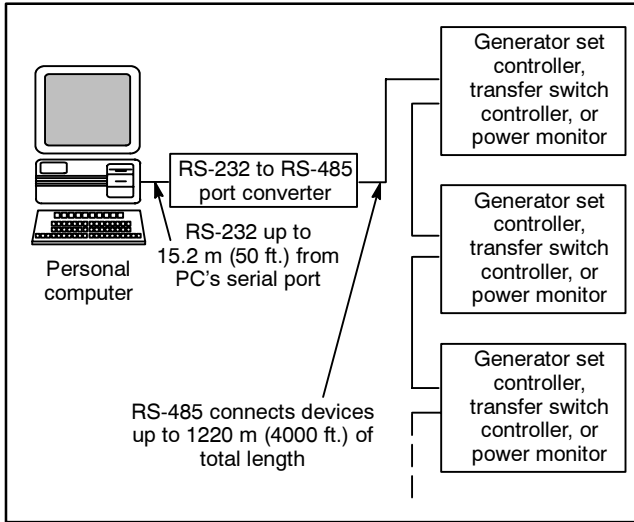


Figure 1-3 Local Area Network Connection

1.4.3 Remote Single Connection

Use an internal or external modem with the PC and another modem with the device that is being monitored or controlled. The PC communicates with the device using the modems and the telephone network. Locate the PC anywhere a telephone line is available. See Figure 1-4.

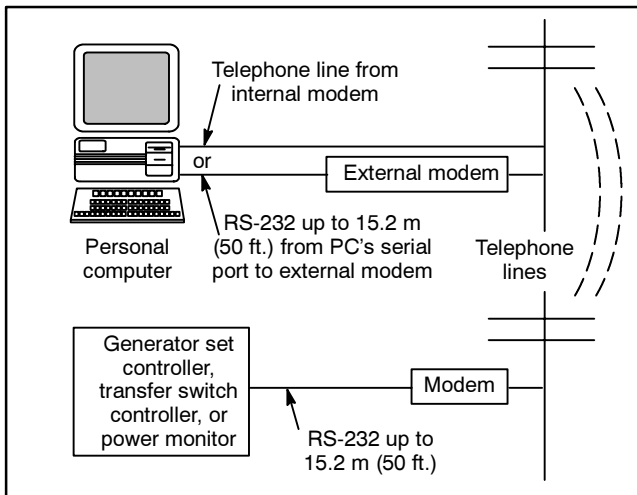


Figure 1-4 Remote Single Connection

1.4.4 Remote Area Network

Use an internal or external modem with the PC. Use another modem and an RS-232 to RS-485 port converter to connect up to 128 devices to an RS-485 local area network (LAN). The PC communicates with the devices using the modems and the telephone network. Locate the PC anywhere a telephone line is available. See Figure 1-5.

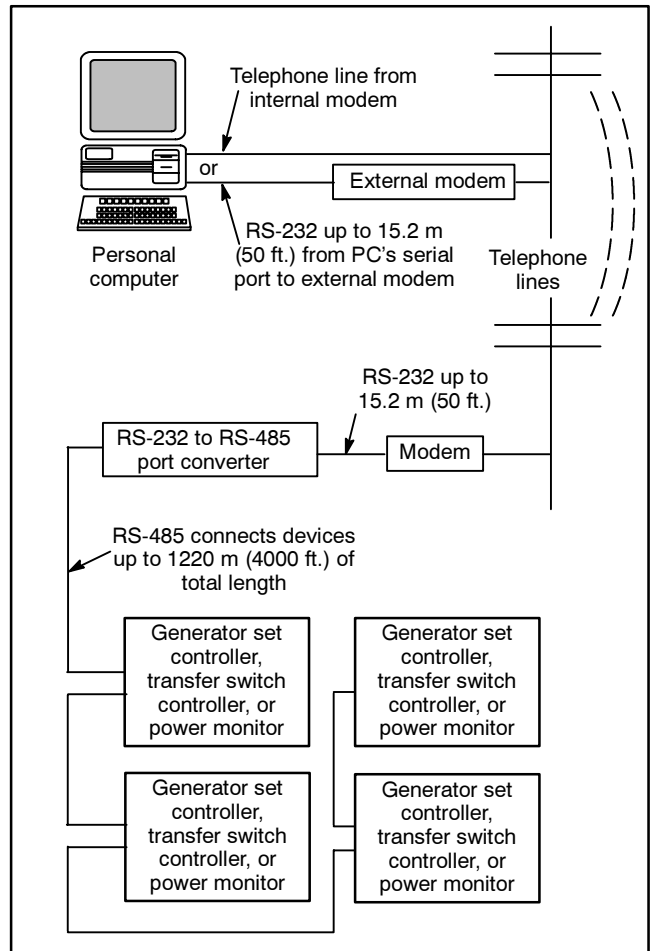


Figure 1-5 Remote Area Network Connection

1.5 Software Installation

1.5.1 Installation

The Monitor II software CD-ROM contains various files that are used by the setup program, setup.exe, to install the software on the PC. The setup program automatically installs a shortcut to run the program from the Start menu.

Follow the steps below to install the Monitor II software in Windows®.

Software Installation Procedure

1. Close all applications.
2. Insert Monitor II software CD-ROM into the computer's CD-ROM drive, the D: drive on most systems.
3. Open Windows® Explorer and double-click on the CD-ROM drive.
4. Double click on the English folder for the English version of the software.
5. Double click on the setup.exe file to install the program.
6. The setup program reminds you to close all applications. Close other applications and click the OK button.
7. Click on the Change Directory box to change the installation directory, if desired. The setup program creates and installs the main software files into the C:\Program Files\MonitorII directory unless an alternate location is provided.

8. Click on the computer icon to begin the installation process.
9. Enter information into the dialog box to change the locations of the program group and shortcut, if desired. Click the Continue button to begin copying the files.
10. Click the OK button after the setup is completed.
11. After the installation is complete, select the Templates folder on the CD-ROM and copy it to the same directory as the program group, if desired. See Section 2.7.10 for information about template files.
12. Remove the CD-ROM and store it in a safe location away from excessive heat, direct sunlight, and moisture.

When the program runs, it generates other files in the installation directory that the program uses to store system information.

Perform regular backups of the installation directory to maintain the integrity of configuration, screen, and modem site information.

1.5.2 Uninstallation

To remove the software from the PC, select Settings→Control Panel→Add/Remove Programs from the Start menu. Select the Monitor II group and click on Add/Remove. An uninstallation program runs and deletes installed Monitor II program files from the installation directory. Do not simply delete the software files.

Section 2 Setup and Operation

2.1 Introduction

This section explains how to set up the devices (generator set controllers, transfer switch controllers, or power monitors), enter the communication settings, and run the Monitor II software. Sections 2.2 through 2.12 are arranged to provide step-by-step instructions for setting up and using the program. Please follow the sections in the order shown.

2.2 Connect the Hardware

Connect the devices to the PC using cables, modems, and converters. See Section 1.4 for an overview of connections. Follow the installation instructions supplied with the communication kits. Record connection information in Appendix C.

2.3 Set Up the Devices

The Monitor II software can be used for either monitoring or for monitoring and programming of the connected devices. Remote programming allows the PC operator to change some user-programmable device settings such as time delays, trip points, and other settings.

Three device programming modes are typically available:

Local Programming Mode. The Local programming mode allows programming using the device keypad and display only.

Remote Programming Mode. The Remote programming mode allows programming through a PC connected to the device.

Programming Mode Off. Programming Mode Off prevents programming from either the device keypad or the PC. The device can be monitored but the settings cannot be changed.

Note: The devices allow monitoring at the device display regardless of the online PC connection settings.

The operator must enter the local programming mode at each device in order to enter the communications settings, and then reset the programming mode to allow the PC to either monitor or monitor and control the device.

The following Device Setup Procedure explains how to set each device to communicate with the PC.

Device Setup Procedure

1. Enable the local programming mode at the device:
 - a. On the device keypad, enter the menu containing the programming mode settings. (For the transfer switch controller, use the programming mode switch.) See Figure 2-1 and the device operation manual for instructions.
 - b. Set Local Programming to Yes, and the other programming options to No.
2. On the device keypad, enter the menu listed in Figure 2-1 for communications settings. Refer to the device operation manual(s) for instructions to change the settings described in the next steps.
3. The 550 controller offers both KBUS and Modbus® protocols. Choose the KBUS protocol. For other devices, proceed to the next step.
4. Choose Yes for the Online setting (or the KBUS Online setting for the 550 controller.)
5. Enter the connection type shown in Figure 2-2 for your connection (local single, local area network, remote single, or remote area network).

The 550 controller can convert RS-232 input signals from the PC into RS-485 output to other devices on the network. To use the 550 controller as a converter, connect it as the first device after the PC and choose either LOCAL LAN CONV or REMOTE LAN CONV under Connection Type in Menu 13.

Device	Communications Settings	Programming Mode
Decision-Maker™ 550 Generator Set Controller	Menu 13, Communications	Menu 14, Programming Mode
Decision-Maker™ 340 Generator Set Controller	Menu 10, Remote Control	Menu 11, Programming Mode
ATS Controller	Index 13, Remote Control	Programming Mode Switch
Power Monitor	Menu 8, Remote Control	Menu 9, Programming Mode

Figure 2-1 Locations of Communications and Programming-Mode Settings

Connection Type	Device Settings						
	Online	Local	Local LAN	Local LAN Conv*	Remote	Remote LAN	Remote LAN Conv*
Local Single	Yes	Yes	No	No	No	No	No
Local Area Network		No	Yes	No	No	No	No
Local Area Network with 550 Controller*		No	No	Yes*	No	No	No
Remote Single		No	No	No	Yes	No	No
Remote Area Network		No	No	No	No	Yes	No
Remote Area Network with 550 Controller*		No	No	No	No	No	Yes*

* Decision-Maker™ 550 generator set controller only. The controller can convert RS-232 input from the PC into RS-485 output to other devices in the network.

Figure 2-2 Connection Types

6. While programming the communications settings for each device, enter the following additional settings: primary port, network address, system ID number, and baud rate.

- a. **Primary Port (550 Controller only).** Choose Yes for the port used to connect to the device(s) or network, RS-232 or RS-485. See Section 1.4 and the communication kit installation instructions for help identifying the port.
- b. **Network Address.** Enter a unique network address (1-128) for each device on each local area network or remote area network site. Assign addresses from 1 to the number of devices on the network.

If a network is not used, leave the network address set to the default value of 1.

- c. **System ID.** Create a system ID number with a maximum of six digits. Enter this ID number into all devices for each remote (remote single connection or remote area network) modem site. The system ID number works like a password that allows only Monitor II software with the correct system ID number to access the devices.
- d. **Baud Rate.** Enter the same baud rate for all devices on a network.

Note: If their baud rates are not the same, the PC and the connected devices will not be able to communicate.

7. Go back into the programming mode menu. (For the transfer switch controller, use the programming mode switch.) Set the programming mode for each device to the settings shown in Figure 2-3.

Note: All programming mode settings shown in Figure 2-3 allow the PC to monitor the device.

- a. Set the local programming mode to Yes to allow programming using the device keypad and display only; or
- b. Set the remote programming mode to Yes to allow programming through a PC connected to the device; or
- c. Set the programming mode to Off to prevent programming from either the device keypad or the PC. The device can be monitored but the settings cannot be changed.

Function	Device Programming Mode		
	Local	Remote	Off
Allow programming at the device only	Yes	No	No
Allow programming from the PC	No	Yes	No
Disable all programming	No	No	Yes

Figure 2-3 Programming Mode Settings

2.4 Start Monitor II

Start the Monitor II software by double clicking on the shortcut created during installation or selecting Monitor II from the Start→Programs menu.

The Monitor II program displays a main menu screen when the program starts. See Figure 1. The default main menu screen contains no data windows.

The main menu screen displays options at the top of the screen that are familiar to most Windows® program users—a list of named pull-down menus and a toolbar with shortcuts for commonly used functions. The bottom part of the screen is the data window display area. Refer to Appendix B for instructions about working with pull-down menus, toolbars, shortcuts, and Windows® keystrokes.

Startup Screens

The software can load a screen containing selected data windows on startup. After building screens as described later in this section, refer to Section 2.11 for instructions to set the Load Screen on Startup option. A startup screen prompts the operator for connection information before displaying data windows. See Section 2.6 for instructions if the Connection Selection box appears when the software is started.



Figure 2-4 Main Menu Screen

2.5 Set Up and Test the Communication Connections

Set up the communication connection. See Section 2.5.1 for local connections or Section 2.5.2 for remote connections.

2.5.1 Local Connection Setup

Set up the communication connection before use by following the procedures below.

Local Connections Setup Procedure

1. Open the Options menu and verify that the Configure Mode option is not checked.
2. Select Screen→New Screen.
3. Click the Local Connection button in the Connection Selection window. See Figure 2-5.
4. Click the Comm Port Setup button. See Figure 2-6.
 - a. Use the drop-down list of COM ports to select the port (1-16) that is used to connect to the device. Reconfigure the port before connecting to a different COM port.

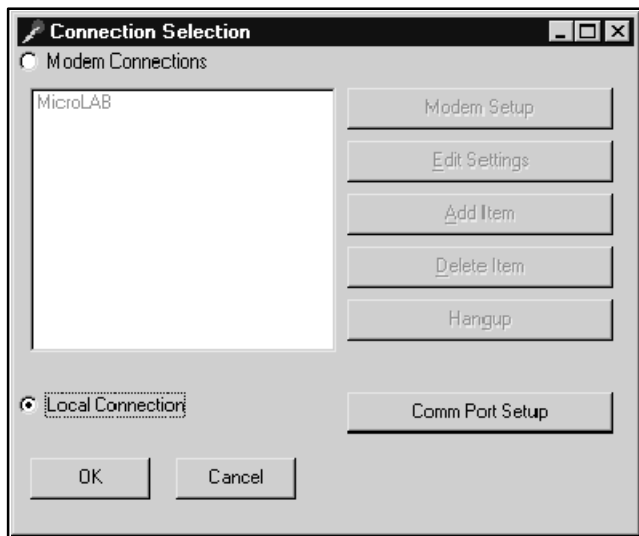


Figure 2-5 Connection Selection Window

- b. Enter the baud rate (1200, 2400, 4800, or 9600) that matches the baud rate set at all devices at the site. Leave the Data Bits, Parity, and Stop Bits set at the default values of 8, None, and 1 respectively.
 - c. Enter the highest address used on the local area network at the site. This is the highest network address that you entered into a device in Section 2.3, step 6b. If a Local Area Network is not used, enter 0.
 - d. Leave Flow Control set to Hardware and Set DTR line high checked. These are default values.
5. Click the OK button to exit the dialog box and save the changes for the Local connection.

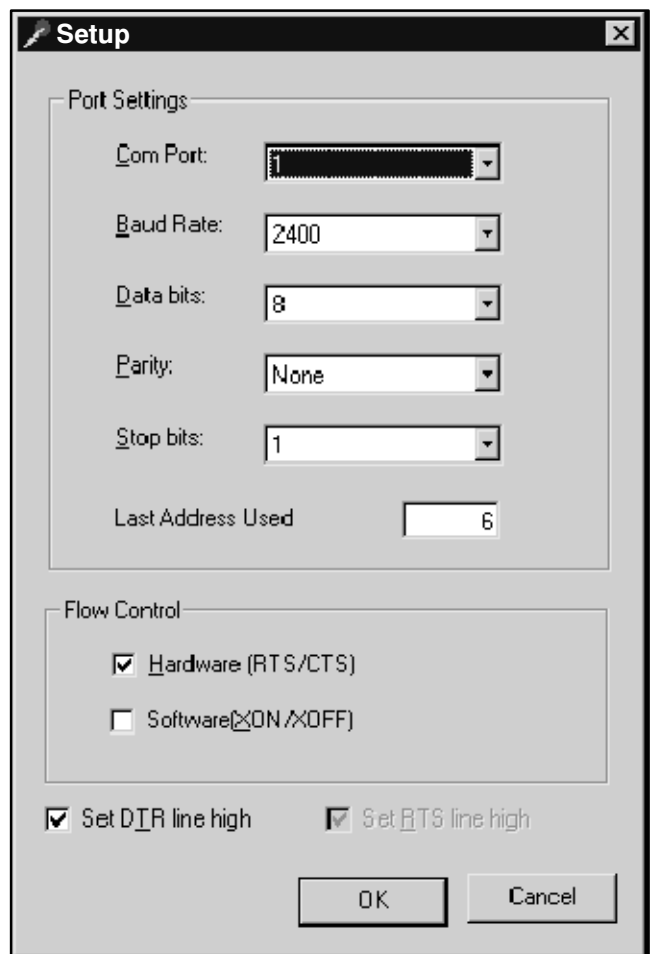


Figure 2-6 Comm Port Settings

2.5.2 Remote Connection Setup

Set up the communication connection before use by following the applicable procedures below.

Modem Test and Setup

Check that the modem that will be used for Remote connections is correctly installed.

Note: Check that the modem is not being used by another application during testing.

Note: The computer operator must have administrative rights to test the modem on Windows NT® or Windows® 2000 Professional computers. Call your system administrator if you do not have access to the modem diagnostics menu in the PC control panel.

Modem Test Procedure (Windows® 95/98 only)

1. Open the Options menu and verify that the Configure Mode option is not checked.
2. Select Screen→New Screen.
1. Select Settings→Control Panel→Modems from the PC Start menu.
2. Click the Diagnostics tab.
3. Click on the COM port of the modem and click the More Info button.
4. Verify that the modem protocol and feedback display on the screen, indicating that the modem is working correctly.
5. Click the OK button.

Note: If the modem does not respond, verify that the correct driver for the modem is installed and reboot the computer. Consult the operating system's online help for further assistance.

When the modem is working correctly, close the control panel and proceed to the setup procedure below.

Modem Setup Procedure

1. Click the Modem Connections button on the Connection Selection dialog box. See Figure 2-7.

2. Click the Modem Setup button.
3. Select the modem manufacturer from the list on the left side of the Modem Settings window.
4. Select the modem model from the list on the right side of the window.

Note: If the modem manufacturer and/or model does not appear in the list of available modems, chose a modem type similar to the modem installed in the PC or select Utilities→Add Item and create a custom entry for the modem using the information provided by the modem manufacturer.

5. Enter the COM port number for the modem in the Comm Port box. The COM port is found in the Settings→Control Panel→Modems selection from the Start menu.
6. Click the OK button. The program configures the modem.

Note: It is not necessary to configure the modem again unless the modem or COM port number used for modem connections has changed.

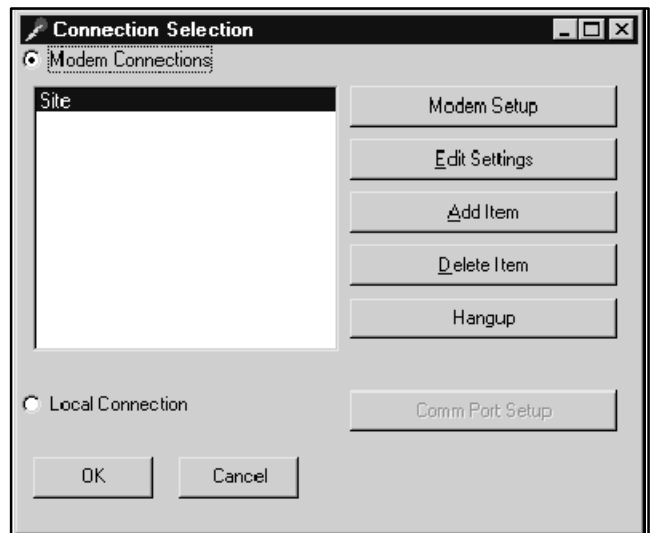


Figure 2-7 Connection Selection Window

Remote Site Setup

Repeat the following procedure for each remote location. Have the system ID number, phone number, maximum address used on the network, and baud rate available for each site. See Section 2.3.

Remote Sites Setup Procedure

1. Click the Modem Connections button on the Connection Selection dialog box.
2. Click the Add Item button to add a new entry for the site. The Edit Phone Book dialog box appears. See Figure 2-8.
3. Create a name for the site and type it into the Name box.
4. Type the complete phone number for the site, including outside line access codes and country codes, if necessary, into the Number box. The phone number may contain spaces or dashes to enhance its readability. Spaces and dashes are ignored by the program when dialing the number.

Note: If the telephone line service includes call waiting or other services that might interfere with or interrupt online connections, prefix the phone number with the codes used to disable these services. For example, *70 is typically used to disable call waiting. Call the telephone service provider to obtain the correct codes.

5. Type the system ID number for the site into the System ID box. This is the system ID that you created in Section 2.3, step 6c.

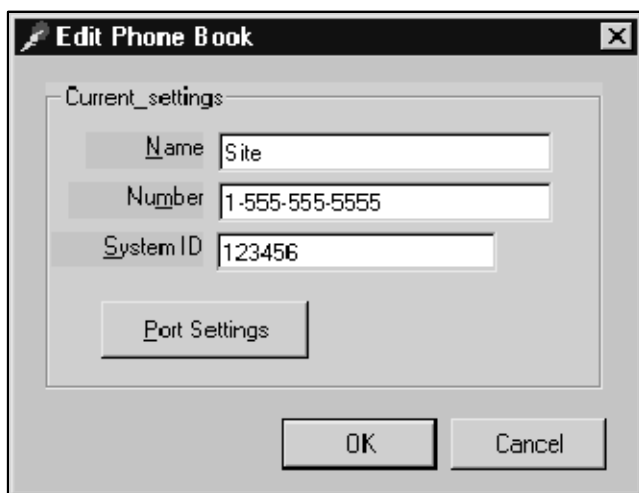


Figure 2-8 Edit Settings or Add Item

Note: The system ID number must be the same for all devices at the site. The software will not recognize any device with a different system ID number.

6. Click the Port Settings button. See Figure 2-9.
 - a. Select the PC COM port that is connected to the modem (port 1-16).
 - b. Enter a baud rate (1200, 2400, 4800, or 9600) that matches the baud rate set at all devices at the site. Leave the Data Bits, Parity, and Stop Bits set at the default values of 8, None, and 1, respectively.
 - c. Enter the highest address programmed into the devices of the local area network at the site. This is the highest network address that you entered into a device in Section 2.3, step 6b. If a single device is used, enter 0. Leave Flow Control set to Hardware and Set DTR line high checked. These are default values.
7. Click the OK button to exit the Port Settings dialog box and save the port settings for the new entry.

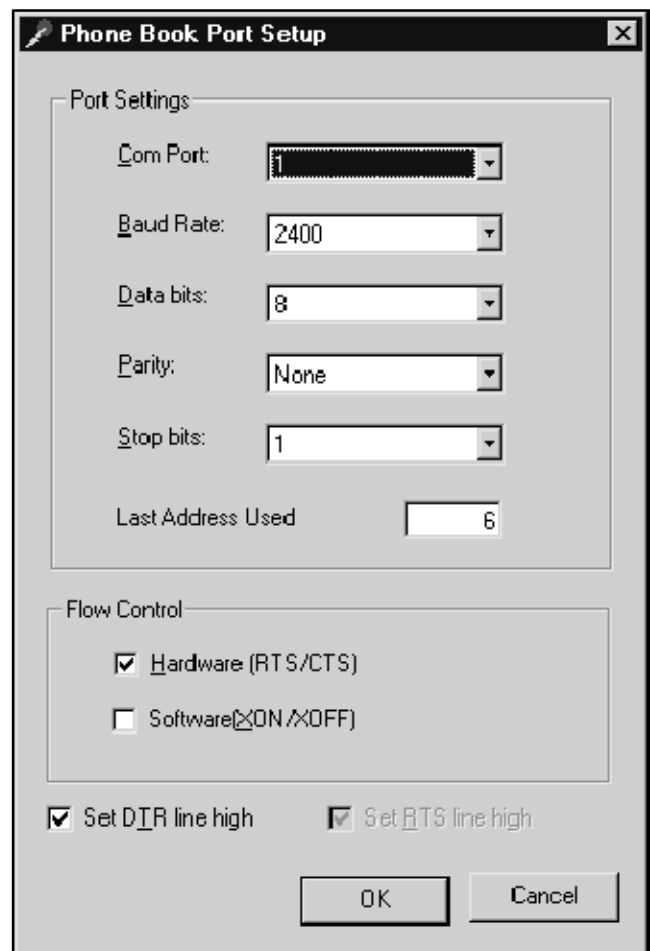


Figure 2-9 Port Settings

- Click the OK button again to exit the Edit Phone Book dialog box and save the new entry in the list of connection sites. The name of the new entry appears in the Connection Selection dialog box on the bottom of the list. Additional new entries are added to the bottom of the list.

Modem Connection Site Management

This section describes how to change settings for a connection site, add a new site, or delete a site.

Click the Modem Connections button on the Connection Selection dialog box. See Figure 2-10.

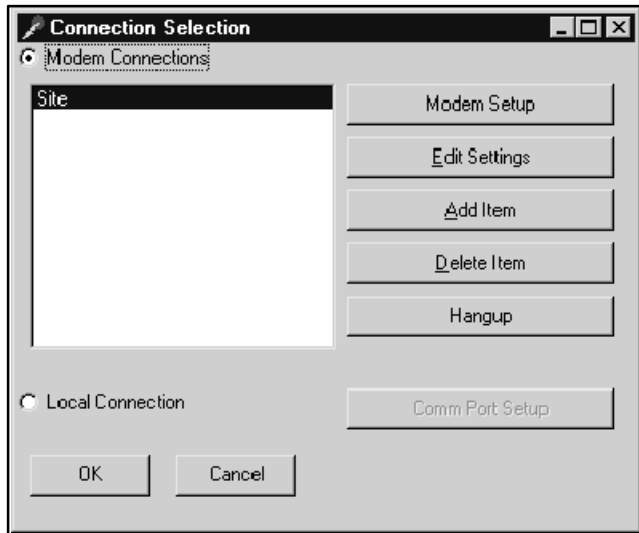


Figure 2-10 Connection Selection Window

To change settings for a connection site, select a named site from the left pane and click the Edit Settings button. Edit the phone book or port setting information and click OK. See Figure 2-8 and Figure 2-9.

To add a new site, click the Add Item button and follow the instructions in the configuration procedure for remote device sites in Section 2.5.2.

To disconnect the modem from a connected site, click the Hangup button.

To delete a connection site, select a configuration from the left pane and click the Delete Item button.

Note: Screen files identify sites according to their position on the connection selection list, rather than by name or phone number. If a site is deleted, screen files that include the deleted site may connect to a different site on the list. If a screen file causes the program to connect to an

incorrect site, delete the screen file using the Windows® Explorer and rebuild the screen. See Section 2.7 for more information about screens.

2.6 Connect to the Device(s)

Follow these instructions to connect to the device or network of devices.

Connection Procedure

- Verify that the software is not in the configuration mode by making sure that Configure Mode in the Options menu is not checked. Select Configure Mode and left-click to remove the checkmark. See Figure 2-11.
- Connect to the device (or devices):
 - Choose Screen→New Screen to create a new screen or Screen→Open Screen to open a previously saved screen file. See Figure 2-12.

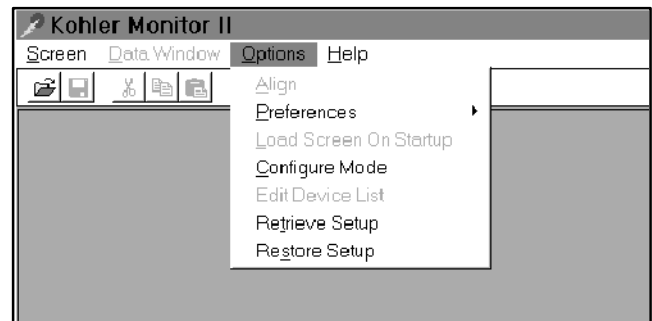


Figure 2-11 Options Menu

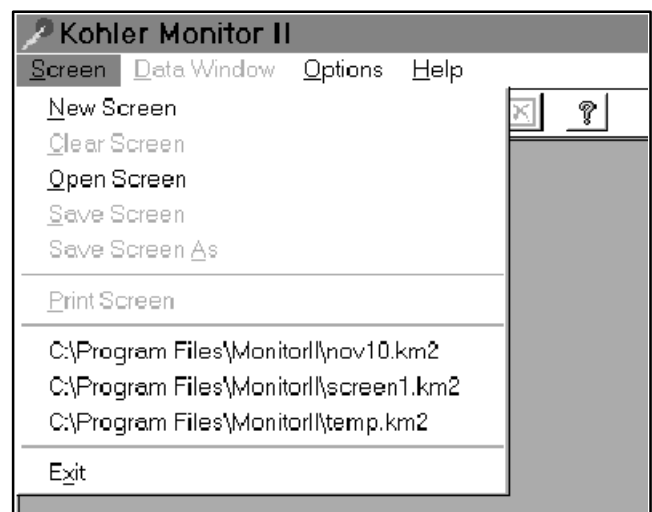


Figure 2-12 Screen Menu

- b. If the Connection Selection dialog box opens, click on the Local button for a local connection or the Modem button for a remote connection. For a modem connection, select the site to connect from the list, then click OK. See Figure 2-13.

Note: Previously saved screens that contain connection information may connect to the site without displaying the Connection Selection dialog box.

If connecting to a remote site, the program dials the site phone number and connects. It scans for available devices, and briefly displays the address and designation for each device.

3. After the Scanning for Available Devices window closes, click on the Data Windows pull-down menu. If the system connected successfully, the Add Window option is accessible. Proceed to Section 2.7.

If the Add Window option is gray and not accessible, the attempt to connect failed. Follow these steps to hang up and check the settings.

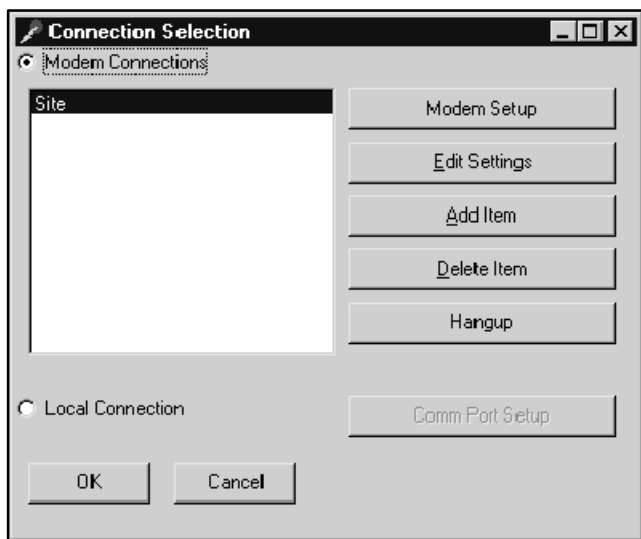


Figure 2-13 Connection Selection Window

- a. Choose Screen→New Screen.
- b. Click on the modem button and choose Hangup.
- c. Check the modem setup and connection settings. See Section 2.5.
- d. Check the modem and hardware connections. See Section 1.4 and the List of Related Materials in the Introduction for more information.

2.7 Add Data Windows and Build Screens

The Monitor II software uses data windows and screens that allow the operator to monitor and control connected devices with a personal computer (PC).

- A single data window displays a set of data from one device.
- A screen is a set of one or more data windows from a single site. A site can be a local connection, a local area network, or remote location containing any combination of devices connected through a single phone number.
- A template is a screen that contains data windows for only one device and address. See Section 2.7.10 for instructions to use preprogrammed template files included with the Monitor II software.

Data window information is updated frequently. The baud rate, number of connected devices, and number of open data windows affect the update frequency.

Sections 4 through 7 list the data windows available for different types of devices.


See Appendix B for a list of toolbar functions that provide faster alternatives to some of the pull-down menus used in the following instructions.

Use the instructions in the following sections to create and position data windows and save them to a screen if desired.

2.7.1 Adding Data Windows

Perform the following steps to add a new data window to the screen.

Add Data Windows Procedure

1. Connect to devices over a local or modem connection (see Section 2.6) or use the configuration mode (see Section 2.4).
2. Select Data Window→Add Window, or left-click on the  button in the toolbar. See Figure 2.
3. The software displays available devices and their designations. See Figure 2-15. Local or remote single connections show one device at address 1. Local or remote area network connections show addresses from 1 to the last address used on the network. Select a device from the left side of the screen. Available data windows for each device type are shown in the right pane.

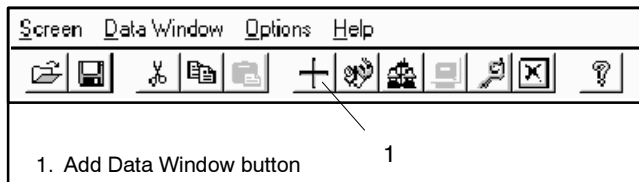


Figure 2-14 Menus and Toolbar

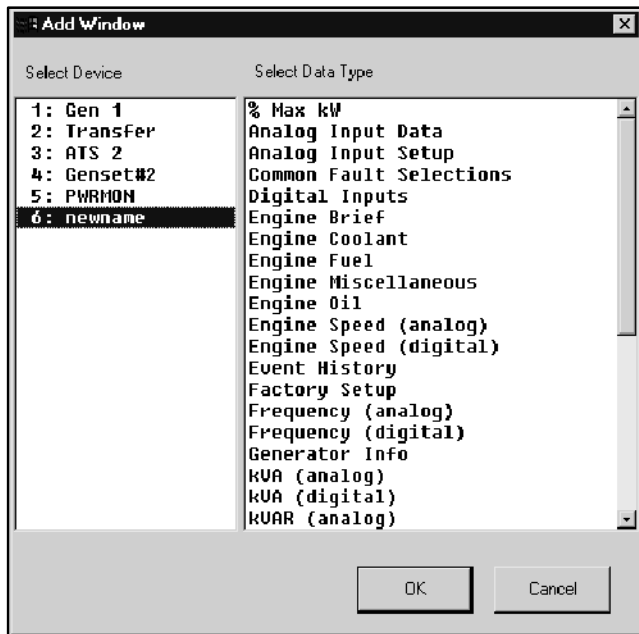


Figure 2-15 Add Window

4. Choose data windows from the list on the right by selecting them with the left mouse button. Use the control or shift key as with other Windows® software to select groups of data windows .

Windows® is a registered trademark of Microsoft Corporation.

5. Click the OK button to add the selected data windows to the screen.
6. Position the data window on the screen as desired by clicking on the title bar and holding the mouse button down while moving the mouse (dragging and dropping).

2.7.2 Working with Data Windows

You can copy, cut, paste, and move data windows on the screen. See Figure 2-16 for a typical data window.

Selecting Data Windows. Left click anywhere on a data window to select it.

Moving Data Windows. To drag and drop a data window, left-click on the title bar, hold the mouse button down, and move the mouse to reposition the data window on the screen.

Aligning Data Windows. Select Options→Align to align data windows to a grid. Use Options→Preferences→Grid Align to change the grid spacing.

Displaying the Shortcut Menu. Right-click anywhere on the display area to display the shortcut menu, which displays the same information as the Data Window pull-down menu. See Appendix B for a list of options included in the pull-down menu.

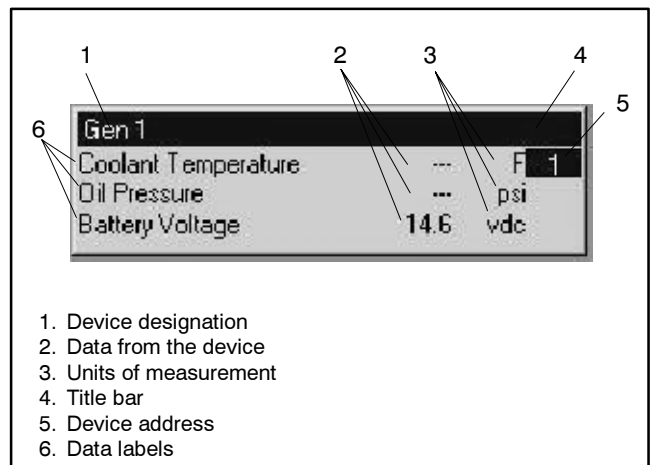


Figure 2-16 Typical Data Window (Engine Inputs, Decision-Maker™ 340 Generator Set Controller)

Hiding the Title Bar. Left-click on the data window to reveal and highlight or to hide the title bar. If the title bar does not appear, left-click on the data window to select it.

Device Designation. The device designation shown in the data window title bar is the name of the individual controller or other connected device. See Section 2.8 for instructions to change the designation.

Changing the Units. Select Options→Preferences and choose English or metric units of measure. This sets the units for all data windows.

Device Address. This is the network address assigned to the device according to the instructions in Section 2.3.

Changing the Address. Select Data Window→Device→Change Address of Current to display the same data for another device. Select the new device from the pop-up window, which displays only devices that are the same type as the current device. For example, if the current device is a Decision-Maker™ 340 generator set controller, only other Decision-Maker™ 340 controllers in the system will be displayed.

Note: The new device must be the same type as the current device.

2.7.3 Choosing Analog or Digital Displays

Some data windows can display either analog scales or digital readouts. Figure 2-17 shows analog and digital displays of the same data.

- Select Data Window→Display to choose between analog or digital displays for some data windows.
- Select Data Window→Display and choose Scaling to change the scales on analog displays. Choose a default range or select the Custom option to create a data range. If selecting the Custom display option, enter the start and end values for the custom range in the dialog box and then click the OK button.

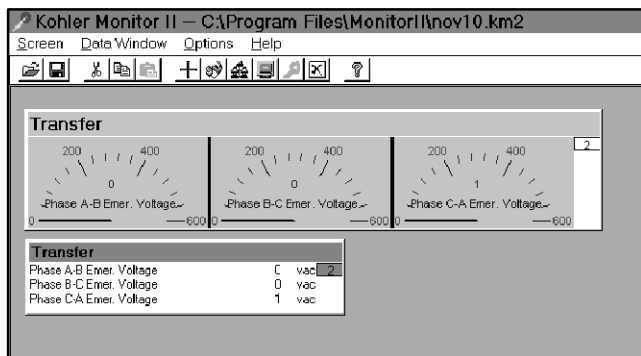


Figure 2-17 Typical Analog and Digital Displays

2.7.4 Copying Data Windows

It is often helpful to copy a data window to compare the same type of data from different devices on the same network.

Copy Data Windows Procedure

1. Select a data window by left-clicking on the data window. Its title bar will appear highlighted.
2. Right click on the screen outside of the data window title bar to display the shortcut menu.
3. Select Data Window→Copy.
4. Right click on a blank area of the screen to display the Data Window shortcut menu.
5. Select Data Window→Paste.
6. Right click on the pasted data window to display the Data Window shortcut menu.
7. Select Data Window→Device→Change Address of Current.
8. Select an address from the list.

2.7.5 Deleting Data Windows

To remove a data window from the screen, select the data window and then select Data Window→Delete or right-click with the mouse and select Delete from the shortcut menu.

2.7.6 Saving Screens

After creating a set of data windows on the screen, you can save the screen to a file to use again.

Select or Screen→Save to save the set of data windows on the screen to the current screen name. Choose Screen→Save As to rename the screen or save it as either a screen or template file. Save a screen with any combination of data windows as a screen file (.km2 extension). Save a screen with data windows from only one device type (and address) as a template file (.tem extension).

Screen Files are user-defined and can consist of any combination of data windows. Screen filenames have a .km2 extension. Opening a screen file automatically connects to the site if the connection information is included in the screen file (unless the software is in the configure mode).

Note: The device type(s) and address(es) specified in the screen file must match the connected device(s).

If the screen was saved in configuration mode, the program starts the communication connection dialog box, prompting the user to choose a connection site. After connection, the software populates the data windows from the screen file with active data.

2.7.7 Opening Screens

To open a screen, choose Screen→Open and choose either a screen file (.km2 extension) or a template file (.tem extension), or choose a file from the list of recently used files in the Screen drop-down menu. Opening a screen file automatically connects to the site if the connection information (including the phone number and system ID) is included in the screen file (unless the software is in the configure mode).

2.7.8 Clearing Screens

To clear the screen of all data windows, choose Screen→Clear Screen.

2.7.9 Printing Screens

To print the data on the screen, choose Screen→Print Screen. Complete the options in the print dialog box and click the OK button.

Note: The print format does not affect the screen display.

If there is no data from the connected devices, the software prints a blank page.

2.7.10 Using Templates

Template files contain data windows for one device and address. A set of preprogrammed template files is included on the Monitor II software CD-ROM. Template filenames have a .tem extension. To use the preprogrammed templates, copy them from the CD-ROM to the directory on the PC that contains the Monitor II program files (usually C:\Program Files\Monitor II). Then start the Monitor II software, select Screen→Open, and select the template file from the list.

Opening a template file starts the communication connection dialog box, prompting the user to choose a connection site. When a connection is made, the software scans for available devices compatible with the

set of data windows in the template file. Click on one device from the list and then on the OK button to select a device. The software automatically changes the address of all data windows from the template file to the selected device and populates data windows with active data from the chosen device.

The template files provided with the software are similar to older versions of the monitor software and correspond to the status, setting, and summary screens.

The user can also create template files. Create, arrange, and customize data windows for one device as desired. Then select Screen→Save Screen As. Click on the down arrow to the right of the Save as type box and choose Template File (*.tem). Type a filename into the File name box. The software will add the .tem extension when it saves the file. Click on the Save button to save the file as a template.

2.8 Enter User-Programmable Settings

User-programmable settings include time delays, trip points, and other settings. When the remote programming mode is enabled at the device, the PC operator can alter the user-programmable settings for the device. Refer to Sections 4 through 7 to identify user-programmable settings for each type of device. Connect to the device before attempting to change settings.

2.8.1 User-Programmable Settings

Use Data Window→Setup to edit device settings and change operating modes. Enable the remote programming mode at the device to allow the settings to be changed through the PC. Select the Monitor II data window that contains the settings to be changed and select Data Window→Setup. The software displays device settings and operation status. Click on the settings and enter the changes as the program allows. Click the OK button to update the device with the new information. See Sections 4 through 7 for more detailed instructions.

See the device operation and installation manual for limits, factory default values, and operation modes.

Note: The software transfers the new settings to the device at the next update. The device then stores the setup information in its own memory. No data is stored in the PC. See Section 2.9 to save device settings to a file on the PC.

2.8.2 Device Designation

Assign a unique name for each device by editing the designation in the device information data window (ATS Information, Generator Info, or Power Monitor Info data windows). Device designations can have a maximum of nine characters. Consider using designations that identify the location, function, or other characteristics that uniquely identify the device.

Select the device information data window and choose Data Window→Setup. Left click in the box labelled *Designation* and type in the new name. Click on OK to apply the change.

2.8.3 Relay Driver Outputs

The relay driver outputs (RDOs) can control relays connected to fans, lights, or other customer equipment. The relay driver output data window displays the signal source that drives each relay driver output (RDO) and the RDO state (on or off). The controller RDO factory settings are listed in the controller operation manual.

To change RDO settings, select the Relay Driver Output data window. Choose Data Window→Setup or right-click on the data window and choose Setup. In the setup window, double click on the line for the RDO to be defined. Select the item to define as a relay driver output from the dropdown list in the pop-up window.

See the controller operation manual for information about hardware connections for RDOs.

2.8.4 Software-Controlled RDOs

For the Decision-Maker™ 550 controller, the PC operator can define up to four software-controlled relay driver outputs (SCRDOs). SCRDOs allow the operator to control outputs from a remote site using a PC with either KBUS or Modbus® communications.

Note: Software-controlled RDOs allow the PC operator to turn on outputs from a remote location using a personal computer. Ensure that no one is working on the generator set before activating outputs.


Refer to Section 4.7 for more information.

2.8.5 Engine Start

The Monitor II program allows the PC operator to start and run a generator set from a remote location. Please refer to the section for your generator set controller for instructions and precautions.

Note: In setup mode, the Engine Start feature allows the PC operator to start and run a generator set that is not visible from the PC location. Use extreme caution to prevent unintended starting of the generator set or unsafe generator set operation.

⚠ WARNING



**Accidental starting.
Can cause severe injury or death.**

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.

2.9 Save Device Settings

The Retrieve Setup and Restore Setup options allow the PC operator to save programmable device settings to a file and restore them later. Use the retrieve and restore options to save the device settings in case the settings are lost or the device is replaced. Figure 2-18 lists the settings that can be retrieved and restored for each device. The program creates one settings file for one device at a time. Repeat the following procedure for each device that has user-programmable settings.

Save Device Settings Procedure

1. Choose Options→Retrieve Setup to save the device settings to a file. The program displays a dialog box listing all connected devices.
2. Click on one device in the displayed list. The program saves the settings for one device at a time.
3. Create a filename for the device settings information, and type it into the window when the software requests it. Use a filename that will help you identify the device later.
4. Click Save. The program displays *Collecting Data* as it saves the settings to the file.
5. Repeat the steps for each device that has user-programmable settings.

Restore Setup reloads the saved settings from the computer files to the devices. Repeat the following procedure for each device. The program identifies the device corresponding to the selected data file and restores the settings to the appropriate device.

Device	Retrievable/ Restorable Settings
Decision-Maker™ 550 Generator Set Controller	Analog Inputs Common Faults Digital Inputs Generator Setup Relay Driver Outputs Trip Points Time Delays
Decision-Maker™ 340 Generator Set Controller	Auxiliary Inputs Common Faults Generator Setup Relay Driver Outputs Trip Points Time Delays
ATS Controller	ATS Info Exerciser Load Shed Trip Points Time Delays
Power Monitor	Time Delays

Figure 2-18 Retrievable and Restorable Settings for Each Device

Restore Device Settings Procedure

1. Choose Options→Restore Setup. The program displays a list of filenames.
2. Select the file containing the settings for the device.
3. Click Open. The program displays *Restoring Data* as it reloads the device settings.
4. Repeat the steps for each device.

2.10 Monitor and Control Devices

Use the data windows to monitor and control the generator sets, transfer switches, and power monitors connected to the PC. See Section 2.7 for instructions for using data windows. See Sections 4 through 7 for descriptions of the data windows available for each type of device.

The software scans the devices and updates the displayed information at regular intervals. The time between updates varies with the number and type of connected devices and is usually a few seconds.

2.11 Save Screens or Template Files

Save the screen as a screen or template file to use again. See Section 2.7. Many different screens and template files can be saved.

To load a screen the next time the software is started, choose Options→Load Screen on Startup while the selected screen is open. The screen that is displayed at the time that the option is checked will automatically open when the software is restarted.

2.12 Disconnect and Exit

Select File→Exit to disconnect from the site and exit Monitor II.

To disconnect without exiting the program, select Screen→New Screen and click on the Hangup button. The Monitor II title bar at the top of the screen will display “Hanging Up...” After disconnecting, select Options→Configure Mode to work offline. See Section 3, Working Offline (Configuration Mode).

Notes

Section 3 Working Offline (Configuration Mode)

3.1 Configuration Mode

Use the configuration mode to select data windows and build screens offline, without connecting to a device or network, if desired.

Enable the configuration mode by selecting Options→Configure Mode at the Monitor II main screen. Click on the Configure Mode option so that the checkmark (✓) appears.

Note: The program does not display live data while the configuration mode is enabled.

3.2 Constructing or Editing a Device List

If possible, connect to the device or network before enabling the configuration mode to allow the software to create a device list. See Section 2.6. The Monitor II software scans the connection to determine which devices are connected to the PC and creates the device list. This is the easiest and most foolproof way to obtain a correct device list. Then disconnect and work in configuration mode to build screens offline.

Note: If all of the connected devices do not appear in the device list, verify that the highest address number has been entered in the Port Settings→Last Address Used box. Also check the other communication settings including the baud rate and system ID. See Sections 2.3 and 2.5.

To disconnect without exiting the program, select Screen→New Screen and click on the Hangup button. The Monitor II title bar at the top of the screen will display “Hanging up...” After disconnecting, close the Connection Selection window by clicking the Cancel button or the X at the top right corner of the window. (Clicking the OK button may reconnect to the site.) Then select Options→Configure Mode to work offline.

Note: If the Monitor II software has connected to the device or network of devices, no editing of the device list is required.

To build a screen before making the connection, first edit the device list.

Create or Edit a Device List Offline Procedure

1. Enable the configuration mode by selecting Options→Configure Mode.
2. Select Options→Edit Device List.
3. Use the drop-down arrows to select the network address and type of each device. For each address on the network, select the device for that address. The network addresses and device types must match the addresses and types of devices at the site.
4. Type the device designation into the box provided to identify the particular device. This designation appears in the data window title bars.

Note: The device designation will be overwritten by device information after connection to the device.

To change the device designation, edit the designation in the device information data window after connecting to the device or network. See Section 2.8.2.

3.3 Building Screens

After constructing the device list, open a screen or template file, or build a screen by adding and customizing windows as described in Section 2.7. See Sections 4 through 7 for descriptions of the available data windows for each type of device. After adding the desired data windows, save the screen as a screen or template file by selecting Screen→Save Screen As. Choose either a screen or template file type and type a name in the File name box. The Monitor II software adds the .km2 file extension for screens or the .tem extension for templates.

3.4 Using Screens

Disable the configuration mode by selecting Options→Configure Mode and clicking on the Configure Mode option so that the checkmark (✓) does not appear. Open the screen or template file by selecting the file from the list in the Screen drop-down menu or by choosing Screen→Open and selecting the file from the directory where it was saved. The connection selection box opens. Follow the instructions in Section 2.6 to connect to the site. After connection, the software displays the selected screen.

Notes

Section 4 Decision-Maker 550 Generator Set Controller

4.1 Introduction

This section explains the data windows available for Decision-Maker™ 550 generator set controllers. Section 7.2 lists and describes the items found in each data window. More detailed information for some of the items is included in the sections after the table.

Use the table in Section 4.9 as a cross-reference to find the data window locations of specific items. Section 4.10 lists system events, common fault selections, and RDO messages.

Note: Some data availability is dependent on the engine family and the alternator used on the generator set. See the generator set operation manual.

4.2 Data Windows

The following table lists and describes the items found in each data window. A checkmark (✓) in the Setup column indicates a user-programmable setting.

Data Window	Setup	Item	Item Description
% Max kW		% Max kW	The load on the generator set expressed as a percentage of the generator rating.
Analog Input Data		Analog Auxiliary In	The identifying names and scaled values of the analog inputs.
Analog Input Setup	✓	High Sdwn Value	The maximum input value. The generator set shuts down if the input value rises above this level for a specified length of time (see Sdwn Delay).
		High Warning Value	A warning occurs if the analog value rises above this level for a specified length of time (see Warn Delay).
		Inhibit	The time delay in seconds after crank disconnect when analog input shutdowns or warnings cannot occur.
		Low Sdwn Value	The minimum input value. The generator set shuts down if the analog value falls below this level for a specified length of time (see Sdwn Delay).
		Low Warning Value	A warning occurs if the analog value falls below this level for a specified length of time (see Warn Delay).
		Sdwn Delay	The time delay before shutdown. The generator set shuts down if the analog value falls outside the high or low shutdown values for this length of time (in seconds).
		Shutdown Enabled	When enabled, the generator set shuts down if the analog level falls outside the high or low shutdown values for the shutdown time delay (yes or no).
		Warn Delay	The time delay before a warning. A warning occurs if the analog value remains outside the high or low warning values for this length of time (in seconds).
		Warning Enabled	When enabled, a warning occurs if the analog level remains outside the high or low warning values for the warning time delay (yes or no).
Common Fault Selections (see Section 4.4)	✓	Common Fault Selections	Yes or No indicates whether a system event signal is selected as a common fault. Any of the system events listed in Section 4.10 except the Defined Common Fault, Genset Param Warning, Genset S/N Warning, and Genset S/N Shutdown can be defined as common faults.
Digital Inputs (see Section 4.5)	✓	Delay	The time delay in seconds between the occurrence of the function and the activation of the digital input.
		Description	The identifying name for the digital input D1–D21. Edit the description, a maximum of 20 characters, in setup mode.
		Enabled	When enabled, a warning or shutdown occurs if the digital input is activated (yes or no).

Data Window	Setup	Item	Item Description
Digital Inputs, continued (see Section 4.5)	✔	Function	The function that is associated with the digital input, chosen from the following list: Warning Shutdown Type A Shutdown Type B Voltage Raise Voltage Lower Var PF Mode Remote Shutdown Remote Reset Air Damper Low Fuel Field Over Volts Idle Mode Active (ECM only) Battleswitch Ground Fault Bat Chgr Fault High Oil Temp (non-ECM) Low Coolant Level (all models except 20-40ROZK) Low Coolant Temp (not user assignable)
		Inhibit	The time delay in seconds after crank disconnect when digital input shutdowns or warnings cannot occur.
Engine Brief		Coolant Temperature	The engine coolant temperature in degrees Celsius or Fahrenheit.
		Countdown	Time remaining in the programmed run time. See Run Time in the Operational Setup data window.
		ECM Equipped	Indicates whether the generator set engine uses an engine control module (ECM).
		Engine Speed	The engine speed in RPM.
		Engine Start	The number of times the engine has successfully started.
		Local Battery Volts	The DC voltage input at the generator set controller.
		Oil Pressure	The engine oil pressure in kPa or psi.
Engine Coolant		Run Time	Programmed engine start run time.
		Coolant Level	The coolant level, 0 or 100%.
		Coolant Pressure	The coolant pressure in kPa or psi.
Engine Fuel		Coolant Temperature	The coolant temperature in degrees Celsius or Fahrenheit.
		Fuel Last Run	The amount of fuel consumed since the last reset, in liters or gallons.
		Fuel Pressure	The fuel pressure in kPa or psi.
		Fuel Rate	The fuel consumption rate in liters or gallons per hour.
Engine Miscellaneous		Fuel Temperature	The fuel temperature in degrees Celsius or Fahrenheit.
		Ambient Temperature	The engine ambient temperature in degrees Celsius or Fahrenheit.
		ECM Battery Voltage	The battery voltage according to the engine controller.
		ECM Serial #	The ECM's serial number.
		Engine Model #	The engine's model number.
Engine Oil		Engine Serial #	The engine's serial number.
		Unit #	The ECM unit number.
		Crankcase pressure	The crankcase pressure in kPa or psi.
		Oil Level	The oil level, 0 or 100%.
Engine Speed		Oil Pressure	The oil pressure in kPa or psi.
		Oil Temperature	The oil temperature in degrees Celsius or Fahrenheit.
		Engine Speed	The engine speed in RPM. Analog or digital display.
Event History		Event History	A history of the 100 most recent events, such as shutdowns, warnings, user-defined messages, or other system events, and the date and time on which they occurred.

Data Window	Setup	Item	Item Description
Factory Setup		Alternator Model Number	The model number of the generator set's alternator.
		Controller Serial No.	The serial number of the generator set's controller.
		Days Operation	The number of days the generator set has been in operation.
		Engine Model Number	The model number of the generator set's engine.
		Final Assembly Clock #	The clock number of the person completing assembly and final test of the generator set.
		Final Assembly Date	The date the generator was assembled and tested.
		Genset Serial Number	The generator set serial number
		Model No.	The generator set model number.
		Serial No.	The generator set serial number entered by the installation technician during controller setup. This number must agree with Genset Serial Number, shown above.
		Spec No.	The generator set specification number.
		Version Number	The version number of the controller software.
Frequency		Frequency	The average generator set output frequency in hertz (Hz). Analog or digital display.
Generator Info	✔	Battery Voltage	The battery voltage shown on the nameplate, which is normally set at the factory.
		Control Serial No.	The generator set controller serial number, which is normally set at the factory.
		Designation	Setup window only. An optional unique name that identifies the device and appears on the device list at each address for network connections and on all data windows when the Monitor II software is connected to the device. Enter a description of up to 9 characters in setup mode. Note: The Monitor II software does not display the new designation until the operator selects a new screen and the software scans the devices.
		kW Rating	The generator set alternator kilowatt rating shown on the nameplate, which is normally set at the factory.
		Load	An optional description of the connected load, such as total building, HVAC, or motors. Enter a description with up to 20 characters in setup mode.
		Location	An optional description of the generator set's location. Enter a description with up to 20 characters in setup mode.
		Model No.	The generator set model number shown on the nameplate, which is normally set at the factory.
		NFPA 110	Whether the controller is set to NFPA 110 default settings (yes or no). See Section 4.7.2.
		Serial No.	The generator set serial number shown on the nameplate, which is normally set at the factory.
		Single/Three Phase	Electrical system type: single-phase, three-phase wye, or three-phase delta. This setting is normally set at the factory.
		Spec No.	The generator set specification number shown on the nameplate, which is normally set at the factory.
		System Frequency	The generator set frequency shown on the nameplate, which is normally set at the factory.
		System Voltage	The generator set voltage shown on the nameplate, which is normally set at the factory.
kVA		kVA	Total kilovolt-amperes for all lines and individual values for lines L1, L2, and L3. Analog or digital display.
kVAR		kVAR	Total kilovolt-amperes reactive for all lines and individual values for lines L1, L2, and L3. Analog or digital display.
kW		kW	Total kilowatt load for all lines and individual values for lines L1, L2, and L3. Analog or digital display.

Data Window	Setup	Item	Item Description
Line Current		L1, L2, and L3	The current in amperes through generator set lines L1, L2, and L3. Analog or digital display.
Line-Line Voltage		L1-L2 VAC L2-L3 VAC L3-L1 VAC	The AC rms voltage measured from line to line: L1-L2, L2-L3, and L3-L1. Analog or digital display.
Line-Neutral Voltage		L1-L0 VAC L2-L0 VAC L3-L0 VAC	The AC rms voltage measured from each line to neutral: L1-L0, L2-L0, and L3-L0. Analog or digital display.
Operational Summary		Duration of Run	The length of time, in hours, that the generator set ran during its last operation.
		Factory Test Date	The date the generator set completed final factory testing.
		Last Start Date	The date the generator set was last successfully started.
		Last Start time	The time the generator set was last successfully started.
		Loaded/Unloaded	Whether the generator last ran with or without a load.
		Reset Date	The last maintenance record reset date.
		Reset Days of Operation	The number of days the generator set has been in operation since the last maintenance reset.
		Reset kW Hours	The number of kilowatt-hours on the generator set since last reset.
		Reset Number of Starts	The number of successful starts for the generator set since last reset.
		Reset Run Time	The running time of the generator set loaded and unloaded since the last maintenance reset.
		Reset Run Time Loaded	The running time of the generator set with a load since the last maintenance reset.
		Reset Run Time Unloaded	The running time of the generator set without a load since the last maintenance reset.
		Total kW hours	The number of kilowatt-hours on the generator set.
		Total Number of starts	The number of successful starts for the generator set.
		Total Run Time	The total running time of the generator set, loaded and unloaded.
Operational Summary (Setup Mode)	✔	Run Time	Displays the generator set run time duration (hours:minutes). See Section 4.6. Note: This data menu allows the software operator to start and run a generator set. Use extreme care when using this feature to prevent unintended starting of the generator set.
		Reset Maintenance Records	Checkbox to reset maintenance records to the current date and time.
Power Factor		Power Factor	Total power factor for all lines and individual values for lines L1, L2, and L3. Analog or digital display.
Relay Driver Outputs	✔	Relay Driver Outputs (RDOs)	Displays the source that drives each of the relay driver outputs (RDOs) and the RDO state (on or off).
Time and Date	✔	Date	The date at the generator set location.
		Day	The day of week calculated by the generator set controller from the date.
		Time	The time at the generator set location. The format is Hour:Minute AM/PM.

Data Window	Setup	Item	Item Description
Time Delays	✓	Crank Cycles	The number of engine crank cycles before an overcrank shutdown.
		Crank On	The engine cranking on time, in seconds.
		Crank Pause	The engine cyclic cranking rest time, in seconds.
		Engine Cooldown	The time delay between the remote engine start contact opening and the engine stop sequence, in minutes:seconds.
		Engine Start	The time delay, in seconds, between the remote engine start contact closing and the engine start sequence.
		Load Shed	The time delay before a load shed output if the load exceeds the load shed trip point, in seconds.
		Overvoltage	The time delay before a fault if the voltage rises above the upper limit, in seconds.
		Starting Aid	The engine starting aid time delay before engine cranking. It allows adjustment to the starting aid on time before engine cranking.
		Undervoltage	The time delay before a fault if the voltage falls below the lower limit, in seconds.
Trip Points	✓	High Battery Voltage	The battery voltage level that causes a high battery voltage warning. The warning is activated if the battery voltage remains above the limit for more than 10 seconds. Shown in DC volts (VDC).
		Load Shed Output	The load level that causes a load shed, shown in percentage of rated kW and in kW.
		Low Battery Voltage	The battery voltage level that causes a low battery voltage warning. The warning is activated if the battery voltage falls below the limit for more than 10 seconds. Shown in DC volts (VDC).
		Overfrequency	The output frequency level that causes an overfrequency shutdown, shown in percentage of rated frequency and in Hz. The unit shuts down if the output frequency remains above the limit for more than 10 seconds.
		Overspeed	The speed that causes an immediate overspeed shutdown. Shown in Hz and RPM.
		Overvoltage	The output voltage level that causes an overvoltage shutdown, shown in percentage of the rated voltage and in volts.
		Underfrequency	The output frequency level that causes an underfrequency shutdown, shown in percentage of rated frequency and in Hz. The unit shuts down if the output frequency falls below the limit for more than 10 seconds.
		Undervoltage	The output voltage level that causes an undervoltage shutdown, shown in percentage of system voltage and in volts.

4.3 Analog Inputs

The Analog Input Setup window allows the operator to enter the descriptions, functions (warning or shutdown), time delays, and trip point values for up to 7 analog inputs. Because the operator can define a variety of inputs, the Monitor II software does not assign units to the trip point values. To display the units in the data window, include them in the description in the first column of the setup window. See Figure 4-1 and the following procedure.

Analog Input Setup Procedure

1. Select Data Window→Add Window or use the add window shortcut key. The software displays the Add Window box.
2. Select the device name for the Decision-Maker™ 550 controller in the first column and Analog Input Setup in the second column. Click on the OK button.
3. Select Data Window→Setup or right click in the new window and select Setup.
4. Type the analog input description and the units for the warning and shutdown values in the description column. Use a maximum of 20 characters.
5. Enter the shutdown values, warning values, and time delays in the labelled columns for each input.

The values must lie within the upper and lower limits shown at the top of each column.

6. Click on the OK button to accept the changes or Cancel to discard them.

The software displays the new descriptions and settings in the Analog Input Setup and Analog Input Data windows at the next update.

Note: Analog input values are scaled (calibrated) only through the controller. The Monitor II software does not have the capability to change analog input calibrations.

4.4 Common Fault Selections

This data window displays “Yes” next to signals that are part of the Defined Common Fault signal or “No” next to signals that are not. In setup mode double click on signals to change between Yes and No. The program sorts the list of signals so that signals that enable the common fault signal (Yes) are displayed first.

Select any of the system event signals except the Defined Common Fault, Genset Param Warning, Genset S/N Warning, and Genset S/N Shutdown as part of the defined common fault signal. See Section 4.10 for a list of system events.

Defined common faults can drive the relay driver outputs (RDOs). The Defined Common Fault is the default for RDO 18. See Section 4.7.

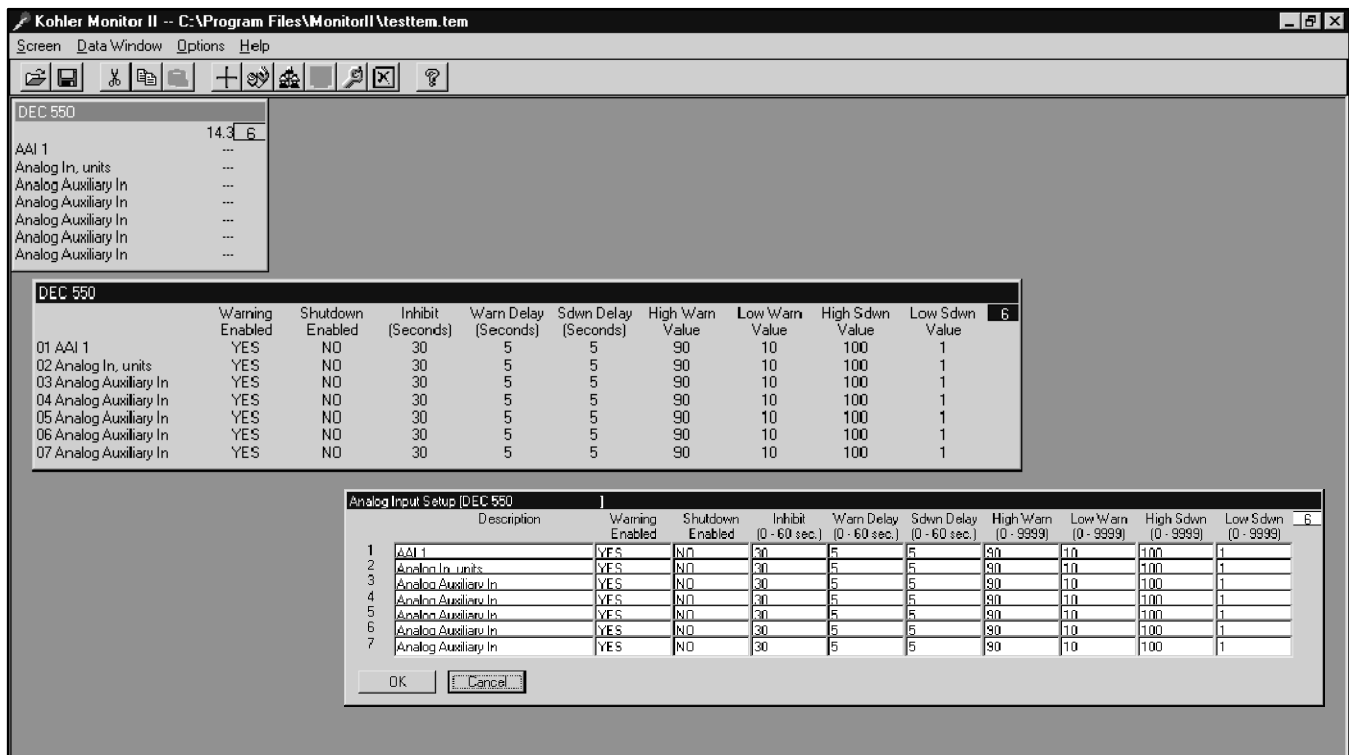


Figure 4-1 Analog Input Setup Data Window with Setup Window

4.5 Digital Inputs

The Digital Inputs data window displays the description, function, warning and shutdown values, and time delays for up to 21 digital auxiliary inputs. Define the digital inputs in setup mode.

Digital Input Setup Procedure

1. Choose Add Window→Digital Inputs.
2. Select Data Window→Setup to enter the setup mode.
3. If desired, enter the description in the first column using a maximum of 20 characters.
4. Click in the Enabled column to toggle between Yes to enable the function or No to disable it.
5. Enter the Inhibit and Time Delay values in seconds.
6. Select the function from the drop-down list in the last column. The selections are:

WARNING
SHUTDOWN TYPE A
SHUTDOWN TYPE B
VOLTAGE RAISE
VOLTAGE LOWER
VAR PF MODE
REMOTE SHUTDOWN
REMOTE RESET
AIR DAMPER
LOW FUEL
FIELD OVER VOLTS
IDLE MODE ACTIVE (ECM only)
BATTLESWITCH
GROUND FAULT
BAT CHGR FAULT
HI OIL TEMP (non-ECM)
LOW COOLANT LVL
LOW COOLANT TEMP (not user-assignable)


7. Click OK when finished to apply the changes or Cancel to discard the changes.

4.6 Operational Summary

In setup mode, the operational summary data window allows the operator to reset the generator set maintenance records, program a generator set run time and start the generator set. See the table in Section 7.2 for a list of items included in the data window and then read this section for more information.

4.6.1 Engine Start and Run

⚠ WARNING



Accidental starting. Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.

To start the generator set using the Monitor II software, open the Operational Summary data window and select Data Window→Setup.

Note: In setup mode, the Engine Start feature allows the PC operator to start and run a generator set that is not visible from the PC location. Use extreme caution to prevent unintended starting of the generator set or unsafe generator set operation.

Enter the duration of the generator set run in the Run Time setup column, in hours:minutes. Then click the Ok button to start the generator set engine.

Note: Click the Stop Engine button to stop the test at any time during the run.

To view the time remaining for the generator set run, open the Engine Brief data window. The Countdown shows the time remaining in the programmed generator set run. The Run Time shows the duration of the run that was entered in the operational summary setup window.

4.6.2 Reset Maintenance Records

Check the Reset Maintenance Records box to set the generator set maintenance records to zero.

4.7 Relay Driver Outputs

The relay driver outputs (RDOs) can control relays connected to fans, lights, or other customer equipment. The relay driver output data window displays the source that drives each RDO and the RDO state (on or off). See Figure 4-2.

Assign any of the system events listed in Section 4.10, any user-defined digital inputs from D01-D21, or any analog inputs from A01-A07 to an RDO. The Defined Common Fault is the default driver for RDO 18. Change the source that drives each RDO in the setup mode. See the controller operation manual for RDO factory settings.

Note: If the NFPA 110 defaults are set, the user cannot change RDOs 1–13, 19, 22, or 23.

RDO Setup Procedure

1. Select the Relay Driver Output data window.
2. Choose Data Window→Setup or right click on the data window and choose Setup.
3. In the column on the right side of the setup window, double click on the line for the RDO to define.
4. Select the item to define as an RDO from the dropdown list in the pop-up window.
5. Click OK when finished to apply the changes or Cancel to discard the changes.

See the controller operation manual for information about hardware connections for RDOs.

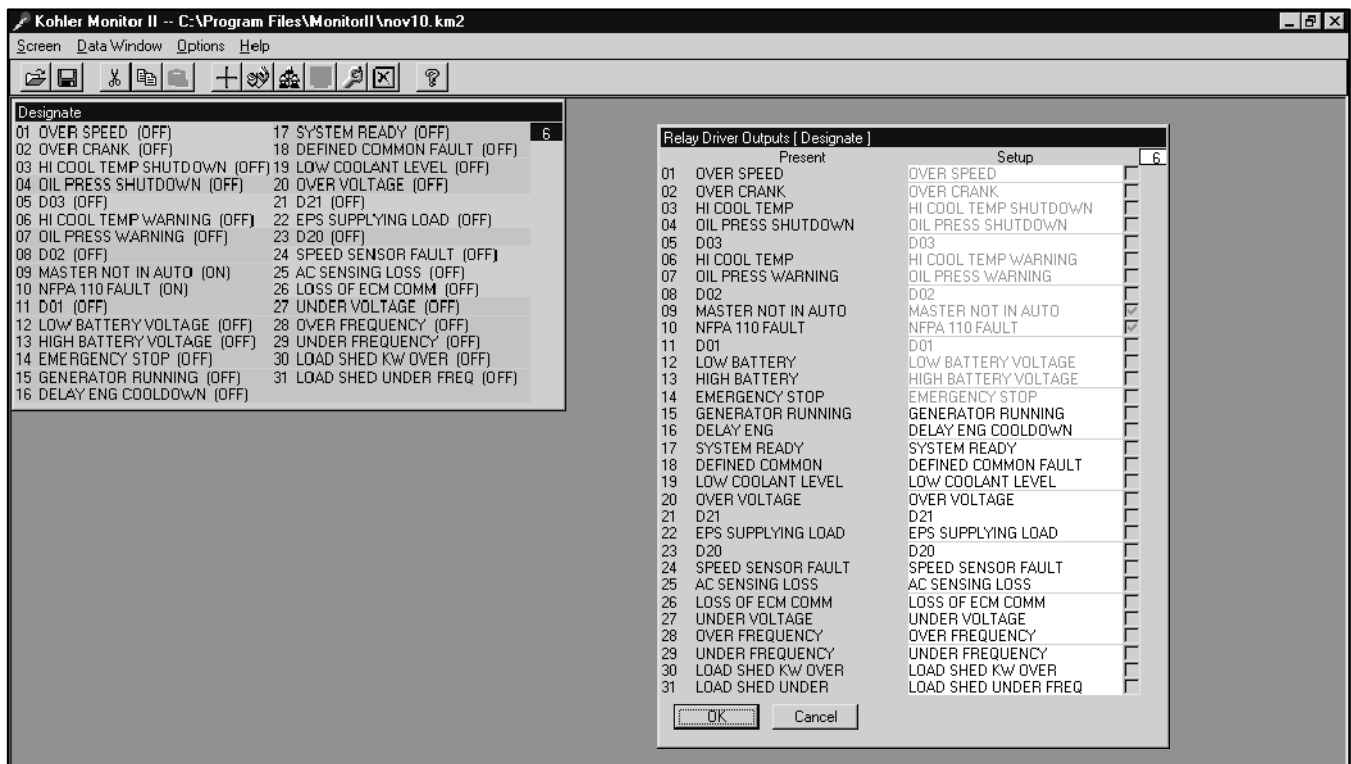


Figure 4-2 Relay Driver Outputs Data Window with Setup Window

4.7.1 Software-Controlled RDOs

The operator can define up to four software-controlled relay driver outputs (SCRDOs). SCRDOs allow the operator to control outputs from a remote site using a PC with either KBUS or Modbus® communications.

Note: SCRDOs allow the computer operator to turn on outputs from a remote location using a personal computer. Be very careful when activating outputs for a system that is not visible from the PC location.

In setup mode, the SCRDOs are displayed as RDO1-4. A checkmark in the small box on the right side of the window indicates that the SCRDO is activated (on). Click in the box to turn the SCRDO on and off.

Note: Activated SCRDOs remain on if communication between the PC and the device is lost.

If communication between the PC and the device is lost, use the controller keypad to deactivate (turn off) activated SCRDOs. Go to Menu 10 and press the right arrow to bring up the “deactivate” prompt. Refer to the controller operation manual for more information about using the controller keypad. SCRDOs cannot be turned on from the controller keypad.

4.7.2 NFPA 110 Defaults

Turn the NFPA 110 defaults on or off through the Generator Info data window. Enter setup mode as described in Section 2.8.1. Choose “Yes” in the NFPA 110 drop-down window to turn the defaults on, or “No” to turn them off. If the NFPA 110 defaults are set, the user cannot change RDOs 1-13, 19, 22, or 23. These are the NFPA 110 defaults:

RDO	NFPA 110 Defaults
01	Overspeed
02	Overcrank
03	High coolant temperature shutdown
04	Oil pressure shutdown
05	Low coolant temperature (ECM only)
06	High coolant temperature warning
07	Oil pressure warning
08	Low fuel
09	Master switch not in AUTO
10	NFPA 110 common fault
11	Battery charger fault
12	Low battery voltage
13	High battery voltage
19	Low coolant level
22	Emergency power system supplying load
23	Air damper indicator

4.8 Time and Date

This data window displays generator set time and date information. Change the time and date settings in setup mode.

Time. The time at the generator set location. The format is Hour:Minute AM/PM.

Date. The date at the generator set location. The format is Month/Day/Year.

Day. The day of week calculated by the generator set controller from the date.

Enter the time and date at the generator set’s location. Click AM/PM to change AM/PM. Click on the System Clock button to set the time and date from the PC’s system clock.

Note: If the generator set is located in a different time zone than the PC, adjust the time and date on the PC to match the time and date at the generator set location.

4.9 Decision-Maker 550 Generator Set Controller Parameter Locations

Use the following table to find the data window locations of individual items.

Item	Data Window
Alternator Model Number	Factory Setup
Ambient Temperature	Engine Miscellaneous
Analog Auxiliary In	Analog Input Data
Battery Voltage	Generator Info
Common Fault Selections	Common Fault Selections
Control Serial No.	Generator Info
Controller Serial No.	Factory Setup
Coolant Level	Engine Coolant
Coolant Pressure	Engine Coolant
Coolant Temperature	Engine Brief Engine Coolant
Countdown	Engine Brief
Crank Cycles	Time Delays
Crank On	Time Delays
Crank Pause	Time Delays
Crankcase pressure	Engine Oil
Date	Time and Date
Day	Time and Date
Days Operation	Factory Setup
Delay	Digital Inputs
Designation	Generator Info
Duration of Run	Operational Summary
ECM Battery Voltage	Engine Miscellaneous

Item	Data Window
ECM Equipped	Engine Brief
ECM Serial #	Engine Miscellaneous
Enabled	Digital Inputs
Engine Cooldown	Time Delays
Engine Model #	Engine Miscellaneous
Engine Model Number	Factory Setup
Engine Serial #	Engine Miscellaneous
Engine Speed	Engine Brief Engine Speed
Engine Start	Time Delays
Engine Starts	Engine Brief
Event History	Event History
Factory Test Date	Operational Summary
Final Assembly Clock #	Factory Setup
Final Assembly Date	Factory Setup
Frequency	Frequency
Fuel Last Run	Engine Fuel
Fuel Pressure	Engine Fuel
Fuel Rate	Engine Fuel
Fuel Temperature	Engine Fuel
Function	Digital Inputs
Genset Serial Number	Factory Setup
High Battery Voltage	Trip Points
High Sdwn Value	Analog Input Setup
High Warning Value	Analog Input Setup
Inhibit	Analog Input Setup Digital Inputs
kVA	kVA
kVAR	kVAR
kW	kW
kW Rating	Generator Info
L1, L2, and L3	Line Current
L1-L0 VAC L2-L0 VAC L3-L0 VAC	Line-Neutral Voltage
L1-L2 VAC L2-L3 VAC L3-L1 VAC	Line-Line Voltage
Last Start Date	Operational Summary
Last Start time	Operational Summary
Load	Generator Info
Load Shed	Time Delays
Load Shed Output	Trip Points
Loaded/Unloaded	Operational Summary
Local Battery Volts	Engine Brief
Location	Generator Info
Low Battery Voltage	Trip Points
Low Sdwn Value	Analog Input Setup

Item	Data Window
Low Warning Value	Analog Input Setup
Model No.	Factory Setup Generator Info
Name	Digital Inputs
NFPA 110	Generator Info
Oil Level	Engine Oil
Oil Pressure	Engine Brief Engine Oil
Oil Temperature	Engine Oil
Overfrequency	Trip Points
Overspeed	Trip Points
Overvoltage	Time Delays Trip Points
Power Factor	Power Factor
Relay Driver Outputs (RDOs)	Relay Driver Outputs
Reset Date	Operational Summary
Reset Days of Operation	Operational Summary
Reset kW Hours	Operational Summary
Reset Number of Starts	Operational Summary
Reset Run Time	Operational Summary
Reset Run Time Loaded	Operational Summary
Reset Run Time Unloaded	Operational Summary
Run Time	Engine Brief
Sdwn Delay	Analog Input Setup
Serial No.	Factory Setup Generator Info
Shutdown Enabled	Analog Input Setup
Single/Three Phase	Generator Info
Spec No.	Factory Setup Generator Info
Starting Aid	Time Delays
System Frequency	Generator Info
System Voltage	Generator Info
Time	Time and Date
Total kW hours	Operational Summary
Total Number of starts	Operational Summary
Total Run Time	Operational Summary
Total Run Time Loaded	Operational Summary
Total Run Time Unloaded	Operational Summary
Underfrequency	Trip Points
Undervoltage	Time Delays Trip Points
Unit #	Engine Miscellaneous
Version Number	Factory Setup
Warn Delay	Analog Input Setup
Warning Enabled	Analog Input Setup

4.10 System Event, Common Fault, and RDO Message Summary

Display Message	Description
AC SENSING LOSS	AC sensing loss
AIR DAMPER CONTROL	Air damper control
AIR DAMPER INDICATOR	Air damper indicator
ALTRNTR PROTECT SDWN	Alternator protection shutdown
BATTERY CHRGR FAULT	Battery charger fault
CRITICAL OVERVOLTAGE	Critical overvoltage
DEFINED COMMON FAULT	Defined common fault (do not use for common fault)
DELAY ENG COOLDOWN	Time Delay Engine Cooldown (TDEC) timing
DELAY ENGINE START	Time Delay Engine Start (TDES) timing
EEPROM WRITE FAILURE	EEPROM write failure
EMERGENCY STOP	Emergency stop
EPS SUPPLYING LOAD	Emergency power system supplying load
GENERATOR RUNNING	Generator running
GROUND FAULT DETECTED	Ground fault detected
HI COOL TEMP WARNING	High coolant temperature warning
HI OIL TEMP	High oil temperature shutdown
HIGH BATTERY VOLTAGE	High battery voltage
INTERNAL FAULT	Internal fault
LOAD SHED KW OVER	Load shed kW overload
LOAD SHED UNDER FREQ	Load shed underfrequency
LOCKED ROTOR	Locked rotor
LOSS OF ECM COMM	Engine control module communications loss
LOW BATTERY VOLTAGE	Low battery voltage
LOW COOLANT LEVEL	Low coolant level
LOW COOLANT TEMP	Low coolant temperature
LOW FUEL	Low fuel level or pressure
MASTER SWITCH ERROR	Master switch error shutdown; switch is in more than one position or faulty
MASTER SWITCH TO OFF	Instructs the operator to place the master switch in the OFF position
MASTER NOT IN AUTO	Master switch not in AUTO position
MASTER SWITCH OPEN	Master switch open shutdown; faulty switch or connections
NFPA 110 FAULT	NFPA 110 common fault
NO COOL TEMP SIGNAL	Coolant temperature signal loss
NO OIL PRESS SIGNAL	Oil pressure signal loss
OIL PRESS SHUTDOWN	Oil pressure shutdown
OIL PRESS WARNING	Oil pressure warning
OVER CRANK	Overcrank shutdown
OVER CURRENT	Overcurrent warning
OVER FREQUENCY	Overfrequency shutdown
OVER SPEED	Overspeed shutdown
OVER VOLTAGE	Overvoltage shutdown
SPEED SENSOR FAULT	Speed sensor fault
STARTING AID	Starting aid
SYSTEM READY	System ready
UNDER FREQUENCY	Underfrequency shutdown
UNDER VOLTAGE	Undervoltage shutdown
WEAK BATTERY	Weak battery
A01 through A07	Analog Auxiliary Inputs 01 through 07
D01 through D21	Digital Auxiliary Inputs 01 through 21

Notes

Section 5 Decision-Maker 340 Controller Data Windows

5.1 Introduction

This section explains data window information available for Decision-Maker™ 340 generator set controllers. See Section 7.2 for available data windows. More detailed information for some of the items is included in the sections after the table.

5.2 Data Windows

The following table lists and describes the items found in each data window. A checkmark (✓) in the Setup column indicates a user-programmable setting. Enter the setup mode to program new settings by selecting Data Window→Setup or by right-clicking on the data window and selecting Setup.

Data Window	Setup	Item	Item Description
% Max kW		% Max kW	The present kilowatt load on the generator set divided by its kilowatt rating, expressed as a percentage.
Auxiliary Inputs	✓	Auxiliary Inputs 1-4	Displays the identifying name (20 characters maximum) for auxiliary 1, 2, 3, and 4 inputs and indicates whether the auxiliary input causes a warning or a shutdown. In setup mode, edit the identifying name in the setup column and double click to change between Warning and Shutdown.
Common Fault Selections	✓	Common Fault Selections	Displays Yes next to signals that are part of the Defined Common Fault signal, No next to signals that are not. See the list of signals available in Section 5.3.
Engine Inputs		Battery Voltage	The engine starting battery voltage.
		Coolant Temperature	The engine coolant temperature in degrees Celsius or Fahrenheit.
		Oil Pressure	The engine oil pressure in kPa or psi.
Engine Speed		Engine Speed	The engine speed in RPM. Analog or digital display.
Frequency		Frequency	The average generator set output frequency in hertz (Hz). Analog or digital display.
Generator Info	✓	Battery Voltage	The battery voltage shown on the nameplate, which is normally set at the factory.
		Control Serial No.	The generator set controller serial number, which is normally set at the factory. Analog or digital display.
		Designation	Setup window only. An optional unique name that identifies the device and appears on the device list at each address for network connections and on all data windows when the Monitor II software is connected to the device. Enter a description of up to 9 characters in setup mode. Note: The Monitor II software does not display the new designation until all devices are scanned after selecting a new screen.
		kW Rating	The generator set alternator kilowatt rating shown on the nameplate, which is normally set at the factory.
		Load	An optional description of the connected load, such as total building, HVAC, or motors. Enter a description with up to 20 characters in setup mode.
		Location	An optional description of the generator set's location. Enter a description with up to 9 characters in setup mode.
		Model No.	The generator set model number shown on the nameplate, which is normally set at the factory.
		Network Address	The network address of the device. Set at the local display and keypad only.
		Serial No.	The generator set serial number shown on the nameplate, which is normally set at the factory.
Single/Three Phase		Single/Three Phase	Electrical system type: single-phase, three-phase wye, or three-phase delta. This setting is normally set at the factory.

Data Window	Setup	Item	Item Description
Generator Info, continued	✔	Spec No.	The generator set specification number shown on the nameplate, which is normally set at the factory.
		System Frequency	The generator set frequency shown on the nameplate, which is normally set at the factory.
		System Voltage	The generator set voltage shown on the nameplate, which is normally set at the factory.
Generator Shutdown History		Event History	A history of the 4 most recent shutdowns and the date on which they occurred.
Line Current		L1, L2, and L3	The current in amperes through generator set lines L1, L2, and L3. Analog or digital display.
Line-Line Voltage		L1-L2 VAC L2-L3 VAC L3-L1 VAC	The AC rms voltage measured from line to line: L1-L2, L2-L3, and L3-L1. Analog or digital display.
Line-Neutral Voltage		L1-L0 VAC L2-L0 VAC L3-L0 VAC	The AC rms voltage measured from each line to neutral: L1-L0, L2-L0, and L3-L0. Analog or digital display.
Operational Summary		Days of Operation	The number of days the generator set has been in operation since the last maintenance reset.
		Duration of Run	The length of time, in hours, that the generator set ran during its last operation.
		kW Hours	The number of kilowatt-hours on the generator set since last reset.
		Loaded/Unloaded	Whether the generator last ran with or without a load.
		Number of Starts	The number of successful starts for the generator set since last reset.
		Reset Date	The last maintenance record reset date.
		Run Time: Loaded	The running time of the generator set with a load.
		Run Time: Unloaded	The running time of the generator set without a load.
		Start Date	The date the generator set was last successfully started.
		Start Time	The time the generator set was last successfully started.
Power Factor and kW		Power Factor	The power factor of the load.
		Total Kilowatts	The total load in kilowatts.
Relay Driver Outputs	✔	Relay Driver Outputs (RDOs)	Displays the signal source that drives each of the relay driver outputs (RDOs) and the RDO state (on or off). See Section 5.4 for a list of available signals.
Status		Generator Status	Displays the generator set status: Running, Stopped, or Cranking.
		Master Switch	Displays the master switch position: Run, Off/Reset, or Auto.
		Program Mode	Displays the present programming mode: Local, Off, or Remote.
		System Alert	Displays the operating mode of the unit. The message displayed can be any of the signal sources that can enable the common fault signal (see Section 5.3) plus the messages in Section 5.5. See the generator set controller operation and installation manual for more information.
Status (Setup Mode) (see Section 5.5)	✔	Fault Reset	Check box to reset a fault condition. If the controller indicates a fault, reset it before starting the generator set. Click the OK button to start the generator set.
		Run Time	Displays the generator set run time. Enter a new generator set run time in the setup column. Note: Note: Click the Stop Engine button to stop the test before the run time completes. The run time setting returns to 00:00/No after the generator set run time elapses.

Data Window	Setup	Item	Item Description
Time and Date	✓	Date	The date at the generator set location. The format is Month/Day/Year. See Section 5.6.
		Day	The day of week calculated by the generator set controller from the date.
		Time	The time at the generator set location. The format is Hour:Minute AM/PM. See Section 5.6.
Time Delays	✓	Auxiliary 1-4	Inhibit: The time delay after engine start before the controller checks the auxiliary input for sensor signals. Delay: The time delay after the controller receives a signal from the auxiliary input before a shutdown or warning occurs.
		Crank Cycles	The number of engine crank cycles before an overcrank shutdown.
		Crank On	The engine cranking on time, in seconds.
		Crank Pause	The engine cyclic cranking rest time, in seconds.
		Engine Cooldown	The time delay between the remote engine start contact opening and the engine stop sequence, in minutes:seconds.
		Engine Start	The time delay between the remote engine start contact closing and the engine start sequence, in seconds.
		Overvoltage	The time delay before a fault if the voltage rises above the upper limit, in seconds.
		Starting Aid	The engine starting aid time delay before engine cranking. The adjustable time delay allows the starting aid to operate before the engine starts to crank.
		Undervoltage	The time delay before a fault if the voltage falls below the lower limit, in seconds.
Time Delays Status		Crank On, Crank Pause, Engine Cooldown, Engine Start, or Starting Aid	End Off: The time delay is running or has not run.
			End On: The time delay has completed timing.
			Run Off: The time delay is not running.
			Run On: The time delay is running.
Trip Points	✓	High Battery Voltage	The battery voltage level that causes a high battery voltage warning. The warning is activated if the battery voltage remains above the limit for more than 10 seconds. Shown in DC volts (VDC).
		Low Battery Voltage	The battery voltage level that causes a low battery voltage warning. The warning is activated if the battery voltage falls below the limit for more than 10 seconds. Shown in DC volts (VDC).
		Overfrequency	The output frequency level that causes an overfrequency shutdown, shown in percentage of rated frequency and in Hz. The unit shuts down if the output frequency remains above the limit for more than 10 seconds.
		Overspeed	The speed that causes an immediate overspeed shutdown. Shown in Hz and RPM.
		Overvoltage	The output voltage level that causes an overvoltage shutdown, shown in percentage of the rated voltage and in volts.
		Underfrequency	The output frequency level that causes an underfrequency shutdown, shown in percentage of rated frequency and in Hz. The unit shuts down if the output frequency falls below the limit for more than 10 seconds.
		Undervoltage	The output voltage level that causes an undervoltage shutdown, shown in percentage of system voltage and in volts.

5.3 Common Fault Selections

This data window displays Yes next to signals that are part of the Defined Common Fault signal, No next to signals that are not.

Available signals include those signals available for the relay driver outputs (see Section 5.4) except the defined common fault signal itself plus the following.

- Low Oil Pressure
- High Coolant Temperature
- Overcrank
- Overspeed
- Emergency Stop
- Not In Auto
- System Ready
- Low Battery Voltage
- Battery Charger Fault
- Low Fuel
- High Coolant Temperature Warning
- Low Oil Pressure Warning
- Low Coolant Temperature
- Load Shed Underfrequency
- Load Shed Excess kW

See the controller operation and installation manual for a detailed description of the status and fault messages.

In setup mode, double click on signals to change between Yes and No. The program sorts the list of signals so that signals that enable the common fault signal (Yes) are displayed first. The system limits selected signals enabling the common defined fault to a maximum of 31.

5.4 Relay Driver Outputs

This data window displays the signal source that drives each of the ten relay driver outputs (RDOs) on the generator set controller. RDOs can be driven from any of the following signal sources.

- Defined Common Fault
- Air Damper
- Overvoltage
- Undervoltage
- Underfrequency Shutdown
- Low Coolant Level
- High Oil Temperature
- Auxiliary 1

- Auxiliary 2
- Auxiliary 3
- Auxiliary 4
- Locked Rotor
- Internal Error
- EPS Supplying Load
- Speed Sensor Fault
- Load Shed
- kW Overload
- Underfrequency Warning
- High Battery Voltage
- No Temperature Gauge Signal
- No Oil Gauge Signal
- Ground Fault Detected
- Overcurrent
- Engine Cooldown
- Engine Start
- Generator Running
- NFPA 110 Common Alarm
- Starting Aid
- Weak Battery
- Low AC Output
- Overfrequency Shutdown

See the controller operation and installation manual for a detailed description of the status and fault messages.

Change the signal source that drives each relay driver output in the setup mode.

RDO Setup Procedure

1. Select the Relay Driver Output data window.
2. Choose Data Window→Setup or right click on the data window and choose Setup.
3. Select the item to define as a relay driver output from the dropdown list in the pop-up window.
4. Click OK when finished to apply the changes or Cancel to discard the changes.

5.5 Status

This data window displays generator set status information. See Section 7.2 for a list of items included in the Status window and then read this section for more information.

5.5.1 System Alert Messages


The system alert messages indicate the operating mode of the unit. The message displayed can be any of the signal sources that can enable the common fault signal (see Section 5.3) plus the following messages.

Overvoltage L1–L2
Overvoltage L2–L3
Overvoltage L3–L1
Overvoltage L1–L0
Overvoltage L2–L0
Overvoltage L3–L0
Undervoltage L1–L2
Undervoltage L2–L3
Undervoltage L3–L1
Undervoltage L1–L0
Undervoltage L2–L0
Undervoltage L3–L0
Master Switch Open
Power-Down Error

See the generator set controller operation and installation manual for more information.

5.5.2 Engine Start

WARNING



Accidental starting. Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote

start/stop switch, or engine start command from a remote computer.

In setup mode the status data window allows the operator to reset a generator set fault, program a generator set run time, and start the generator set. Right click on the Status data window and choose Setup to access engine start.

Note: In setup mode, this data menu allows the software operator to start and run a generator set in a location that is not within sight of the operator. Use extreme care when using this feature to prevent unintended starting of the generator set.

- **Run Time.** Displays the duration of the generator set run time. Enter a new generator set run time in the setup column.
- **Fault Reset.** Check box to reset a fault condition. If the controller indicates a fault, reset it before starting the generator set.

Click the Ok button to start the generator set.

Note: Click the Stop Engine button to stop the test before the run time completes.

The run time setting returns to 00:00/No after the generator set run time elapses.

5.6 Time and Date

This data window displays generator set time and date information.

- **Time.** The time at the generator set location. The format is Hour:Minute AM/PM.
- **Date.** The date at the generator set location. The format is Month/Day/Year.
- **Day.** The day of week calculated by the generator set controller from the date.

Enter the time and date at the generator set's location in setup mode. Click AM/PM to change AM/PM. Click on the System Clock button to set the time and date from the PC's system clock.

Note: If the generator set is located in a different time zone than the PC, adjust the time and date on the PC to match the time and date at the generator set location.

5.7 Decision-Maker 340 Generator Set Controller Data Windows Item Locations

Use the following table to find the data window locations of individual items.

Item	Data Window
% Max kW	% Max kW
Auxiliary 1-4	Time Delays
Auxiliary Inputs 1-4	Auxiliary Inputs
Battery Voltage	Engine Inputs
	Generator Info
Common Fault Selections	Common Fault Selections
Control Serial No.	Generator Info
Coolant Temperature	Engine Inputs
Crank Cycles	Time Delays
Crank On	Time Delays
	Time Delays Status
Crank Pause	Time Delays Status
	Time Delays
Date	Time and Date
Day	Time and Date
Days of Operation	Operational Summary
Designation	Generator Info
Duration of Run	Operational Summary
Engine Cooldown	Time Delays Status
	Time Delays
Engine Speed	Engine Speed
Engine Start	Time Delays Status
	Time Delays
Event History	Generator Shutdown History
Fault Reset	Status (Setup Mode)
Frequency	Frequency
Generator Status	Status
High Battery Voltage	Trip Points
kW Hours	Operational Summary
kW Rating	Generator Info
L1, L2, and L3	Line Current
L1-L0 VAC L2-L0 VAC L3-L0 VAC	Line-neutral Voltage

Item	Data Window
L1-L2 VAC L2-L3 VAC L3-L1 VAC	Line-line Voltage
Load	Generator Info
Loaded/Unloaded	Operational Summary
Location	Generator Info
Low Battery Voltage	Trip Points
Master Switch	Status
Model No.	Generator Info
Network Address	Generator Info
Number of Starts	Operational Summary
Oil Pressure	Engine Inputs
Overfrequency	Trip Points
Overspeed	Trip Points
Overvoltage	Time Delays
	Trip Points
Power Factor	Power Factor and kW
Program Mode	Status
Relay Driver Outputs (RDOs)	Relay Driver Outputs
Reset Date	Operational Summary
Run Time	Status (Setup Mode)
Run Time: Loaded	Operational Summary
Run Time: Unloaded	Operational Summary
Serial No.	Generator Info
Single/Three Phase	Generator Info
Spec No.	Generator Info
Start Date	Operational Summary
Start time	Operational Summary
Starting Aid	Time Delays
	Time Delays Status
System Alert	Status
System Frequency	Generator Info
System Voltage	Generator Info
Time	Time and Date
Total Kilowatts	Power Factor and kW
Underfrequency	Trip Points
Undervoltage	Time Delays
	Trip Points

Section 6 M340 and M340+ ATS Controller

6.1 Introduction

This section explains data window information available for M340 and M340+ ATS controllers. See Section 7.2 for available data windows.

Refer to the ATS controller operation and installation manual for more information about controller operation, recommended settings, and accessories. See the List of Related Materials in the Introduction of this manual.

6.2 Data Windows

The following table lists and describes the items found in each data window. A checkmark (✓) in the Setup column indicates a user-programmable setting. Enter the setup mode to program new settings by selecting Data Window→Setup or by right-clicking on the data window and selecting Setup. An asterisk (*) indicates that the data window or item displays information for both the normal and emergency sources. More detailed information for some of the items is included in the sections after the table.

Data Window	Setup	Item	Item Description
Accessories		List of installed accessories	ATS accessory status, which matches the Accessory Active LEDs on the ATS. On: The accessory is functioning. Off: The accessory has completed its function or has not been called upon to function. Disabled: The accessory is disabled. The enabling shunt/jumper on the controller circuit board is not installed.
ATS Information*	✓	Address	The network address of the unit. (Display only. Set the network address at the controller.)
		Amperage	The ATS power switching device current rating in amperes, which is normally set at the factory.
		ATS SN	The ATS serial number, which is factory set and cannot be changed in setup mode.
		ATS Type	The type of power switching device on the transfer switch, which is factory set and cannot be changed in setup mode. This item is displayed only for the M340+ controller.
		Branch	An optional description of the switch location by distribution branch, such as service entrance or branch circuit breaker number. Enter a description up to 18 characters long in setup mode.
		Control	The ATS controller serial number, which is factory set and cannot be changed in setup mode.
		Designation	An optional unique name that identifies the device and appears on the device list at each address for network connections and on all data windows when the Monitor II software is connected to the device. Enter a unique description up to 9 characters long in setup mode. Note: The Monitor II software does not display the new designation until the operator selects a new screen and the software scans the devices.
		Limits	The system voltage and system frequency limits (Setup Mode only). The limits are factory set and cannot be changed.
		Load	An optional description of the connected load, such as total building, HVAC, or motors. Enter a description up to 20 characters long in setup mode.
		Location	An optional description of the transfer switch's location. Enter a description up to 20 characters long in setup mode.
		Options	The catalog numbers of enabled and installed accessories for reference when servicing the transfer switch, which are normally set at the factory. Each entry is limited to three characters. Enter up to 12 accessories, although more than 12 accessories may be installed. Check the transfer switch nameplate for factory-installed accessories.
		Poles	The number of poles on the ATS power switching device, which is normally set at the factory.
Single/Three Phase	The ATS phase connection, which is normally set at the factory.		
System Frequency	The ATS frequency rating shown on the nameplate, which is normally set at the factory.		

* Displays information for both the normal and emergency sources.

Data Window	Setup	Item	Item Description
ATS Information, continued*	✓	System Voltage	The ATS voltage rating shown on the nameplate, which is normally set at the factory.
ATS Status		Program Switch	The position of the programming mode switch on the transfer switch front panel, Remote, Off, or Local.
		Source Available	Which power sources, Normal and/or Emergency, can accept loads.
		Switch Position	The position of the transfer switch, Normal, Emergency, or Off. The Off position is displayed only for the M340+ controller.
		System Alert	Displays the operating mode of the unit. The message displayed can be any of the messages listed in Section 6.3. See the ATS controller operation and installation manual for more information.
		Test Switch	The position of the test/operation mode switch and/or the automatic/manual switch, Auto or Not in Auto. See Section 6.3 for more information.
ATS Status (Setup Mode) In setup mode, the ATS status data window allows the operator to exercise the generator set that connects to the ATS engine start contacts. Refer to Section 6.3 for instructions.	✓	BP TDEN	Click the Yes radio button to bypass Time Delay Emergency to Normal (TDEN) during the generator set run.
		BP TDNE	Click the Yes radio button to bypass Time Delay Normal to Emergency (TDNE) during the generator set run.
		Generator Running	Displays Yes if the ATS engine start contact is closed, signaling the generator set to run, No if the ATS engine start contact is open (display only).
		Load Transfer	Click the Yes radio button to run the generator set loaded (the ATS transfers the load to the emergency source) during the generator set run.
		Plant Exerciser	Displays Enabled if the plant exerciser accessory is installed, disabled if it is not installed (display only).
		Plant Exerciser Load/No Load	Displays Load if the plant exerciser option runs the generator set loaded (the ATS transfers the load to the emergency source). Displays No Load if the plant exerciser option runs the generator set unloaded (the ATS does not transfer the load to the emergency source) (display only).
		Run Time	Displays the generator set run time. Enter a new generator set run time in the setup column. Note: In setup mode, this data window allows the operator to start and run a generator set that is not within sight of the operator. Use extreme care when using this feature to prevent unintended starting of the generator set or unexpected transfer of power.
Emergency Frequency		Emergency Frequency	This data window displays the AC frequency in hertz of the emergency source phase A-C, if available.
Emergency Voltage		Emergency Voltage	This data window displays the line-line AC rms voltages of all phases of the emergency source, if available. A single-phase source displays only the voltage on phase A-C.
Exerciser Setup	✓	Change Mode	Click to change the plant exerciser mode. Click on the radio button next to the desired choice. Note: All plant exerciser information is lost when the operator selects a different plant exerciser mode.
		Day of Week	The day for each event's pair of exercise runs (Calendar Mode only).
		Exercise Event	The number of the exercise event and whether the event is Enabled or Disabled. (Each event includes 2 runs over 2 weeks' time.)
		First Day of Week	The day for the event's first exercise run (7- or 14-day Mode only).
		First Occurrence	The occurrence number 1-5 of the day for the event's first exercise run (Calendar Mode only).
		Load Transfer	Displays Yes if the plant exerciser option runs the generator set loaded (ATS transfers to the emergency source). Displays No if the plant exerciser option runs the generator set unloaded (the ATS does not transfer the load to the emergency source). (Not user-programmable.)
		Run Time HR:MN	The duration of the event's exercise runs. (Hours and minutes)
		Second Day of Week	The day for the event's second exercise run. If the days are the same, the event contains only one exercise run (7- or 14-day Mode only).
		Second Occurrence	The occurrence number 1-5 of the day for the event's second exercise run. If the days are the same, the event contains only one exercise run (Calendar Mode only).

* Displays information for both the normal and emergency sources.

Data Window	Setup	Item	Item Description
Exerciser Setup, continued	✔	Start Time	The start time for each event's pair of exercise runs.
		Stop Plant Exercise	Click the check box and then click the Ok button to stop the plant exerciser.
		Week 1 or 2	The week of the 14-day period for the exercise event (14-day Mode only).
Features		Inphase Monitor, Phase Sequence, N/E Over/Under V&F, Plant Exerciser, Time Delay Extended, Manual Override, Time Delay Off (M340+ only)	Displays Enabled or Disabled for each feature or accessory.
Load Shed* (see Section 6.4)	✔	Extended Time Delay (Setup Mode only)	Displays Enabled or Disabled (display only).
		Load Returns	The number of load blocks to return after transfer to the related source.
		Time Before	The length of time before transfer to the related source when all load shed blocks are shed.
		Time After	The length of time after transfer to the related source when the load return sequence begins.
		Time Sequence	The length of time between the return of load blocks.
Normal Frequency		Normal Frequency	This data window displays the AC frequency in hertz of the normal source phase A-C, if available.
Normal Voltage		Normal Voltage	This data window displays the line-line AC rms voltages of all phases of the normal source, if available. A single-phase source displays voltage only on phase A-C.
Operational Summary		Days-Operation	The number of days that the ATS controller has been in operation. (Total and since last reset.)
		Hours-Emer. Source	The number of hours that the emergency source has been available (acceptable). (Total and since last reset.)
		Hours-Not in Normal	The number of hours that the transfer switch has not been in the Normal position. (Total and since last reset.)
		Start Date	The date of last record reset and the date of transfer switch and/or controller installation.
		Switch Transfers	The number of times that the power switching device has operated. (Total and since last reset.)
Phase Sequence		Phase Sequence	This data window displays the phase sequence for each available source (for 3-phase systems only).
Source History		Source History	This data window displays the cause, type, and date of the four most recent source failures. A manual test at the transfer switch records as a source failure. See Section 6.5 for a list of fault messages.
Time and Date	✔	Date	The date at the ATS location. The format is Month/Day/Year.
		Day	The day of week calculated by the ATS controller from the date.
		Time	The time at the ATS location. The format is Hour/Minute AM/PM. In setup mode enter a new time and date. Click AM/PM to change AM/PM. Click on the System Clock button to set the time and date from the PC's system clock. Note: If the ATS is located in a different time zone than the PC, enter the time and date to match the time and date at the ATS's location.
Time Delays	✔	Engine Cooldown (TDEC)	The time delay after the ATS transfers back to the Normal position when the ATS opens the engine start contact (min:sec).
		Engine Start (TDES)	The time delay after Normal source failure when the ATS signals the engine to start (min:sec).
		Emergency to Normal (TDEN)	The time delay before the ATS switches from the Emergency to Off or Normal positions (min:sec).

* Displays information for both the normal and emergency sources.

Data Window	Setup	Item	Item Description
Time Delays, continued	✓	Extended time Delay	Displayed as Enabled or Disabled. Enable extended time delays (option KD-100-B or DD-100-B) with a main controller shunt/jumper. This feature cannot be enabled with the software or the local display and keypad. If enabled, time delays can be extended to 99 minutes.
		Normal to Emergency (TDNE)	The time delay after the emergency source is acceptable when the ATS switches from the Normal to Off or Emergency positions (min:sec).
		Off to Emergency (TDOE)	The time delay before the ATS switches from the Off to Emergency positions (min:sec). This item is displayed only for the M340+ controller.
		Off to Normal (TDON)	The time delay before the ATS switches from the Off to Normal position (min:sec). This item is displayed only for the M340+ controller.
Time Delays Status		Normal to Emergency (TDNE), Off to Emergency (TDOE), Emergency to Normal (TDEN), Off to Normal (TDON), Engine Cooldown (TDEC), and Extended Time Delay	End Off: The time delay is running or has not run.
			End On: The time delay has completed timing.
			Run Off: The time delay is not running. This item is displayed only for the M340+ controller.
			Run On: The time delay is running. This item is displayed only for the M340+ controller.
Transfer Status		Auto/Manual Transfer	The position, Auto or Manual, of the automatic/manual transfer selector switch.
		Duration of Outage	The duration of the most recent normal source outage or test using the system test switch (hours and minutes). Outages of less than one minute do not show on the screen.
		Exercise Time Left	The generator set running time remaining when the generator set is running in plant exerciser or engine start mode (hours and minutes).
		Last Exerciser Date	The date of the most recent plant exerciser run.
		Last Outage	The time and date of the most recent normal source outage or test using the system test switch.
Trip Points See Section 6.6	✓	Overfreq Dropout	The maximum source frequency, expressed as a percentage of the system rated frequency. Above this frequency, the source is considered unavailable.
		Overfreq Pickup	The overfrequency pickup, expressed as a percentage of the rated frequency. After rising above the overfrequency dropout level, the source voltage must drop below this pickup level to be considered available.
		Overvolt Dropout	The maximum source voltage, expressed as a percentage of the rated line-to-line voltage. Above this level, the source is considered unavailable. Note: Set over trip points at least 2% higher than under trip points.
		Overvolt Pickup	The overvoltage pickup, expressed as a percentage of the rated line-to-line voltage. After exceeding the overvoltage dropout level, the source voltage must drop below this pickup level to be considered available.
		Underfreq Pickup	The underfrequency pickup, expressed as a percentage of the rated frequency. After falling below the underfrequency dropout level, the source voltage must rise above this pickup level to be considered available.
		Underfreq Dropout	The minimum source frequency, expressed as a percentage of the system rated frequency. Below this frequency, the source is considered unavailable.
		Undervolt Pickup	The undervoltage pickup, expressed as a percentage of the rated line-to-line voltage. After falling below the undervoltage dropout level, the source voltage must rise above this pickup level to be considered available. Displays trip points for the normal and emergency sources.
		Undervolt Dropout	The minimum source voltage, expressed as a percentage of the rated line-to-line voltage. Below this level, the source is considered unavailable.

* Displays information for both the normal and emergency sources.

6.3 ATS Status Window

See Section 7.2 for a list of items included in the ATS status window and then read this section for more information.

6.3.1 System Alert Messages

System alert messages indicate the operating mode of the unit. The following messages can be displayed. See the ATS controller operation and installation manual for more information.

- **None.** The ATS controller and power switching devices are working properly.
- **Aux-Switch Fault.** A power switching device auxiliary switch contact malfunction, wiring fault, or controller fault.
- **Dbi Aux-Sw Fault.** A power switching device auxiliary switch contact malfunction, showing both normal and emergency contacts closed at the same time, or other wiring or controller fault.
- **Transfer Hang.** The power switching device may be binding or not completing a transfer.
- **Power-Down Error.** May indicate a loss of controller settings after a loss of controller power. Recheck settings and reenter as necessary.
- **RAM Error, Memory Error.** An ATS controller random access memory fault after controller powerup. The controller may require replacement.


- **Manual Transfer.** Manual transfer is needed when the automatic/manual selector switch, if equipped, is in the Manual position. Push the Manual Transfer to Normal, Manual Transfer to Emergency, or Manual Transfer to Off pushbutton to initiate transfer.
- **Fault #1, Fault #2.** Displays system faults external to the ATS controller. Connection of the two fault-sensing circuits is optional and may be used to annunciate generator set conditions.
- **Program Switch.** The position (Remote, Off, or Local) of the programming mode switch on the transfer switch front panel.
- **Test Switch.** The position (Auto or Not in Auto) of the test/operation mode switch and/or the automatic/manual switch.

Note: This data window does not show the source of the engine-start signal, i.e., plant exerciser, a remote-start contact, or engine start signal from the local panel or remote computer.

Note: In setup mode, this data window allows the operator to start and run a generator set that is not within sight of the operator. Use extreme care when using this feature to prevent unintended starting of the generator set or unexpected transfer of power.

6.3.2 Exercising the Generator Set

WARNING



Accidental starting. Can cause severe injury or death.

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.

In setup mode the ATS Status data window allows the operator to exercise the generator set that is connected to the ATS engine start contacts. The ATS must have a plant exerciser accessory installed to access the data window setup.

Note: In setup mode, this data menu allows the software operator to start and run a generator set in a location that is not within sight of the operator. Use extreme care when using this feature to prevent unintended starting of the generator set.

Select the ATS Status window and then select Data Window→Setup.

- **Run Time.** Displays the generator set run time. Enter a new generator set run time in the setup column.
- **Load Transfer.** Click the Yes radio button to run the generator set loaded (the ATS transfers the load to the emergency source) during the generator set run.
- **BP TDNE.** Click the Yes radio button to bypass Time Delay Normal to Emergency (TDNE) during the generator set run.

- **BP TDEN.** Click the Yes radio button to bypass Time Delay Emergency to Normal (TDEN) during the generator set run.
- **Plant Exerciser.** Displays Enabled if the plant exerciser accessory is installed, Disabled if it is not installed.
- **Plant Exerciser Load/No Load.** Displays Load if the plant exerciser option runs the generator set loaded (the ATS transfers the load to the emergency source). Displays No Load if the plant exerciser option runs the generator set unloaded (the ATS does not transfer the load to the emergency source).
- **Generator Running.** Displays Yes if the ATS engine start contact is closed, signaling the generator set to run, No if the ATS engine start contact is open.

Click the Ok button to start the generator set.

Note: Click the Stop Engine button to stop the generator set before the run time elapses.

Engine start setup settings return to 00:00/No after the generator set run time elapses or the generator set stops.

6.4 Load Shed

This data window displays load shed settings. The Normal column displays load shed settings for transfer to the normal source. The Emergency column displays load shed settings for transfer to the emergency source.

Change the load shed settings in setup mode.

Load Shed Setup Procedure

1. Select the Load Shed data window.
2. Select Data Window→Setup or right click in the data window and choose Setup.
3. Enter the values for time before and after, time sequence, and load returns in the corresponding boxes. The values entered must fall within the limits shown to the right of each item. Refer to the controller operation and installation manual for more information about load shed settings.
4. Click on OK to apply the changes or Cancel to discard them and return to the previous settings.

Relays on the transfer switch controller provide load return signals to separate load control relays and circuit breakers.

6.5 Source History

This data window displays the cause, type, and date of the four most recent source failures. A manual test at the transfer switch is recorded as a source failure.

The following fault messages are displayed for a three-phase electrical system:

- Phase A-B Normal Overvoltage
- Phase B-C Normal Overvoltage
- Phase C-A Normal Overvoltage
- Phase A-B Normal Undervoltage
- Phase B-C Normal Undervoltage
- Phase C-A Normal Undervoltage
- Normal Overfrequency
- Normal Underfrequency
- Normal Phase Loss
- Phase A-B Emergency Overvoltage
- Phase B-C Emergency Overvoltage
- Phase C-A Emergency Overvoltage
- Phase A-B Emergency Undervoltage
- Phase B-C Emergency Undervoltage
- Phase C-A Emergency Undervoltage

The following fault messages are displayed for a single-phase electrical system:

- Emergency Overfrequency
- Emergency Underfrequency
- Emergency Phase Loss
- Normal Overvoltage
- Normal Undervoltage
- Normal Overfrequency
- Normal Underfrequency
- Emergency Overvoltage
- Emergency Undervoltage
- Emergency Overfrequency
- Emergency Underfrequency

6.6 Trip Points

This data window displays normal and emergency source pickup and dropout points as percentages of system voltage and frequency. Change the trip point settings in setup mode.

Note: Normal and Emergency Over/Under Voltage and Frequency (accessory 34-J) near the bottom of the data window must show ENABLED in order to enter optional settings. See the controller operation and installation manual for more information.

Trip Point Setup Procedure

1. Select the Trip Point data window.
2. Select Data Window→Setup or right click in the data window and choose Setup.
3. Enter the values for the pickup and dropout settings in the corresponding boxes. The values entered must fall within the limits shown to the right of each item. Refer to the controller operation and installation manual for more information about trip point settings.

Note: Set over trip points higher than under trip points. Maintain at least a 2% difference between dropout and pickup settings.

4. Click on OK to apply the changes or Cancel to discard them and return to the previous settings.

6.7 M340 and M340+ ATS Controller Item Locations

Use the following table to find the data window locations of individual items.

Item	Data Window
Address	ATS Information
Amperage	ATS Information
ATS SN	ATS Information
ATS Type	ATS Information
Auto/Manual Transfer	Transfer Status
BP TDEN	ATS Status (Setup Mode)
BP TDNE	ATS Status (Setup Mode)
Branch	ATS Information
Change Mode	Exerciser Setup
Control	ATS Information
Date	Time and Date
Day	Time and Date
Day of Week	Exerciser Setup
Days-Operation	Operational Summary
Designation	ATS Information
Duration of Outage	Transfer Status
Emergency Frequency	Emergency Frequency
Emergency to Normal (TDEN)	Time Delays Time Delays Status
Emergency Voltage	Emergency Voltage
Engine Cooldown (TDEC)	Time Delays Status Time Delays
Engine Start (TDES)	Time Delays
Exercise Event	Exerciser Setup
Exercise Time Left	Transfer Status
Extended Time Delay	Time Delays Load Shed Time Delays Status
First Day of Week	Exerciser Setup
First Occurrence	Exerciser Setup
Generator Running	ATS Status (Setup Mode)
Hours-Emer. Source	Operational Summary
Hours-Not in Normal	Operational Summary
Inphase Monitor	Features
Last Exerciser Date	Transfer Status
Last Outage	Transfer Status
Limits	ATS Information
List of Installed Accessories	Accessories
Load	ATS Information
Load Returns	Load Shed
Load Transfer	ATS Status (Setup Mode) Exerciser Setup
Location	ATS Information
Manual Override	Features
N/E Over/Under V&F	Features
Normal Frequency	Normal Frequency
Phase Sequence	Features

Item	Data Window
Plant Exerciser	Features
Time Delay Extended	Features
Time Delay Off (M340+ only)	Features
Normal to Emergency (TDNE)	Time Delays Time Delays Status
Normal Voltage	Normal Voltage
Off to Emergency (TDOE)	Time Delays Status Time Delays
Off to Normal (TDON)	Time Delays Status Time Delays
Options	ATS Information
Overfreq Dropout	Trip Points
Overfreq Pickup	Trip Points
Overvolt Dropout	Trip Points
Overvolt Pickup	Trip Points
Phase Sequence	Phase Sequence
Plant Exerciser	ATS Status (Setup Mode)
Plant Exerciser Load/No Load	ATS Status (Setup Mode)
Poles	ATS Information
Program Switch	ATS Status
Run Time	ATS Status (Setup Mode)
Run Time HR:MN	Exerciser Setup
Second Day of Week	Exerciser Setup
Second Occurrence	Exerciser Setup
Single/Three Phase	ATS Information
Source Available	ATS Status
Source History	Source History
Start Date	Operational Summary
Start Time	Exerciser Setup
Stop Plant exercise	Exerciser Setup
Switch Position	ATS Status
Switch Transfers	Operational Summary
System Alert	ATS Status
System Frequency	ATS Information
System Voltage	ATS Information
Test Switch	ATS Status
Time	Time and Date
Time After	Load Shed
Time Before	Load Shed
Time sequence	Load Shed
Underfreq Dropout	Trip Points
Underfreq Pickup	Trip Points
Undervolt Dropout	Trip Points
Undervolt Pickup	Trip Points
Week 1 or 2	Exerciser Setup

Section 7 Power Monitor

7.1 Introduction

This section explains data window information available for power monitors. Refer to the power monitor operation and installation manual for more information about power monitor operation and recommended settings. See the List of Related Materials in the Introduction of this manual.

7.2 Data Windows

The following table lists and describes the items found in each data window. A checkmark (✓) in the Setup column indicates a user-programmable setting. Enter the setup mode to program new settings by selecting Data Window→Setup or by right-clicking on the data window and selecting Setup. An asterisk (*) indicates that the data window or item displays information for both the normal and emergency sources. More detailed information for some of the items is included in the sections after the table.

Data Window	Setup	Item	Item Description
Analog DC Inputs		Analog Input 1	Analog auxiliary DC input 1.
		Analog Input 2	Analog auxiliary DC input 2.
		Power Supply	The power monitor's internal DC power supply voltage.
Frequency		Frequency	The sensed power source frequency in hertz (Hz.)
Line Current		Line Current	The sensed current in amperes through lines L1, L2, and L3.
Line-Line Voltage		Line-Line Voltage	The sensed AC line-line rms voltage on each phase L1-L2, L2-L3, and L3-L1.
Line-Neutral Voltage		Line-Neutral Voltage	The AC line-neutral rms voltage on each phase L1-L0, L2-L0, and L3-L0.
Operational Summary		Operational Summary	The time (hours) in each transfer switch position (Normal, Off, and Emergency) according to contact information from the transfer switch connected to the power monitor.
Power Factor and Total kW		Power Factor	The power factor of the load.
		Total Kilovars	The total load in thousands of volt-amperes-reactive (kVAR).
		Total Kilowatts	The total load in kilowatts (kW).
Power Monitor Info	✓	Analog input 1-2	The present name for each analog auxiliary input. Enter a description of up to 20 characters in the setup mode. The new name appears in menus and screens instead of the default Analog Auxiliary 1 or Analog Auxiliary 2.
		ATS Rating	The transfer switch power switching device current rating, which is normally set at installation.
		Control Serial	The transfer switch controller serial number, which is normally set at installation.
		Designation	An optional unique name that identifies the device and appears on the device list at each address for network connections and on all data windows when the Monitor II software is connected to the device. Enter a description of up to 9 characters in setup mode. Note: The Monitor II software does not display the new designation until all devices are scanned after the operator selects a new screen.
		Load	An optional description of the connected load, such as total building, HVAC, or motors. Enter a description of up to 20 characters in setup mode.
		Location	An optional description of the power monitor's location. Enter a description of up to 20 characters in setup mode.
		Model No.	The model number of the transfer switch, 26 characters, which is normally set at installation.

Data Window	Setup	Item	Item Description
Power Monitor Info, continued	✔	Network Address	Displays the network address of the unit. Set at the local display and keypad.
		Single/Three Phase	Electrical system type, 1-phase for single-phase, 3-phase Wye for three-phase wye, or 3-phase Del for three-phase delta. This setting is normally set at installation.
		Serial No.	The transfer switch serial number, which is normally set at installation.
		Spec No.	The specification number for the transfer switch, 16 characters, which is normally set at installation.
		System Frequency	The monitored system frequency, which is normally set at installation.
		System Voltage	The monitored system voltage, which is normally set at installation.
Status		Contactor Position	Displays the transfer switch position as Normal, Off, Emergency, or Undefined according to contact information from the transfer switch connected to the power monitor.
		Program Mode	Displays the present programming mode: Local, Off, or Remote.
		System Alert	Displays the operating mode of the unit. See Section 7.3 for a list of displayed messages. See the power monitor operation and installation manual for more information.
Status (Setup Mode) See Section 7.3	✔	Manual Test	Click the radio button to select a manual test.
		Run Time	Displays the timed test run time.
		Timed Test	Click the radio button to select a timed test. Enter a run time for the timed test.
System History		System History	Displays a history of the four most recent auxiliary warnings or ATS tests and the date on which they occurred.
Time and Date See Section 7.4	✔	Date	The date at the power monitor's location. The format is Month/Day/Year.
		Day	The day of week calculated by the power monitor from the date.
		Time	The time at the power monitor's location. The format is Hour/Minute AM/PM.
Time Delays	✔	Auxiliary 1-6, Names	Displays the names of auxiliary warning contact inputs 1-6 in the left part of the screen under the Present column. Change the names in the Setup column, 20 character limit.
		Auxiliary 1-6, Time Delays	Displays the time delays in minutes:seconds for auxiliary warning inputs 1-6 on the right part of the screen under the Present column. Change the time delays in the Setup column.

7.3 Status

This data window displays power monitor status information. See Section 7.2 for a list of items included in the Status window and then read this section for more information.

7.3.1 System Alert Messages

This data window displays the following system alert messages. See the power monitor operation and installation manual for more information.

Auxiliary 1-6. A system warning condition exists and is caused by auxiliary warning contact input 1-6.


Test Mode Active. The power monitor ATS test mode is active.

Internal Error. The power monitor has detected an internal memory error.

System Ready. No system warning condition is present.

Power-down Error. The power monitor has detected a power down error.

7.3.2 Manual Test

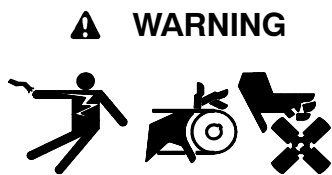

**Accidental starting.
Can cause severe injury or death.**

Disconnect the battery cables before working on the generator set. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the generator set. Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generator set as follows: (1) Move the generator set master switch to the OFF position. (2) Disconnect the power to the battery charger. (3) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent starting of the generator set by an automatic transfer switch, remote start/stop switch, or engine start command from a remote computer.

In setup mode the power monitor status data window allows the operator to manually test the transfer switch through a remote contact. Select the Status data window and then select Data Window→Setup.

Note: In setup mode, this data window allows the software to operate a transfer switch and possibly start and run a generator set in a remote location that is not within sight of the operator. Use extreme care when using this feature to prevent unintended starting of the generator set or unexpected transfer of power.

- **Manual Test.** Click the radio button to select a manual test.
- **Timed Test.** Click the radio button to select a timed test. Enter a run time for the timed test.
- **Run Time.** Displays the timed test run time.

Click the Ok button to start the ATS test mode.

Note: Click the Stop Test Mode button to stop the test.

7.4 Time and Date

This data window displays power monitor time and date information.

Note: If the power monitor is located in a different time zone than the PC, enter the time and date to match the time zone at the power monitor's location.

In setup mode enter a new time and date. Click AM/PM to change AM/PM. Click on the System Clock button to set the time and date from the PC's system clock. The time and date will require adjustment if the power monitor is in a time zone different from that of the PC.

7.5 Time Delays

This data window displays power monitor time delay information.

Auxiliary 1-6, Names. Displays the names of auxiliary warning contact inputs 1-6 in the left part of the screen under the Present column. Change the names in the Setup column, 20 character limit.

Auxiliary 1-6, Time Delays. Displays the time delays in minutes:seconds for auxiliary warning inputs 1-6 on the right part of the screen under the Present column. Change the time delays in the Setup column.

7.6 Item Locations

Use the following table to find the data window locations of individual items.

Item	Data Window
Analog Input 1	Analog DC Inputs
Analog input 1-2	Power Monitor Info
Analog Input 2	Analog DC Inputs
ATS Rating	Power Monitor Info
Auxiliary 1-6, Names	Time Delays
Auxiliary 1-6, Time Delays	Time Delays
Contactors position	Status
Control Serial	Power Monitor Info
Date	Time and Date
Day	Time and Date
Designation	Power Monitor Info
Frequency	Frequency
Line current	Line Current
Line-Line Voltage	Line-Line Voltage
Line-Neutral Voltage	Line-Neutral Voltage
Load	Power Monitor Info
Location	Power Monitor Info
Manual Test	Status (Setup Mode)
Model No.	Power Monitor Info
Network Address	Power Monitor Info
Operational Summary	Operational Summary
Power Factor	Power Factor and Total kW
Power Supply	Analog DC Inputs
Program mode	Status
Run Time	Status (Setup Mode)
Serial No.	Power Monitor Info
Single/Three phase	Power Monitor Info
Spec no.	Power Monitor Info
System Alert	Status
System Frequency	Power Monitor Info
System History	System History
System Voltage	Power Monitor Info
Time	Time and Date
Timed Test	Status (Setup Mode)
Total Kilovars	Power Factor and Total kW
Total Kilowatts	Power Factor and Total kW

Appendix A Abbreviations

The following list contains abbreviations that may appear in this publication.

A, amp	ampere	CG	center of gravity	fglass.	fiberglass
ABDC	after bottom dead center	CID	cubic inch displacement	FHM	flat head machine (screw)
AC	alternating current	CL	centerline	fl. oz.	fluid ounce
A/D	analog to digital	cm	centimeter	flex.	flexible
ADC	analog to digital converter	CMOS	complementary metal oxide substrate (semiconductor)	freq.	frequency
adj.	adjust, adjustment			FS	full scale
ADV	advertising dimensional drawing	cogen.	cogeneration	ft.	foot, feet
AHWT	anticipatory high water temperature	Com	communications (port)	ft. lbs.	foot pounds (torque)
AISI	American Iron and Steel Institute	conn.	connection	ft./min.	feet per minute
ALOP	anticipatory low oil pressure	cont.	continued	g	gram
alt.	alternator	CPVC	chlorinated polyvinyl chloride	ga.	gauge (meters, wire size)
Al	aluminum	crit.	critical	gal.	gallon
ANSI	American National Standards Institute (formerly American Standards Association, ASA)	CRT	cathode ray tube	gen.	generator
AO	anticipatory only	CSA	Canadian Standards Association	genset	generator set
API	American Petroleum Institute	CT	current transformer	GFI	ground fault interrupter
approx.	approximate, approximately	Cu	copper	GND, ⊕	ground
AR	as required, as requested	cu. in.	cubic inch	gov.	governor
AS	as supplied, as stated, as suggested	cw.	clockwise	gph	gallons per hour
ASE	American Society of Engineers	CWC	city water-cooled	gpm	gallons per minute
ASME	American Society of Mechanical Engineers	cyl.	cylinder	gr.	grade, gross
assy.	assembly	D/A	digital to analog	GRD	equipment ground
ASTM	American Society for Testing Materials	DAC	digital to analog converter	gr. wt.	gross weight
ATDC	after top dead center	dB	decibel	H x W x D	height by width by depth
ATS	automatic transfer switch	dBA	decibel (A weighted)	HC	hex cap
auto.	automatic	DC	direct current	HCHT	high cylinder head temperature
aux.	auxiliary	DCR	direct current resistance	HD	heavy duty
A/V	audiovisual	deg., °	degree	HET	high exhaust temperature
avg.	average	dept.	department	hex	hexagon
AVR	automatic voltage regulator	dia.	diameter	Hg	mercury (element)
AWG	American Wire Gauge	DI/EO	dual inlet/end outlet	HH	hex head
AWM	appliance wiring material	DIN	Deutsches Institut für Normung e. V. (also Deutsche Industrie Normenausschuss)	HHC	hex head cap
bat.	battery	DIP	dual inline package	HP	horsepower
BBDC	before bottom dead center	DPDT	double-pole, double-throw	hr.	hour
BC	battery charger, battery charging	DPST	double-pole, single-throw	HS	heat shrink
BCA	battery charging alternator	DS	disconnect switch	hsg.	housing
BCI	Battery Council International	DVR	digital voltage regulator	HVAC	heating, ventilation, and air conditioning
BDC	before dead center	E, emer.	emergency (power source)	HWT	high water temperature
BHP	brake horsepower	EDI	electronic data interchange	Hz	hertz (cycles per second)
blk.	black (paint color), block (engine)	EFR	emergency frequency relay	IC	integrated circuit
blk. htr.	block heater	e.g.	for example (<i>exempli gratia</i>)	ID	inside diameter, identification
BMEP	brake mean effective pressure	EG	electric governor	IEC	International Electrotechnical Commission
bps	bits per second	EGSA	Electrical Generating Systems Association	IEEE	Institute of Electrical and Electronics Engineers
br.	brass	EIA	Electronic Industries Association	IMS	improved motor starting
BTDC	before top dead center	EI/EO	end inlet/end outlet	in.	inch
Btu	British thermal unit	EMI	electromagnetic interference	in. H ₂ O	inches of water
Btu/min.	British thermal units per minute	emiss.	emission	in. Hg	inches of mercury
C	Celsius, centigrade	eng.	engine	in. lbs.	inch pounds
cal.	calorie	EPA	Environmental Protection Agency	Inc.	incorporated
CARB	California Air Resources Board	ER	emergency relay	ind.	industrial
CB	circuit breaker	ES	engineering special, engineered special	int.	internal
cc	cubic centimeter	ESD	electrostatic discharge	int./ext.	internal/external
CCA	cold cranking amps	est.	estimated	I/O	input/output
ccw.	counterclockwise	E-Stop	emergency stop	IP	iron pipe
CEC	Canadian Electrical Code	etc.	et cetera (and so forth)	ISO	International Organization for Standardization
cfh	cubic feet per hour	exh.	exhaust	J	joule
cfm	cubic feet per minute	ext.	external	JIS	Japanese Industry Standard
		F	Fahrenheit, female	k	kilo (1000)
				K	kelvin
				kA	kiloampere
				KB	kilobyte (2 ¹⁰ bytes)

kg	kilogram	MW	megawatt	rms	root mean square
kg/cm ²	kilograms per square centimeter	mW	milliwatt	rnd.	round
kgm	kilogram-meter	μF	microfarad	ROM	read only memory
kg/m ³	kilograms per cubic meter	N, norm.	normal (power source)	rot.	rotate, rotating
kHz	kilohertz	NA	not available, not applicable	rpm	revolutions per minute
kJ	kilojoule	nat. gas	natural gas	RS	right side
km	kilometer	NBS	National Bureau of Standards	RTV	room temperature vulcanization
kOhm, kΩ	kilo-ohm	NC	normally closed	SAE	Society of Automotive Engineers
kPa	kilopascal	NEC	National Electrical Code	scfm	standard cubic feet per minute
kph	kilometers per hour	NEMA	National Electrical Manufacturers Association	SCR	silicon controlled rectifier
kV	kilovolt	NFPA	National Fire Protection Association	s, sec.	second
kVA	kilovolt ampere	Nm	newton meter	SI	<i>Système international d'unites</i> , International System of Units
kVAR	kilovolt ampere reactive	NO	normally open	SI/EO	side in/end out
kW	kilowatt	no., nos.	number, numbers	sil.	silencer
kWh	kilowatt-hour	NPS	National Pipe, Straight	SN	serial number
kWm	kilowatt mechanical	NPSC	National Pipe, Straight-coupling	SPDT	single-pole, double-throw
L	liter	NPT	National Standard taper pipe thread per general use	SPST	single-pole, single-throw
LAN	local area network	NPTF	National Pipe, Taper-Fine	spec, specs	specification(s)
L x W x H	length by width by height	NR	not required, normal relay	sq.	square
lb.	pound, pounds	ns	nanosecond	sq. cm	square centimeter
lbm/ft ³	pounds mass per cubic feet	OC	overcrank	sq. in.	square inch
LCB	line circuit breaker	OD	outside diameter	SS	stainless steel
LCD	liquid crystal display	OEM	original equipment manufacturer	std.	standard
ld. shd.	load shed	OF	overfrequency	stl.	steel
LED	light emitting diode	opt.	option, optional	tach.	tachometer
Lph	liters per hour	OS	oversize, overspeed	TD	time delay
Lpm	liters per minute	OSHA	Occupational Safety and Health Administration	TDC	top dead center
LOP	low oil pressure	OV	overvoltage	TDEC	time delay engine cooldown
LP	liquefied petroleum	oz.	ounce	TDEN	time delay emergency to normal
LPG	liquefied petroleum gas	p., pp.	page, pages	TDES	time delay engine start
LS	left side	PC	personal computer	TDNE	time delay normal to emergency
L _{wa}	sound power level, A weighted	PCB	printed circuit board	TDOE	time delay off to emergency
LWL	low water level	pF	picofarad	TDON	time delay off to normal
LWT	low water temperature	PF	power factor	temp.	temperature
m	meter, milli (1/1000)	ph., ∅	phase	term.	terminal
M	mega (10 ⁶ when used with SI units), male	PHC	Phillips head crimptite (screw)	TIF	telephone influence factor
m ³	cubic meter	PHH	Phillips hex head (screw)	TIR	total indicator reading
m ³ /min.	cubic meters per minute	PHM	pan head machine (screw)	tol.	tolerance
mA	milliampere	PLC	programmable logic control	turbo.	turbocharger
man.	manual	PMG	permanent-magnet generator	typ.	typical (same in multiple locations)
max.	maximum	pot	potentiometer, potential	UF	underfrequency
MB	megabyte (2 ²⁰ bytes)	ppm	parts per million	UHF	ultrahigh frequency
MCM	one thousand circular mils	PROM	programmable read-only memory	UL	Underwriter's Laboratories, Inc.
MCCB	molded-case circuit breaker	psi	pounds per square inch	UNC	unified coarse thread (was NC)
meggar	megohmmeter	pt.	pint	UNF	unified fine thread (was NF)
MHz	megahertz	PTC	positive temperature coefficient	univ.	universal
mi.	mile	PTO	power takeoff	US	undersize, underspeed
mil	one one-thousandth of an inch	PVC	polyvinyl chloride	UV	ultraviolet, undervoltage
min.	minimum, minute	qt.	quart	V	volt
misc.	miscellaneous	qty.	quantity	VAC	volts alternating current
MJ	megajoule	R	replacement (emergency) power source	VAR	voltampere reactive
mJ	millijoule	rad.	radiator, radius	VDC	volts direct current
mm	millimeter	RAM	random access memory	VFD	vacuum fluorescent display
mOhm, mΩ	milliohm	RDO	relay driver output	VGA	video graphics adapter
MOhm, MΩ	megohm	ref.	reference	VHF	very high frequency
MOV	metal oxide varistor	rem.	remote	W	watt
MPa	megapascal	RFI	radio frequency interference	WCR	withstand and closing rating
mpg	miles per gallon	RH	round head	w/	with
mph	miles per hour	RHM	round head machine (screw)	w/o	without
MS	military standard	rly.	relay	wt.	weight
m/sec.	meters per second			xfrm	transformer
MTBF	mean time between failure				
MTBO	mean time between overhauls				
mtg.	mounting				

Appendix B Pull-Down Menus and Toolbars

The Monitor II software uses tools that are familiar to most Windows® program users. This Appendix explains how to work with pull-down menus, toolbars, and Windows® keystrokes in the Monitor II software.

The Monitor II main menu displays a list of named pull-down menus and a toolbar with shortcuts for commonly used functions at the top of the screen. See Figure 1. The bottom part of the screen is the data window display area.



Figure 1 Main Menu Screen

Pull-Down Menus

Pull-down menus are displayed at the top of the main menu screen. See Figure 2.



Figure 2 Pull-down Menu

Click on the following pull-down menus at the top of the main screen to see a list of available options. Click on the option to select it. Options that are not available in the current application are displayed in a lighter color and cannot be selected.

Screen

The Screen menu contains the following options:

New Screen. Select to create a new screen of user-defined data windows.

Clear Screen. Select to clear the screen of all data windows.

Open Screen. Select to open a previously saved screen with a set of data windows.

Save Screen. Select to save the screen configuration.

Save Screen As. Select to save the screen as a screen (.km2) or template (.tem) file, or to rename it.

Print Screen. Select to print information from all data windows on the current screen.

Exit Select to exit the Monitor II software.

The screen menu also lists the filenames for the last four opened or saved screens. Select the filename to open the screen with the specified filename.

Data Window

The Data Window menu contains the following options:

Add Window. Select to add a new data window to the screen.

Device. Select to change the address of data windows. Select an address from a list of valid devices.

- **Change Address of Current.** Select to change the address of the selected data window.
- **Change Address of All.** Select to change the address of all data windows on the screen.

Display. Select to choose between analog and digital displays and scaling of analog displays on data windows that offer the choice.

- **Digital.** Select to change to a digital display.
- **Analog** Select to change to an analog (meter) display.
- **Scaling.** Select to adjust the scaling of an analog display.

Cut. Select to cut the selected data window to the clipboard.

Copy. Select to copy the current data window to the clipboard.

Paste. Select to paste a data window from the clipboard to the screen.

Setup. Select to download programmable data from a device, change data on the screen, and update the device with new data.

Delete. Select to delete the selected data window from the screen.

Options

The Options menu contains the following options:

Align. Select to align all data windows on an X-Y axis grid. Use the Preferences→Align Setting option to change the grid spacing.

Preferences. Select various options.

- **Align Setting.** Select to adjust the grid spacing for data window alignment. Units are in multiples of 100 twips from 100 to 1000. To change, click on the dimension in the dropdown box and press ok. One hundred twips equal 5 printer's points or approximately 1.8 mm (0.07 in.)
- **English.** Select to display measurements in English units.
- **Metric.** Select to display measurements in metric units.

Load Screen on Startup. Check this option to save the current screen and automatically open it the next time the software is started.

Configure Mode. If this option is checked, the software is in the configuration mode. Build a set of data windows without a physical connection in configuration mode. See Section 2.4.

Edit Device List. Select to edit the Device List when in the configuration mode.

Retrieve Setup. Select to download controller settings to a file which can be used to restore controller settings with Restore Setup. See Section 2.9.

Restore Setup. Select to upload settings to the controller from a file previously saved with Retrieve Setup. See Section 2.9.

Help

The Help menu contains the following options:

Help. Select to access online help.

About. Select to display software version information.

Toolbar Functions

Toolbar functions are displayed at the top of the main screen below the pull-down menus. They provide a quicker alternative to using the pull-down menus for some functions. See Figure 3.
















Figure 3 Toolbar Functions

The following toolbar functions are described in the order that they appear on the screen from left to right. Click on the function to select it.

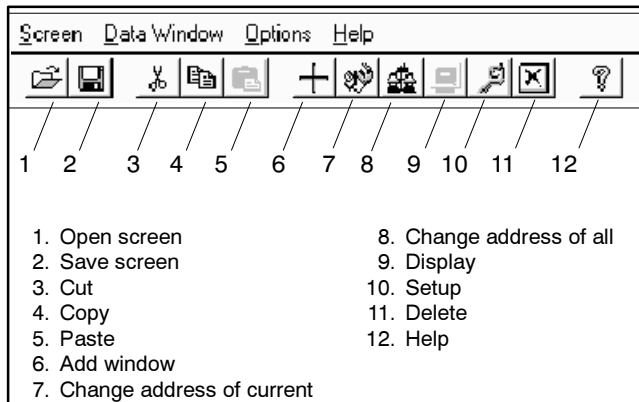-  **Open Screen.** Select to open a screen.
-  **Save Screen.** Select to save the current screen.
-  **Cut.** Select to cut the selected data window from the screen to the clipboard.
-  **Copy.** Select to copy the selected data window from the screen to the clipboard.
-  **Paste.** Select to paste a data window previously cut or copied to the clipboard to the screen.
-  **Add Window.** Select to add a new data window to the screen.
-  **Change Address of Current.** Select to change the address of the selected data window.
-  **Change Address of All.** Select to change the address of all data windows on the screen.
-  **Display.** Select to switch between digital and analog display modes if available on the selected data window.

 **Setup.** Select to enter the setup mode, if available, for the selected data window.

 **Delete.** Select to delete the selected data window from the screen.

 **Help.** Select to access online help.

Shortcuts (Right-Clicking)






If the computer's mouse has 2 or more buttons, it can be set up to display the Data Window menu when the right mouse button is pressed. In the computer's control panel (select Start→Settings→Control Panel), select Mouse and then Buttons. Assign the right button to Alternate Select.

Note: Changing the mouse button assignments will affect the mouse operation for any other applications installed on the computer.

Positioning the cursor on a data window or in the data display area and pressing the right mouse button ("right-clicking") opens a shortcut window on the screen. The window contains all of the items available in the Data Window pulldown menu. Options that are not available in the current application are displayed in a lighter color and cannot be selected.

Windows Keystrokes

The following Windows® keystrokes are available in the Monitor II software.

-  Displays context-sensitive help for the current operation.
-  Cuts the selected data window to the clipboard.
-  Copies the selected data window to the clipboard.
-  Pastes a data window previously cut or copied to the clipboard to the screen.
-  Deletes the selected data window.

TP-5972 4/01d

© 1999, 2001 by Kohler Co. All rights reserved.

KOHLER[®] POWER SYSTEMS

KOHLER CO. Kohler, Wisconsin 53044
Phone 920-565-3381, Web site www.kohlergenerators.com
Fax 920-459-1646 (U.S.A. Sales), Fax 920-459-1614 (International)
For the nearest sales and service outlet in U.S.A. and Canada
Phone 1-800-544-2444

Kohler Power Systems
Asia Pacific Headquarters
7 Jurong Pier Road
Singapore 619159
Phone (65)264-6422, Fax (65)264-6455